



FSMC – Flexible static memory controller

- FSMC_NWE – write enable
- FSMC_NOE – output enable
- FSMC_NE1 – enable
- FSMC_INT3 – interrupt