



HEWLETT
PACKARD

Service Manual
**240 VOLT
ELECTRONIC LOAD MODULE
HP Model 60503B**

HP Part No 60503-90009

**SERVICE MANUAL
FOR INSTRUMENTS WITH SERIAL NUMBERS
3119A-00101 TO 00245
3212A-00246 AND ABOVE**

**For instruments with higher Serial Numbers
a change page may be included.**

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard hardware product is warranted against defects in material and workmanship for a period of three years from date of delivery. HP software and firmware products, which are designated by HP for use with a hardware product and when properly installed on that hardware product, are warranted not to fail to execute their programming instructions due to defects in material and workmanship for a period of 90 days from date of delivery. During the warranty period Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective. HP does not warrant that the operation for the software firmware, or hardware shall be uninterrupted or error free.

For warranty service, with the exception of warranty options, this product must be returned to a service facility designated by HP. Customer shall prepay shipping charges by (and shall pay all duty and taxes) for products returned to HP for warranty service. Except for products returned to Customer from another country, HP shall pay for return of products to Customer.

Warranty services outside the country of initial purchase are included in HP's product price, only if Customer pays HP international prices (defined as destination local currency price, or U.S. or Geneva Export price).

If HP is unable, within a reasonable time to repair or replace any product to condition as warranted, the Customer shall be entitled to a refund of the purchase price upon return of the product to HP.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by the Customer, Customer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation and maintenance. NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE THE CUSTOMER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

The above statements apply only to the standard product warranty. Warranty options, extended support contracts, product maintenance agreements and customer assistance agreements are also available. Contact your nearest Hewlett-Packard Sales and Service office for further information on HP's full line of Support Programs.

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

BEFORE APPLYING POWER.

Verify that the product is set to match the available line voltage and the correct fuse is installed.

GROUND THE INSTRUMENT.

This product is a Safety Class 1 instrument (provided with a protective earth terminal). To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument must be connected to the ac power supply mains through a three-conductor power cable, with the third wire firmly connected to an electrical ground (safety ground) at the power outlet. For instruments designed to be hard-wired to the ac power lines (supply mains), connect the protective earth terminal to a protective conductor before any other connection is made. Any interruption of the protective (grounding) conductor or disconnection of the protective earth terminal will cause a potential shock hazard that could result in personal injury. If the instrument is to be energized via an external autotransformer for voltage reduction, be certain that the autotransformer common terminal is connected to the neutral (earthed pole) of the ac power lines (supply mains).

FUSES

Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short circuited fuseholders. To do so could cause a shock or fire hazard.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified service personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power, discharge circuits and remove external voltage sources before touching components.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT EXCEED INPUT RATINGS.

This instrument may be equipped with a line filter to reduce electromagnetic interference and must be connected to a properly grounded receptacle to minimize electric shock hazard. Operation at line voltages or frequencies in excess of those stated on the data plate may cause leakage currents in excess of 5.0 mA peak.

SAFETY SYMBOLS.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual (refer to Table of Contents).



Indicates hazardous voltages.



or



Indicate earth (ground) terminal.

WARNING

OR



The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

CAUTION

OR

Caution



The CAUTION sign denotes a hazard. It calls attention to an operating procedure, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

Instruments which appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

CONTENTS

Chapter 1 INTRODUCTION

ABOUT THIS MANUAL.....	1-1
TROUBLESHOOTING PRECAUTIONS.....	1-1
MANUAL REVISIONS.....	1-1
MODULE INITIALIZATION.....	1-2

Chapter 2 VERIFICATION

INTRODUCTION.....	2-1
TEST EQUIPMENT REQUIRED.....	2-1
CC MODE TEST.....	2-1
CV MODE TEST.....	2-2
CR MODE TEST.....	2-2
TRANSIENT OPERATION AND SLEW.....	2-3
CIRCUIT TEST.....	2-3
CC MODE PARD TEST.....	2-4
CC MODE POWER LIMIT.....	2-4
PERFORMANCE TEST RECORD.....	2-5

Chapter 3 REPLACEABLE PARTS

INTRODUCTION.....	3-1
HOW TO ORDER PARTS.....	3-1

Chapter 4 DIAGRAMS

SCHEMATIC DIAGRAMS.....	4-1
COMPONENT LOCATION DIAGRAMS.....	4-1
MANUAL BACKDATING.....	foldout

LIST OF TABLES

	Page
2-1 Test Equipment Required for Verification.....	2-1
3-1 Reference Designators.....	3-1
3-2 Part Description Abbreviations.....	3-1
3-3 HP 60503B Control Board Electrical Parts.....	3-2
3-4 HP 60503B Power Board Electrical Parts.....	3-6
3-5 HP 60503B Mechanical Parts.....	3-10
4-1 Schematic Notes.....	4-1
4-2 Signal Name Descriptions.....	4-2

LIST OF FIGURES

	Page
2-1 Test Setup A.....	2-2
2-2 Test Setup B.....	2-2
2-3 Test Setup C.....	2-4
4-1 Power Board Test Point and Component Locations.....	foldout
4-2 HP 60503B Power Board Schematic.....	foldout
4-3 Control Board Test Point and Component Locations.....	foldout
4-4 HP 60503B Control Board Schematic.....	foldout

Chapter 1

GENERAL INFORMATION

ABOUT THIS MANUAL

This manual is designed to be used along with the HP 6050A/6051A Service Manual. It includes service information that is specific to the 60503B Module. Troubleshooting information such as fault isolation, signature analysis, and block-level troubleshooting is the same for all modules and is found in the HP 6050A/6051A Electronic Load Mainframe Service Manual. The mainframe Service Manual also explains how to safely disassemble and connect the module to the mainframe for troubleshooting.

Typically, you will need to refer to this manual when you are performing the verification routines, locating a test point on the component/test point diagram, referring to the schematics for additional troubleshooting information, and initializing the module after replacing the EEPROM.

You will also need to refer to this manual for identifying and locating replaceable parts. The parts list identifies all replaceable parts in the module, and the component/test point diagram identifies the location of all electrical parts in your module.

TROUBLESHOOTING PRECAUTIONS

WARNING

Use extreme caution when troubleshooting the module when it is connected to the mainframe. AC mains voltage is present on the exposed pins on the top edge of the mainframe HP-IB board and each module whenever the units are turned on.

CAUTION

Observe all standard antistatic procedures when handling the module assemblies to avoid the possibility of electrostatic damage (refer to mainframe Service Manual).

60503B Initialization

```
"CAL 1"
"CAL:INIT 240,10
"CAL:SAVE"
"DIAG:CAL:SEC -5033"
"DIAG:CAL:SEC 1,16896"
"DIAG:CAL:SEC 26,1"
"DIAG:CAL:SEC 27,1"
"DIAG:CAL:SEC 28,5000"
"DIAG:CAL:SEC 29,5200"
"*RST"
"CURR:SLEW 0.167E6"
"*SAV 0"
"CAL 0"

! turn calibration mode on
! initialize default calibration parameters
! store calibration constants in EEPROM
! model number
! model number suffix
! module width
! module type
! voltage for soft over power
! current for soft over power
! reset factory default state
! turn on slew rate
! to location 0
! turn calibration mode off
```

To reduce the risk of electrical shock when troubleshooting a defective module, make sure the HP-IB board is installed in the mainframe. Also, to make it easier to troubleshoot the module, connect the module to the HP-IB board using an extender service cable (P/N 06050-60030). This cable is included with the Service kit (P/N 06050-60004), which must be ordered separately.

MANUAL REVISIONS

This manual was written for Electronic Load Modules with the same serial number prefix as the one shown on the title page of this manual (e.g. 3119A). If the prefix number of your module is higher than the one shown on the title page, then the module may have hardware or firmware differences that are not covered in this manual. If there are such differences, they are documented in one or more Manual Change sheets sent with this manual.

MODULE INITIALIZATION

EEPROM chip U342 on the Control Board stores the module's HP-IB address and model number as well as other constants. The EEPROM was programmed with the proper constants at the factory. If the Control board or the EEPROM chip (U342) is replaced, the module must be reinitialized with the proper constants by programming the following commands in the order indicated. After it has been initialized, the module must also be recalibrated as described in the Operating manual.

be between 0.997 V (9.975 A) and 1.0025 V (10.025 A). Note that the Electronic Load's CC annunciator is on.

4. Press **CURR** **1** **Enter** .
5. Wait 10 seconds then record the DMM and front panel display readings. DMM reading should be between 98.85 mV (0.988 A) and 101.15 mV (1.0115 A).
- d. Check the low current range as follows:
 1. Press **Range** **1** **Enter**
then
CURR **1** **Enter**
 2. Wait 10 seconds then record the DMM and front panel display readings. DMM reading should be between 98.85 mV (0.998 A) and 101.15 mV (1.011 A.)
 3. Press **CURR** **0** **.** **1** **Enter**
 4. Wait 10 seconds and record the DMM and front panel display readings. DMM reading should be between 8.985 mV (89.85 mA) and 11.015 mV (110.15 mA).

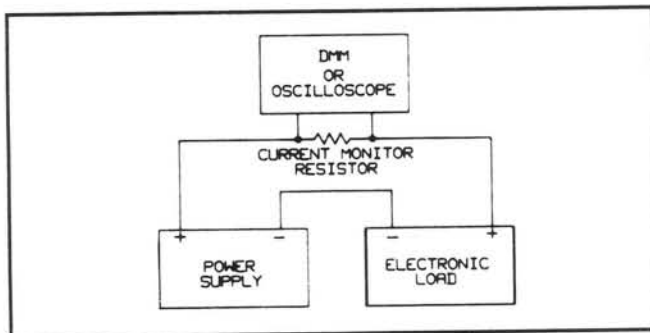


Figure 2-1. Test Setup A

CV MODE TEST

This test verifies that the module operates in the CV Mode and that the voltage programming and readback to the front panel display are within specifications. For each DMM reading, the corresponding front panel display should be equal to:

$$\text{DMM reading} \pm ((\text{DMM reading} \times 0.0010) + 0.150)$$

Note that if the test readings significantly disagree with the specified values or no readings can be recorded, perform the CV MODE TEST troubleshooting procedures in Figure 3-1 (sheet 2 of 3), in Chapter 3 of the mainframe Service Manual. If the readings are out of tolerance, calibrate the voltage range (see Chapter 6 in the Operating Manual).

- a. Connect the Electronic Load, power supply (HP 6030A in series with HP 6032A or equivalent), and DMM as shown in Figure 2-2. Take care in making connections so that contact resistance voltage drop will not affect the readings.
- b. Press **MODE** **VOLT** **Enter** ,
then
VOLT **2** **4** **0** **Enter** .

- c. Turn on and set power supply for 250 V and 1 A.
- d. Record the DMM and front panel display readings. DMM reading should be between 239.59 V and 240.408 V. Note that the Electronic Load's CV annunciator is on.
- e. Press **VOLT** **3** **Enter** .
- f. Record the DMM and front panel display readings. DMM reading should be between 2.876 V and 3.123 V.

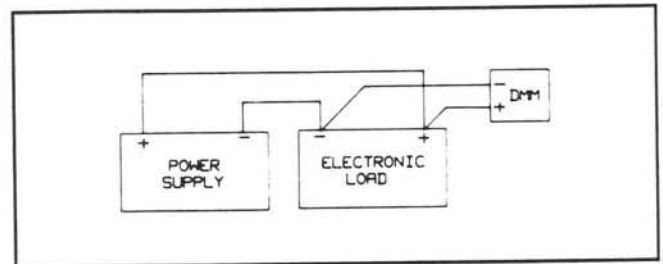


Figure 2-2. Test Setup B

CR MODE TEST

This test verifies that the module operates in the CR Mode and that the resistance programming is within specifications. The programmed resistance values are checked by recording the voltage across the current monitor resistor and the input voltage (voltage across the module's input terminals), and then calculating the resistance value as follows:

$$\text{Load resistance} = \text{Input voltage} / (\text{voltage across resistor} / \text{resistor value})$$

Note if the calculation significantly disagrees with the specified range of values, perform the CR MODE TEST troubleshooting procedures in Figure 3-1 (sheet 3 of 3) in Chapter 3 of the mainframe Service Manual. If the calculation is out of tolerance, calibrate the applicable resistance range (see Chapter 6 in the Operating Manual).

- a. Connect the Electronic Load, power supply (HP 6035A or equivalent), and current monitor resistor (0.100 ohm) as shown in Figure 2-1. Use the DMM to measure the voltage across the monitor resistor and across the module's input terminals.
- b. Check the low ohm range as follows:
 1. Press **MODE** **RES** **Enter** ,
then
Range **1** **Enter** ,
then
RES **2** **4** **Enter** .
 2. Turn on power source and set for 60 V and 1.82 A. For the low ohm range test, the power supply will operate in the current limit mode.


3. Measure the voltage across the monitor resistor and across the module's input terminals, then calculate the Electronic Load resistance. The result should be between 23.6 and 24.4 ohms. Note that the Electronic Load's CR annunciator is on.
 4. Press **RES** **1** **Enter** .
 5. Measure the voltage across the monitor resistor and across the module's input terminals, then calculate the Electronic Load resistance. The result should be between 0.792 and 1.208 ohms.
- c. Check the middle ohms range as follows:
1. Press **Range** **2** **5** **Enter** ,
then
RES **5** **0** **0** **Enter** .
 2. Set power supply for 44 V and 4 A.
 3. Measure the voltage across the monitor resistor and across the module's input terminals, then calculate the Electronic Load resistance. The result should be between 433 and 590 ohms.
 4. Press **RFS** **2** **4** **Enter** .
 5. Measure the voltage across the monitor resistor and across the module's input terminals, then calculate the Electronic Load resistance. The result should be between 23.75 and 24.24 ohms.
- d. Check the high ohms range as follows:
1. Press **Range** **2** **5** **0** **0** **Enter** ,
then
RES **2** **0** **0** **0** **Enter** .
 2. Set power source for 240 V and 2 A.
 3. Measure the voltage across the monitor resistor and across the module's input terminals, then calculate the Electronic Load resistance. The result should be between 1247 and 5037 ohms.
 4. Press **RES** **2** **4** **0** **Enter** .
 5. Measure the voltage across the monitor resistor and across the module's input terminals, then calculate the Electronic Load resistance. The result should be between 223 and 259 ohms.

TRANSIENT OPERATION AND SLEW CIRCUIT TEST

This test verifies transient and slew circuit operation. The slew circuits cannot be calibrated. If slew rise time and/or fall time are not within specifications or the slew circuits are inoperative, perform either the "Transient Generator Troubleshooting", or the "Slew Circuit Troubleshooting" in Chapter 3 of the Mainframe Service Manual.

- a. Use the test setup of Figure 2-1 except connect an oscilloscope across the 0.100 current monitor resistor in place of the DMM. Set power supply for 10 V and 10 A.
- b. Recall the factory default values by pressing **Recall** **7** **Enter** .

- c. Select the current range by pressing **Range** **6** **Enter** .
- d. Set up transient operation by pressing **CURR** **1** **Enter** ,
then
Tran Level **9** **.** **3** **Enter** .
- e. Set the slew rate to 0.083 A/ μ s (83 A/ms) by pressing **.** (blue shift key), then
Slew **.** **0** **8** **3** **Enter** ,
then **Tran on/off** .
- f. Adjust the oscilloscope for a single rise or fall time display. Use delayed sweep. The rise time when measured from 10% to 90% or the fall time when measured from 90% to 10% should be between 60 and 125 μ s as shown below. Note that the Electronic Load's Tran annunciator is on.

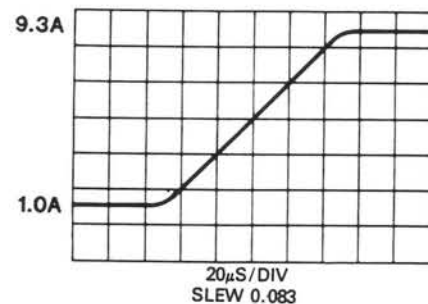

- g. Set the slew rate to 0.0042 A/ μ s (4.2 A/ms) by pressing **.** (blue shift key), then
Slew **.** **0** **4** **2** **Enter** , then
Tran Level **9** **.** **4** **Enter** .
Freq **6** **0** **Enter** .
- h. Adjust the oscilloscope for a single rise or fall time display. Use delayed sweep. The rise time when measured from 10% to 90% or the fall time when measured from 90% to 10% should be between 1.5 and 2.0 ms.

CC MODE PARD TEST

CC mode PARD (periodic and random deviations) is specified as the rms input current in a frequency range 20 Hz to 10 MHz. This test checks CC Mode PARD.

- a. Connect the Electronic Load, power supply (HP 6032A or equivalent), DMM, and current probe as shown in Figure 2-3. Set power supply for 10 V and greater than 10 A.
- b. Turn the load's ac power off then on.
- c. Press **CURR** **1** **0** **Enter** .
- d. DMM reading should be less than 1 mA rms.

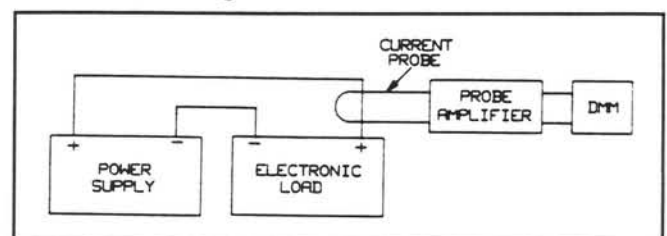


Figure 2-3. Test Setup C

CC MODE POWER LIMIT

This test verifies that the module's power limit circuit is operating properly. If the results specified in steps d through i are not obtained, troubleshoot the circuits as described in "Overpower Circuits Troubleshooting" in chapter 3 of the mainframe Service Manual.

CAUTION

If the overpower circuit does not turn the load off within three minutes after performing step d, stop the tests and troubleshoot the overpower circuits.

- a. Connect the Electronic Load and the power source as shown in Figure 2-2.
 - b. Turn on the Electronic Load and run for approximately five minutes with no power being dissipated (no input power).
 - c. Then press **MODE** **VOLT** **ENTER** , then **VOLT** **3** **5** **ENTER** .
 - d. Turn on and set the power supply for 45 volts and 13 amps.
- The Electronic Load's front panel should indicate approximately 45 volts and between 7.2 to 10.9 amps. The front panel Prot annunciator should also be on.
- e. Press **Meter** to display "-- OP", indicating that an overpower condition exists and the Electronic Load is in power limit.
 - f. Let the Electronic Load continue running. Within three minutes the Electronic Load should turn its input off, and the display should show "PS - OP" indicating protection shutdown. IF THE OVERPOWER CIRCUIT DOES NOT TURN THE LOAD OFF WITHIN THREE MINUTES, STOP THE TESTS AND TROUBLESHOOT THE OVERPOWER CIRCUITS.
 - g. Immediately press **Prot Clear** . The "PS" display should blink and the input will remain shut down, indicating that protection shutdown is latched.
 - h. Wait approximately one minute and press **Prot Clear** again. This time the load should turn on with only "OP" displayed.
 - i. Reduce the power source output to 35 volts. The display should change to "-- --" indicating that the protection shutdown and overpower conditions are cleared.

PERFORMANCE TEST RECORD — HP 60503B LOAD MODULE (Page 1 of 2)

Test Facility:

_____ Report No. _____
 _____ Date _____
 _____ Customer _____
 _____ Tested by _____

Model **HP 60503B** Ambient temperature _____ °C
 Serial No. _____ Relative humidity _____ %
 Options _____ Line frequency _____ Hz (nominal)
 Firmware Rev. _____

Special Notes:

Description	Test Equipment Used		
	Model No.	Trace No.	Cal. Due Date
1. AC Source	_____	_____	_____
2. DC Voltmeter	HP 3458A	_____	_____
3. Oscilloscope	HP 54504A	_____	_____
4. Power Source	HP 6035A	_____	_____
5. Power Source	HP 6032A	_____	_____
6. Current Probe	_____	_____	_____
7. Current Shunt	Guildline 9230/15	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

PERFORMANCE TEST RECORD — HP 60503B LOAD MODULE (Page 2 of 2)

Model	HP 60503B	Report No. _____	Date _____
-------	------------------	------------------	------------

Test Description	Minimum Specification	Results	Maximum Specification	Measurement Uncertainty
CONSTANT CURRENT MODE TESTS				
10 Ampere Range Programming and Readback				
High Current (10 A)	9.975	_____ A	10.025	4 mA
Front Panel Display	A _{OUT} -0.022	_____ A	A _{OUT} +0.022	4 mA
Low Current (1 A)	0.9885	_____ A	1.0115	427 μ A
Front Panel Display	A _{OUT} -0.011	_____ A	A _{OUT} +0.011	427 μ A
1 Ampere Range Programming and Readback				
High Current (1 A)	0.9885	_____ A	1.0115	427 μ A
Front Panel Display	A _{OUT} -0.011	_____ A	A _{OUT} +0.011	427 μ A
Low Current (0.1 A)	0.0899	_____ A	1.101	56 μ A
Front Panel Display	A _{OUT} -0.010	_____ A	A _{OUT} +0.010	56 μ A
CONSTANT VOLTAGE MODE TESTS				
Voltage Programming and Readback				
High Voltage (240 V)	239.59	_____ V	240.408	3 mV
Front Panel Display	V _{OUT} -0.390	_____ V	V _{OUT} +0.390	3 mV
Low Voltage (3 V)	2.876	_____ V	3.1236	35 μ V
Front Panel Display	V _{OUT} -0.153	_____ V	V _{OUT} +0.153	35 μ V
CONSTANT RESISTANCE MODE TESTS				
Low Resistance Range				
Resistance (24 Ω)	23.6	_____ Ω	24.4	
Resistance (1 Ω)	0.792	_____ Ω	1.208	
Middle Resistance Range				
Resistance (500 Ω)	433	_____ Ω	590	
Resistance (24 Ω)	23.75	_____ Ω	24.25	
High Resistance Range				
Resistance (2000 Ω)	1247	_____ Ω	5037	
Resistance (240 Ω)	223.3	_____ Ω	259.5	
TRANSIENT SLEW TEST				
Fast Slew Transient				
Slew Rate 0.083 A/ μ s	60	_____ μ s	100	
Slew Rate 0.0042 A/ms	1.2	_____ ms	2.0	
CONSTANT CURRENT PARD TEST				
Current (10 A)	0	_____ mA	1 mA RMS	

Chapter 3 REPLACEABLE PARTS

INTRODUCTION

Tables 3-3 and 3-4 list the electrical components and Table 3-5 lists the mechanical components for the HP 60503B Electronic Load Modules. These tables provide the following information:

- Reference designation (see Table 3-1)
- Hewlett-Packard part number
- Description of part (see Table 3-2)

Refer to Figures 4-2 and 4-4 for component locations.

HOW TO ORDER PARTS

You can order parts from your local Hewlett-Packard sales office (refer to the list at the end of this manual for the office nearest you). When ordering parts, include the following information:

- Hewlett-Packard part number
- Description of the part
- Quantity desired
- Electronic Load model number (HP 60503B)

Table 3-1. Reference Designators

A	Assembly	RTB	Removable Terminal Block
B	Blower	RTP	Removable Jumper
C	Capacitor	S	Switch
D	Diode	T	Transformer
F	Fuse	TB	Terminal Block
J	Terminal Jack	TBP	Test Pin
MP	Mechanical Part	U	Integrated Circuit
P	Terminal Plug	VR	Voltage Regulator
Q	Transistor	W	Cable Assembly
RT	Thermal Resistor	Y	Oscillator

Table 3-2. Part Description Abbreviations

AL	Aluminum	PE	Polyester
CC	Carbon Composition	PD	Power Dissipation
CER	Ceramic	PP	Polypropylene
DIP	Dual In-line Package	PWR	Power
DPDT	Double Pole Double Throw	RECT	Rectifier
FF	Flip Flop	SIP	Single In-Line Package
FXD	Fixed	TA	Tantalum
GEN-PURP	General Purpose	TC	Temperature Coefficient
IC	Integrated Circuit	TF	Thin Film
MACH	Machine	W/	With
MO	Metal Oxide		

Table 3-3. HP 60503B Control Board - Electrical Parts

Reference Designation	HP Part Number	Description
	60503-60026	CONTROL BOARD
C301	0180-0405	CAPACITOR-FXD 1.8uF ±10% 20Vdc TA
C302	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C303,304	0160-4807	CAPACITOR-FXD 33pF ±5% 100Vdc CER 0±30
C306,307	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C311	0160-6579	CAPACITOR-FXD 2200pF ±2.5% 100Vdc PP
C312	0160-5349	CAPACITOR-FXD 200pF ±5% 100Vdc CER 0±30
C314-317	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C323-327	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C329	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C330	0160-4787	CAPACITOR-FXD 22pF ±5% 100Vdc CER 0±30
C331-337	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C339	0160-4787	CAPACITOR-FXD 22pF ±5% 100Vdc CER 0±30
C340,341	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C342	0160-4822	CAPACITOR-FXD 1000pF ±5% 100Vdc CER 0±30
C343	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER
C344	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C345	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER
C346,347	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C348	0160-4787	CAPACITOR-FXD 22pF ±5% 100Vdc CER 0±30
C349,350	0180-4112	CAPACITOR-FXD 1700uF+30-10% 50Vdc AL
C351	0180-4131	CAPACITOR-FXD 4.7uF±10% 35Vdc TA
C352	0180-3804	CAPACITOR-FXD 47uF±20% 35Vdc TA
C353	0180-4131	CAPACITOR-FXD 4.7uF±10% 35Vdc TA
C357,359	0160-4800	CAPACITOR-FXD 120pF ±5% 100Vdc CER 0±30
C363	0160-4820	CAPACITOR-FXD 1800pF ±5% 100Vdc CER 0±30
C365	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C366,367	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER
C371	0160-4831	CAPACITOR-FXD 4700pF ±10% 100Vdc CER
C372	0160-4787	CAPACITOR-FXD 22pF ±5% 100Vdc CER 0±30
C373	0180-0376	CAPACITOR-FXD .47uF ±10% 35Vdc TA
C374	0160-4791	CAPACITOR-FXD 10pF ±5% 100Vdc CER 0±30
C375	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C376	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER
C377,378	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C379	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER
C380,381	0160-4833	CAPACITOR-FXD .022uF ±10% 100Vdc CER
C382	0160-4829	CAPACITOR-FXD 680pF ±10% 100Vdc CER
C383	0160-4820	CAPACITOR-FXD 1800pF ±5% 100Vdc CER
C384	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C385	0180-0405	CAPACITOR-FXD 1.8uF ±10% 20Vdc TA
C387-389	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER

Table 3-3. HP 60503B Control Board - Electrical Parts (continued)

Reference Designation	HP Part Number	Description
D302-304	1901-0033	DIODE-GEN PURP 180V 200mA 1N645
D306,308	1901-0033	DIODE-GEN PURP 180V 200mA 1N645
D310-313	1901-0033	DIODE-GEN PURP 180V 200mA 1N645
D314-317	1901-0731	DIODE-PWR RECT 400V 1A
D321	1901-0880	DIODE-GEN PURP 200mA DO-35
F300	2110-0716	FUSE-SUBMINIATURE .5A 125V
F301,302	2110-0821	FUSE (METRIC) .315A 250V
J1-3	1252-2789	CONNECTOR-POST RT ANGLE 12-CONTACT
P1-3	60502-80005	CABLE ASSEMBLY W/PLUG 12-CONTACT
P4	60502-80007	CABLE ASSEMBLY W/PLUG 26-CONTACT
Q301	1858-0054	TRANSISTOR ARRAY 16-PIN DIP
R305	0698-4443	RESISTOR 4.53k 1% .125W TF TC=0±100
R306	0698-6320	RESISTOR 5k .1% .125W TF TC=0±25
R307	0698-0085	RESISTOR 2.61k 1% .125W TF TC=0±100
R308	0757-0462	RESISTOR 75k 1% .125W TF TC=0±100
R309	0698-6320	RESISTOR 5k .1% .125W TF TC=0±25
R310,311	0698-8827	RESISTOR 1M 1% .125W TF TC=0±100
R314	0757-0465	RESISTOR 100k 1% .125W TF TC=0±100
R315	0698-0085	RESISTOR 2.61k 1% .125W TF TC=0±100
R316	0699-0924	RESISTOR 11k .1% .125W TF TC=0±25
R317,318	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R319,320	0698-6360	RESISTOR 10k .1% .125W TF TC=0±25
R321,322	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R323,324	0698-6360	RESISTOR 10k .1% .125W TF TC=0±25
R325-327	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R329	0757-0416	RESISTOR 511 1% .125W TF TC=0±100
R330,331	0757-0472	RESISTOR 200k 1% .125W TF TC=0±100
R332	0757-0280	RESISTOR 1k 1% .125W TF TC=0±100
R333	1810-0368	RESISTOR-NET 6-PIN SIP 10.0k X 5
R337	0757-0280	RESISTOR 1k 1% .125W TF TC=0±100
R338	0699-0924	RESISTOR 11k .1% .125W TF TC=0±25
R339,340	0698-6360	RESISTOR 10k .1% .125W TF TC=0±25
R341	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R342	0757-0449	RESISTOR 20k 1% .125W TF TC=0±100
R343	0698-4443	RESISTOR 4.53k 1% .125W TF TC=0±100
R344	0757-0439	RESISTOR 6.81k 1% .125W TF TC=0±100
R345	0699-0924	RESISTOR 11k .1% .125W TF TC=0±25
R346	0698-6533	RESISTOR 12.5k .1% .125W TF TC=0±25
R347	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R348	0698-3215	RESISTOR 499k 1% .125W TF TC=0±100
R355	1810-0280	RESISTOR-NET 10-PIN SIP 10.0k X 9
R356,357	0698-3633	RESISTOR 390 5% 2W MO TC=0±200
R358	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100

Table 3-3. HP 60503B Control Board - Electrical Parts (continued)

Reference Designation	HP Part Number	Description
R359-361	0757-0424	RESISTOR 1.1k 1% .125W TF TC=0±100
R365	0757-0441	RESISTOR 8.25k 1% .125W TF TC=0±100
R368,369	0699-1728	RESISTOR 2.652k .1% .125W TF TC=0±25
R370,371	0698-8672	RESISTOR 243.4 .1% .125W TF TC=0±25
R372	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R375	0757-0280	RESISTOR 1k 1% .125W TF TC=0±100
R379	0698-0084	RESISTOR 2.15k 1% .125W TF TC=0±100
R380	0757-0449	RESISTOR 20k 1% .125W TF TC=0±100
R381	0698-4503	RESISTOR 66.5k 1% .125W TF TC=0±100
R382	0698-4486	RESISTOR 24.9k 1% .125W TF TC=0±100
R383	0757-0465	RESISTOR 100k 1% .125W TF TC=0±100
R384	0699-1254	RESISTOR 536k 1% .125W TF TC=0±100
R385	0698-3382	RESISTOR 5.49k 1% .125W TF TC=0±100
R386	0757-0465	RESISTOR 100k 1% .125W TF TC=0±100
R387,388	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R389	0757-0436	RESISTOR 4.32k 1% .125W TF TC=0±100
R390	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R391	0757-0437	RESISTOR 4.75k 1% .125W TF TC=0±100
R392	0757-0465	RESISTOR 100k 1% .125W TF TC=0±100
R393	0757-0280	RESISTOR 1k 1% .125W TF TC=0±100
R394	0757-0472	RESISTOR 200k 1% .125W TF TC=0±100
R395	0698-8827	RESISTOR 1M 1% .125W TF TC=0±100
R396	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R397	0698-0084	RESISTOR 2.15k 1% .125W TF TC=0±100
R398	0757-0420	RESISTOR 750 1% .125W TF TC=0±100
R399	0757-0458	RESISTOR 51.1k 1% .125W TF TC=0±100
R400	0757-0455	RESISTOR 36.5k 1% .125W TF TC=0±100
R401	0757-0278	RESISTOR 1.78k 1% .125W TF TC=0±100
R406	0764-0041	RESISTOR 30 5% 2W MO TC=0±200
R413,414	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R415	0757-0455	RESISTOR 36.5k 1% .125W TF TC=0±100
R416	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R417	0757-0401	RESISTOR 100 1% .125W TF TC=0±100
R418	0698-3430	RESISTOR 21.5 1% .125W TF TC=0±100
R420	1810-0280	RESISTOR-NET 10-PIN SIP 10.0k X 9
R421,422	8159-0005	RESISTOR-ZERO OHMS 22 AWG
RTB1	0360-2345	MATING PLUG FOR TB301 (control)
RTP301	1258-0209	REMOVABLE JUMPER 2-POSITION
T301	9100-4840	TRANSFORMER-PWR 100/120/220/240V
TB301	0360-2348	TERMINAL BLOCK 10-TERMINAL
TP301	1251-4926	CONNECTOR-POST TYPE 8-CONTACT
U301	1820-7673	IC PROGRAMMABLE MICROPROCESSOR
U302	1820-3399	IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG

Table 3-3. HP 60503B Control Board - Electrical Parts (continued)

Reference Designation	HP Part Number	Description
U303	1820-2228	IC QUAD NAND SET/RESET LATCH CMOS
U304	1820-3079	IC 3-TO-8 LINE DECODER CMOS/74HC
U306	1826-1845	IC DUAL OP AMP 8-PIN DIP (PRECISION)
U307	1826-1317	IC DUAL OP AMP 8-PIN DIP (LOW NOISE)
U308	1826-0962	IC DUAL OP AMP 8-PIN DIP
U309	1826-0850	ANALOG SWITCH 16-PIN DIP
U318	1820-2924	IC QUAD NOR GATE CMOS/74HC 2-INPUT
U319	1820-3399	IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG
U320	1826-1488	D/A CONVERTER CMOS 12-BIT 20-PIN
U321	1826-1068	D/A CONVERTER CMOS 8-BIT 20-PIN
U322	1826-1488	D/A CONVERTER CMOS 12-BIT 20-PIN
U323	1826-0962	IC DUAL OP AMP 8-PIN DIP
U324	1826-1845	IC DUAL PRECISION OP AMP 8-PIN DIP
U325	1826-0962	IC DUAL OP AMP 8-PIN DIP
U326	1826-1081	IC PRECISION OP AMP 8-PIN DIP
U327	1826-1370	IC QUAD COMPARATOR 16-PIN DIP
U328	1826-1081	IC PRECISION OP AMP 8-PIN DIP
U329	1826-1369	IC REGULATOR-FXD 9.95/10.05V 8-PIN DIP
U330	1820-3399	IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG
U332-334	1990-0996	IC LED OPTO-ISOLATOR IF=10mA MAX
U335	1826-0393	IC REGULATOR-ADJUSTABLE 1.2/37V POS
U336	1826-0122	IC REGULATOR-FXD 4.8/5.2V
U337	1826-0527	IC REGULATOR-ADJUSTABLE 1.2/37V NEG
U340	1826-0850	ANALOG SWITCH 16-PIN DIP
U341	1820-3297	IC OCTAL BUS DRIVER CMOS/74HC
U342	1818-4932	IC EEPROM NMOS 1024 (1k)
U344	1826-0962	IC DUAL OP AMP 8-PIN DIP
U345	1820-3399	IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG
U346	1826-0850	ANALOG SWITCH 16-PIN DIP
U347	1826-0412	IC DUAL PRECISION COMPARATOR 8-PIN DIP
U348	1826-1343	IC REGULATOR-ADJUSTABLE 2.5/36V 8-PIN DIP
U349	5080-2137	IC PROGRAMMED GAL
U350	1820-6774	IC BIN COUNTER CMOS/74HC POS-EDGE-TRIG
U351	5080-2121	IC DECADE DIVIDER GATE ARRAY
U352	1820-3172	IC FF CMOS/74HC J-K POS-EDGE-TRIG
U353	1820-3081	IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG
U354,355	1820-3082	IC TRANSCEIVER OCTAL BUS
VR301,302	1902-0957	DIODE-ZENER 9.1V 5% PD=.4W
VR303,304	1902-0783	DIODE-ZENER 16.2V 5% PD=1W
W1	7175-0057	RESISTOR-ZERO OHMS SOLID TINNED COPPER
Y301	0410-1944	RESONATOR-QUARTZ 4.0000MHz

Table 3-4. HP 60503B Power Board - Electrical Parts

Reference Designation	HP Part Number	Description
	60503-60024	POWER BOARD
C1-8	0160-4820	CAPACITOR-FXD 1800pF ±5% 100Vdc CER
C11-21	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C25	0160-7369	CAPACITOR-FXD 1uF ±10% 400Vac CER
C26	0160-4831	CAPACITOR-FXD 4700pF ±10% 100Vdc CER
C32,33	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C34	0160-4048	CAPACITOR-FXD .022uF ±20% 250Vac
C35	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C36	0160-5469	CAPACITOR-FXD 1uF ±10% 50Vdc METAL-PE
C38-42	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C49-56	0160-4810	CAPACITOR-FXD 330pF ±5% 100Vdc CER
C60	0160-4833	CAPACITOR-FXD .022uF ±10% 100Vdc CER
C106	0160-4833	CAPACITOR-FXD .022uF ±10% 100Vdc CER
C125	0160-5166	CAPACITOR-FXD .015uF ±20% 100Vdc CER
C126	0160-5098	CAPACITOR-FXD .22uF ±10% 50Vdc CER
C127	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER
C128	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C129	0160-2569	CAPACITOR-FXD .02uF ±20% 2kV CER
C130	0150-0052	CAPACITOR-FXD 0.05uF ±20% 400Vac CER
C131	0160-4834	CAPACITOR-FXD .047uF ±10% 100Vdc CER
C132,133	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C134	0160-4801	CAPACITOR-FXD 100pF ±5% 100Vdc CER 0±30
C135	0160-4830	CAPACITOR-FXD 2200pF ±10% 100Vdc CER
C136	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C137	0160-4832	CAPACITOR-FXD .01uF ±10% 100Vdc CER
C138	0160-4814	CAPACITOR-FXD 150pF ±5% 100Vdc CER 0±30
C139	0160-4832	CAPACITOR-FXD .01uF ±10% 100Vdc CER
C140	0160-4835	CAPACITOR-FXD .1uF ±10% 50Vdc CER
C142	0160-4918	CAPACITOR-FXD .022uF ±10% 50Vdc CER
C143	0160-4812	CAPACITOR-FXD 220pF ±5% 100Vdc CER 0±30
C144-151	0160-4807	CAPACITOR-FXD 33pF ±5% 100Vdc CER
C152	0160-4831	CAPACITOR-FXD 4700pF ±10% 100Vdc CER
C153	0160-2496	CAPACITOR-FXD 470pF ±10% 1kV CER
C154	0160-4832	CAPACITOR-FXD .01uF ±10% 100Vdc CER
C155	0160-5422	CAPACITOR-FXD .047uF ±20% 50Vdc CER
C156	0160-4821	CAPACITOR-FXD 1200pF ±5% 100Vdc CER
C157	0160-4183	CAPACITOR-FXD 1000pF ±20% 250Vdc CER
D10,11	1901-0033	DIODE-GEN PURP 180V 200mA 1N645
D17-28	1901-0033	DIODE-GEN PURP 180V 200mA 1N645
D33	1901-0880	DIODE-GEN PURP 200mA DO-35
D35	1901-0033	DIODE-GEN PURP 180V 200mA 1N645
D53-55	1901-0033	DIODE-GEN PURP 180V 200mA 1N645

Table 3-4. HP 60503B Power Board - Electrical Parts (continued)

Reference Designation	HP Part Number	Description
D56	1901-0731	DIODE-PWR RECT 400V 1A
D57,58	1901-0880	DIODE-GEN PURP 200mA DO-35
D59		NOT USED
D60	1901-0033	DIODE-GEN PURP 180V 200mA 1N645
D62	1901-0880	DIODE-GEN PURP 200mA DO-35
D63		NOT USED
F1-8	2110-0757	FUSE-SUBMINIATURE .062A 125V
F9-16	2110-0685	FUSE-SUBMINIATURE 7A 125V
J2	1251-4670	CONNECTOR-POST RT ANGLE 9-CONTACT
J4	1251-7743	CONNECTOR-POST 26-CONTACT
L1-32	9170-1499	CORE TOROID
Q1,2	1855-0819	FET SUBASSEMBLY (includes 4 FETS)
Q9	1855-0386	TRANSISTOR J-FET 2N4392 N-CHANNEL
Q10	1854-0635	TRANSISTOR NPN SI PD=50W FT=20MHz
Q11	1853-0281	TRANSISTOR PNP SI 2N2907A PD=400mW
Q12	1858-0054	TRANSISTOR ARRAY 16-PIN DIP
R1-8	0811-3845	RESISTOR .3 1% 3W
R9-16	0698-3430	RESISTOR 21.5 1% .125W TF TC=0±100
R17-24	0698-3156	RESISTOR 14.7k 1% .125W TF TC=0±100
R25,26	0698-3162	RESISTOR 46.4k 1% .125W TF TC=7±100
R27	0757-0457	RESISTOR 47.5k 1% .125W TF TC=0±100
R28	0698-3162	RESISTOR 46.4k 1% .125W TF TC=7±100
R29-32	0757-0458	RESISTOR 51.1k 1% .125W TF TC=0±100
R33-40	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R41	1810-1260	RESISTOR-NET 10-PIN SIP 20k X 9
R43	1810-0316	RESISTOR-NET 16-PIN DIP 10.0k X 8
R44	0698-0085	RESISTOR 2.61k 1% .125W TF TC=0±100
R46	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R50	0757-0458	RESISTOR 51.1k 1% .125W TF TC=0±100
R53	0698-6620	RESISTOR 150k .1% .125W TF TC=0±25
R54	0698-6332	RESISTOR 300k .1% .125W TF TC=0±25
R55,56	0698-6533	RESISTOR 12.5k .1% .125W TF TC=0±25
R58	0698-3160	RESISTOR 31.6k 1% .125W TF TC=0±100
R59	0698-4496	RESISTOR 45.3k 1% .125W TF TC=0±100
R60	0698-4457	RESISTOR 576 1% .125W TF TC=0±100
R64	0757-0455	RESISTOR 36.5k 1% .125W TF TC=0±100
R65	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R66	0698-0084	RESISTOR 2.15k 1% .125W TF TC=0±100
R67	0757-0427	RESISTOR 1.5k 1% .125W TF TC=0±100
R68	0698-6630	RESISTOR 20k .1% .125W TF TC=0±25
R69	0699-0620	RESISTOR 2.222k .1% .125W TF TC=0±25
R71	0699-0486	RESISTOR 2k .1% .125W TF TC=0±25

Table 3-4. HP 60503B Power Board - Electrical Parts (continued)

Reference Designation	HP Part Number	Description
R88	0811-1760	RESISTOR 4.3 5% 2W PWR TC=0±400
R90	0698-6533	RESISTOR 12.5k .1% .125W TF TC=0±25
R91	0698-3456	RESISTOR 287k 1% .125W TF TC=0±100
R92,93	0698-3153	RESISTOR 3.83k 1% .125W TF TC=0±100
R94	0757-0449	RESISTOR 20k 1% .125W TF TC=0±100
R95	0757-0280	RESISTOR 1k 1% .125W TF TC=0±100
R96	0698-6620	RESISTOR 150k .1% .125W TF TC=0±25
R101-104	1810-1261	RESISTOR-NET 16-PIN DIP MULTI-VALUE
R105	0698-6320	RESISTOR 5k .1% .125W TF TC=0±25
R106	0698-3572	RESISTOR 60.4k 1% .125W TF TC=0±100
R107,108	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R109	0757-0449	RESISTOR 20k 1% .125W TF TC=0±100
R110	0698-3160	RESISTOR 31.6k 1% .125W TF TC=0±100
R114	0757-0447	RESISTOR 16.2k 1% .125W TF TC=0±100
R115	0757-0416	RESISTOR 511 1% .125W TF TC=0±100
R116	0757-0472	RESISTOR 200k 1% .125W TF TC=0±100
R117	0698-6320	RESISTOR 5k .1% .125W TF TC=0±25
R136	0757-0449	RESISTOR 20k 1% .125W TF TC=0±100
R142	1810-1274	RESISTOR-NET 10-PIN SIP MULTI-VALUE
R143	0757-0427	RESISTOR 1.5k 1% .125W TF TC=0±100
R144	0698-4479	RESISTOR 14k 1% .125W TF TC=0±100
R151	0698-3160	RESISTOR 31.6k 1% .125W TF TC=0±100
R201	0757-0441	RESISTOR 8.25k 1% .125W TF TC=0±100
R202	0757-0317	RESISTOR 1.33k 1% .125W TF TC=0±100
R204	0757-0472	RESISTOR 200k 1% .125W TF TC=0±100
R205	0757-0429	RESISTOR 1.82k 1% .125W TF TC=0±100
R206	0757-0401	RESISTOR 100 1% .125W TF TC=0±100
R207	0757-0472	RESISTOR 200k 1% .125W TF TC=0±100
R208	0757-0438	RESISTOR 5.11k 1% .125W TF TC=0±100
R209	0683-0475	RESISTOR 4.7 5% .25W CF TC=0-400
R211	0757-0278	RESISTOR 1.78k 1% .125W TF TC=0±100
R212	0757-0439	RESISTOR 6.81k 1% .125W TF TC=0±100
R213	0698-4496	RESISTOR 45.3k .1% .125W TF TC=0±25
R214	0757-0458	RESISTOR 51.1k 1% .125W TF TC=0±100
R215	0757-0270	RESISTOR 249k 1% .125W TF TC=0±100
R216	0757-0278	RESISTOR 1.78k 1% .125W TF TC=0±100
R217-224	0757-0465	RESISTOR 100k 1% .125W TF TC=0±100
R225	0698-8827	RESISTOR 1M 1% .125W TF TC=0±100
R226	2100-3750	RESISTOR-TRIMMER 20k 10%
R228	0811-1760	RESISTOR 4.3 5% 2W PWR TC=0±400
R229,230	0683-0475	RESISTOR 4.7 5% .25W CF TC=0-400
R231	0683-1065	RESISTOR 10M 5% .25W CC TC=-900/+1100

Table 3-4. HP 60503B Power Board - Electrical Parts (continued)

Reference Designation	HP Part Number	Description
R233	1810-0368	RESISTOR-NET 6-PIN SIP 10k X 5
R234	0757-0279	RESISTOR 3.16k 1% .125W TF TC=0±100
R235	0757-0439	RESISTOR 6.81k 1% .125W TF TC=0±100
R238	0757-0280	RESISTOR 1k 1% .125W TF TC=0±100
R239	0757-0405	RESISTOR 162 1% .125W TF TC=0±100
R249	0698-6620	RESISTOR 150k .1% .125W TF TC=0±25
R252	0698-6620	RESISTOR 150k .1% .125W TF TC=0±25
R255,256	0757-0463	RESISTOR 82.5k 1% .125W TF TC=0±100
R257	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R259,261	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R262	0698-3226	RESISTOR 6.49k 1% .125W TF TC=0±100
R263	0757-0444	RESISTOR 12.1k 1% .125W TF TC=0±100
R264-266	8159-0005	RESISTOR-ZERO OHMS 22 AWG
R267	1810-1490	RESISTOR-NET 12-PIN DIP MULTI-VALUE
R268	1810-1489	RESISTOR-NET 8-PIN SIP MULTI-VALUE
R269	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R270	0757-0436	RESISTOR 4.32k 1% .125W TF TC=0±100
R271	0757-0443	RESISTOR 11k 1% .125W TF TC=0±100
R272	0757-0442	RESISTOR 10k 1% .125W TF TC=0±100
R274	0757-0274	RESISTOR 1.21k 1% .125W TF TC=0±100
R275-282	0698-8827	RESISTOR 1M 1% .125W TF TC=0±100
R283	0698-8913	RESISTOR 1.5M 1% .125W TF TC=0±100
R284	0698-0064	RESISTOR 9.31k 1% .125W TF TC=0±100
R285	0757-0464	RESISTOR 90.9k 1% .125W TF TC=0±100
R288	0698-8913	RESISTOR 1.5M 1% .125W TF TC=0±100
R289	0698-4536	RESISTOR 340k 1% .125W TF TC=0±100
R290	0757-0458	RESISTOR 51.1k 1% .125W TF TC=0±100
RT2	0837-0397	THERMISTOR 10k (under large heatsink)
S1	3101-2894	SENSE SWITCH DPDT
	0370-2862	PUSHBUTTON (for sense switch)
U1	1826-2252	IC DUAL OP AMP 8-PIN DIP LOW NOISE
U2,3	1826-1533	IC DUAL OP AMP 8-PIN DIP H-SLEW RATE
U4	1826-2252	IC DUAL OP AMP 8-PIN DIP LOW NOISE
U5	1826-1533	IC DUAL OP AMP 8-PIN DIP H-SLEW RATE
U6	1826-2252	IC DUAL OP AMP 8-PIN DIP LOW NOISE
U7	1826-1533	IC DUAL OP AMP 8-PIN DIP H-SLEW RATE
U8	1826-2252	IC DUAL OP AMP 8-PIN DIP LOW NOISE
U9	1826-0850	IC ANALOG SWITCH 16-PIN DIP
U10	1826-0138	IC QUAD COMPARATOR 14-PIN DIP
U11	1826-1370	IC QUAD COMPARATOR 16-PIN DIP
U12	1826-1533	IC DUAL OP AMP 8-PIN DIP H-SLEW RATE
U13	1826-0962	IC DUAL OP AMP 8-PIN DIP LOW BIAS H-IMP

Table 3-4. HP 60503B Power Board - Electrical Parts (continued)

Reference Designation	HP Part Number	Description
U14	1826-1543	IC DUAL OP AMP 8-PIN DIP HS
U15	1826-2252	IC DUAL OP AMP 8-PIN DIP LOW NOISE
U16	1826-0962	IC DUAL OP AMP 8-PIN DIP LOW BIAS H-IMP
U17	1826-0346	IC DUAL OP AMP 8-PIN DIP GP
VR10	1902-0783	ZENER DIODE 16V 5% PD=1W
VR26	1902-3149	ZENER DIODE 9.09V 5% PD=.4W
VR27	1902-0761	ZENER DIODE 1N821 6.2V 5% PD=.4W
VR28	0387-0277	VOLTAGE SUPPRESSOR 256V (BV=285V MIN)
VR29		NOT USED

Table 3-5. HP 60503B Mechanical Parts

HP Part Number	Quantity	Description
		CONTROL BOARD
60502-00001	1	MODULE CHASSIS
7121-0850	1	WARNING LABEL
7121-2794	1	SERIAL# LABEL
0515-0413	2	SCREW-MACH M5X0.8X6mm (rear panel to module chassis)
0515-0414	6	SCREW-MACH M4X0.7X10mm (control board to module chassis)
60502-80004	2	SPACER-PLASTIC (align heatsink with module chassis)
1205-0730	2	HEATSINK (U335,337)
0515-0104	2	SCREW-MACH M3X0.5 (U335,337)
0535-0031	2	NUT-HEX W/LOCKWASHER M3 (U335,337)
3050-0891	2	WASHER M3 (U335,337)
2110-0689	4	FUSE CLIP (F301,302)
		POWER BOARD
60502-20001	1	LARGE HEATSINK (for Q1, Q2)
1205-0743	2	THERMAL PAD (between Q1, Q2 and heatsink)
0340-1217	1	INSULATOR (in heatsink for RT2)
60502-00002	1	REAR PANEL
60503-80002	1	REAR PANEL LABEL
1510-0134	2	BINDING POST ASSEMBLY
3050-1320	2	SPRING STEEL WASHER (on binding post)
2190-0629	2	LOCKWASHER (on binding post)
0535-0020	2	NUT-HEX (on binding post)
0515-0155	2	SCREW-MACH M5X0.8X12mm (binding post to bus bar)
0515-1146	1	SCREW-MACH M3X0.5X6mm (ground wire to chassis)
3050-0891	1	WASHER M3 (ground to chassis)
60502-00003	1	BUS BAR (- input)
60502-00004	1	BUS BAR (+ input)
0515-1584	2	SCREW MACH M5X0.8X8mm (bus bar to power board)
0515-0414	14	SCREW-MACH M4X0.7X10mm (power board to chassis and large heatsink; Q1, Q2 to large heatsink; and bus bar to large heatsink)
4040-2268	1	SAFETY COVER (rear panel terminal block)
		MISCELLANEOUS
9222-1375	1	BAG, STATIC PROTECTION
60502-80002	1	FLOATER, ANTI-STATIC
60502-80003	1	FLOATER, ANTI-STATIC
9211-6196	1	CARTON, SHIPPING
60503-90007	1	MANUAL, OPERATING
60503-90009	1	MANUAL, SERVICE

Chapter 4 DIAGRAMS

SCHEMATIC DIAGRAMS

Schematic diagrams and component location diagrams are provided for the Control board as well as the Power board on two foldout pages. Two schematic diagrams of the Power board are included in Figure 4-2 on the first foldout; three schematic diagrams of the Control board are included in Figure 4-4 on the second foldout. Table 4-1 lists the notes that apply to both the Control board and Power board schematic diagrams.


 
Table 4-2 lists, alphabetically, all of the signal names that appear on the schematic, along with a brief description of the signal's function. To help you locate where signals come from and go to, Table 4-1 lists the coordinates for each appearance of a signal on each sheet of the schematic. Coordinates printed in **BOLD** indicate the signal origin. On the Control board for example, when ACLR* is active, it clears the analog circuits. ACLR* originates in area 4D of sheet 1 and also appears in area 2B of sheet 3.

COMPONENT LOCATION DIAGRAMS

Each foldout includes a component locations diagram with a look-up table for locating electrical components. Figure 4-1 gives the component locations for the Control board and Figure 4-3 gives the component locations for the Power board. The coordinates in the look-up table under each diagram reference the grid on the diagram and give the location of some point on each component to within 1/10 of a unit. The mainframe Service Manual gives several examples of how to use the table.

The component locations diagram also indicates specific troubleshooting test point locations. The test points are described in Chapter 3 of the mainframe Service Manual and are used in various troubleshooting procedures described in that chapter.

Table 4-1. Schematic Diagram Notes

1. All resistors are in ohms $\pm 1\%$, 1/8 W unless otherwise specified.
2. All capacitors are in microfarads unless otherwise specified.
3. All unmarked capacitors are 0.047 μ F.
4. An asterisk negates a signal name. For example, CS2 appears on the schematic as CS2*.
5. Signal lines that are terminated by flags continue on other sheets, and may also go to other locations on the same sheet. Table 4-2 documents all signal terminations on the schematics. Note that flags do not indicate signal flow direction.
Example:  CC_PROG
6. Unterminated signal lines go to at least one other location of the same schematic sheet.
Example:  SPCLR*
7. Heavy signal lines represent multiple-wire data buses.
8. Unless otherwise noted, bias connections to IC packages are as follows:

	Common	+5 V
14-pin packages	pin 7	pin 14
16-pin packages	pin 8	pin 16
20-pin packages	pin 10	pin 20

Table 4-2. Signal-Name Descriptions

Mnemonic	Function	Sheet 1	Sheet 2	Sheet 3
CONTROL BOARD				
ACLR*	Analog circuits clear (D)	4D		2B
BO*	Brown out input disable (D)	3D		2A
CC_EN*	CC mode enable (D)	6D, 3B		
CC_PROG	Programming voltage for CC mode (A)	3B	2B	
CCVTST	Comparator output, main DAC self-test (D)	6D	4A	
CG*	CR-mode middle-and-high-range select (D)	5D	4D	
CLR	Initialize transient generator (D)	7B, 5A		
CR*	CR-mode low-range select (D)	5D	3C	2A
CS0*	Main DAC chip select (D)	1D,	8D	
CS1*	Transient DAC chip select (D)	1D	7C	
CS2*	Slew range chip select (D)	1D, 8C		
CS3*	Readback DAC chip select (D)	1D	8B	
CS4*	Secondary-data-bus buffer chip select (D)	1D	8D	
CS5*	Control-signals latch chip select (D)	1D, 6D		
CS6*	Control-signals latch chip select (D)	7D, 5D		
CS7*	Non-volatile memory R/W chip select (D)	8D 3C, 2C		
CV_EN*	CV mode enable (D)	6D, 3C		
CV_PROG	Programming voltage for CV mode (A)	3C		2C
DAC_REF*	Main DAC reference enable, CV/CC modes (D)	5D	3D	
E	Secondary-μP clock (D)	6D, 8A		
EEPON*	EEPROM power-on disable (D)	2C		2D
EPC_EN*	Extended power capability enable/disable (D)	4D		2A
EXT_PROG	Ext programming input (A) from rear-panel A4			1B, 3C
FLT	Voltage-fault signal (D) to rear-panel A6	3D	1B	
FSEL0,FSEL1,FSEL2	Transient-generator frequency-select bits (D)	5D, 4A		
HIGH*	Transient-DAC output enable (D)	6B	8C	
H/L*	Main-DAC transfer control (D)	7D	8D	
H/L-A/D	Readback-DAC transfer control (D)	7D	8B	
IMON	Current-monitor output (A) to rear-panel A1		1D, 1C	
IMON*	Input-current monitor signal (A)		3D, 6A	2C
	CR-mode low-range DAC reference (A)		4C	
IMONR	Current-monitor-comparator output (D)	6D	4A	
LCLR*	Clear status latch (D)	5D, 3D		
MODULE_INSTALLED*	Indicate how many modules are installed (D)			8B
OP*	Overpower status (D)	3D		2A
OV*	Overvoltage status (D)	3D		2A
PCLR1*	Power-on clear signal from mainframe (D)			8B
PORT	PORT output (D) to rear-panel A7	3D	1B	
PRX	Primary-μP receiver (D)			8A
PTX	Primary-μP transmitter (D)			8A
P_TRIG	Continuous mode pulse trigger (D)	6A, 5D		
PRI_TRIG	Trigger signal from mainframe (D)			8B
PULSE_EN	Pulse-mode enable (D)	4D, 6B		
RCK_HI*	Loads transient-level counter (D)	1D, 6A		
RCK_LOW*	Loads main-level counter (D)	1D, 6A		
RNG	CC-mode range select (D)	7C		
+S	Remote + sense (A) from rear-panel +S		1C	2B
-S	Remote - sense (A) from rear-panel -S		1C	2C
SA_EN*	Secondary μP SA enable (D) from TP301-1	1C, 7D		
SD	Secondary μP data bus (D)			
SDB	Secondary μP data bus, buffered (D)			
SKP	Skip self-test (D) from TP301-5	1B, 6D		
SLEW	Programming-voltage input to slew circuit (A)	5B	4C, 5A	
SLW1,SLW2,SLW3,SLW4	Slew-rate control signals (D)	8C,8B,8C,7C,5C		

(A) = analog signal

(D) = digital signal

8C = signal origin

Table 4-2. Signal-Name Descriptions (continued)

Mnemonic	Function	Sheet 1	Sheet 2	Sheet 3
CONTROL BOARD (continued)				
SPCLR*	Secondary-circuit power-on clear (D)	1B,7D,6D,5D	8D	2D,2A
SPROG	(not used)		2D	2C
SRX	Secondary- μ P receiver (D)	8D		5B
START	Secondary- μ P SA start signal (D)	1B		
STAT_EN	Enable status latch (D)	4D, 3D		
STB*	Enable chip-select decoder (D)	7C, 2D		
STOP	Secondary- μ P SA stop signal (D)	1B		
STX	Secondary- μ P transmitter (D)	8D, 1B		5A
S0, S1, S2	Chip-select-decoder input (D)	7C, 2D		
TEMP1	Power-board temperature (A)		5A	2C
TMONR	Temperature-monitor-comparator output (D)	6D	4A	
TOGGLE*	Toggle mode select (D)	6B	4A	
TRANS_EN	Transient-generator clear and enable (D)	4D, 8B, 7B		
	Secondary- μ P SA start/stop (D)	4D, 1B		
TRIG	Trigger (D)	6A	8C	5B
TRIG_EN*	Main and transient DACs trigger enable (D)	4D	8D	
UNREG*	Unregulated-input status (D)	3D		2A
UXFER	Main and transient DACs transfer control (D)	7C	8D	
VMON	Voltage-monitor output (A) to rear-panel A2		1C, 1C	
VMON*	Input-voltage monitor signal (A)		3C, 6A	2B
	CR-mode middle-&-high-range DAC Ref (A)		5D	
VMONR	Voltage-monitor-comparator output (D)	6D	4A	
VREF	Voltage reference for DACs (A)		6D, 8B, 5C	
X	(not used)	3D		2A
-10V_REF	DAC reference for CV and CC modes (A)		2B, 4D, 6A	
+15V	To power board (A)			5D, 2B
-15V	To power board (A)			5C, 2B
+12V_REF	Ref for readback DAC & main DAC self-test (A)		1A, 5B, 7B	2B
			5D, 2B	

(A) = analog signal (D) = digital signal 8C = signal origin


Table 4-2. Signal-Name Descriptions

Mnemonic	Function	Sheet 1	Sheet 2	Sheet 3
POWER BOARD				
ACLR*	Analog circuits clear (D)	1A, 7B		
BO*	Brown out input disable (D)	1A, 2B, 8B		
+BUS	+ input binding post		4A	
-BUS	- input binding post		4A	
CC_PROG	Programming voltage for CC mode (A)	8C, 4C		
CR*	CR_mode low range select (D)	8B		
CV_PROG	Programming voltage for CV mode (A)	8D		
E2	Electrical connection	8A, 6B		
E8	Electrical connection	6A, 7D		
E11	Electrical connection	5A, 8D		
IMON*	Input-current monitor signal (A)	8B	7A	
+IN	+ input (A)	8A,7A,6D,1D,1C	4A	
-IN	- input (A)	8A, 7A, 1D	4A	
+IN Local	Same as + input (A)	1D	4A	
+OP	Overpower comparator input (A) (low = OP)	3A, 8A		
-OP	Overpower comparator input (A) (high = OP)	4A, 8A		
OP*	Overpower status (D)	8A		
+OV	Overvoltage comparator input (A) (low = OV)	4D, 8B		
OV*	Overvoltage status (D)	8B		
PROG	Programming input to power circuits (A)	5D, 1C, 7B	8D	
	Overvoltage reference (A)	8B		
RNG	CC-mode range select (D)	8C		
R268-6	Resistor pin number	4B, 5D		
R268-8	Resistor pin number	4B, 5D		
R267-2	Resistor pin number	4C, 8D		
R267-3	Resistor pin number	4C, 8C		
R267-10	Resistor pin number	4C, 6B		
+S	Remote + sense (A) (from rear-panel +S)	1D		
-S	Remote - sense (A) (from rear-panel -S)	1D		
SPCLR*	Secondary-circuit power-on clear (D)	1B		
TEMP1	Power-board temperature (A)		8A	
TURNON	Power-on input disable (D)	1B	8C	
UNREG	Input to unregulated-input comparator (A)	8C, 4C	2C	
UNREG*	Unregulated-input status (D)	8A		
VMON*	Input-voltage monitor signal (A)	8D		
VOFF	Voltage off	5D	2B	
+12V_REF	Reference for overvoltage circuit (A)	1C		

(A) = analog signal

(D) = digital signal

8C = signal origin

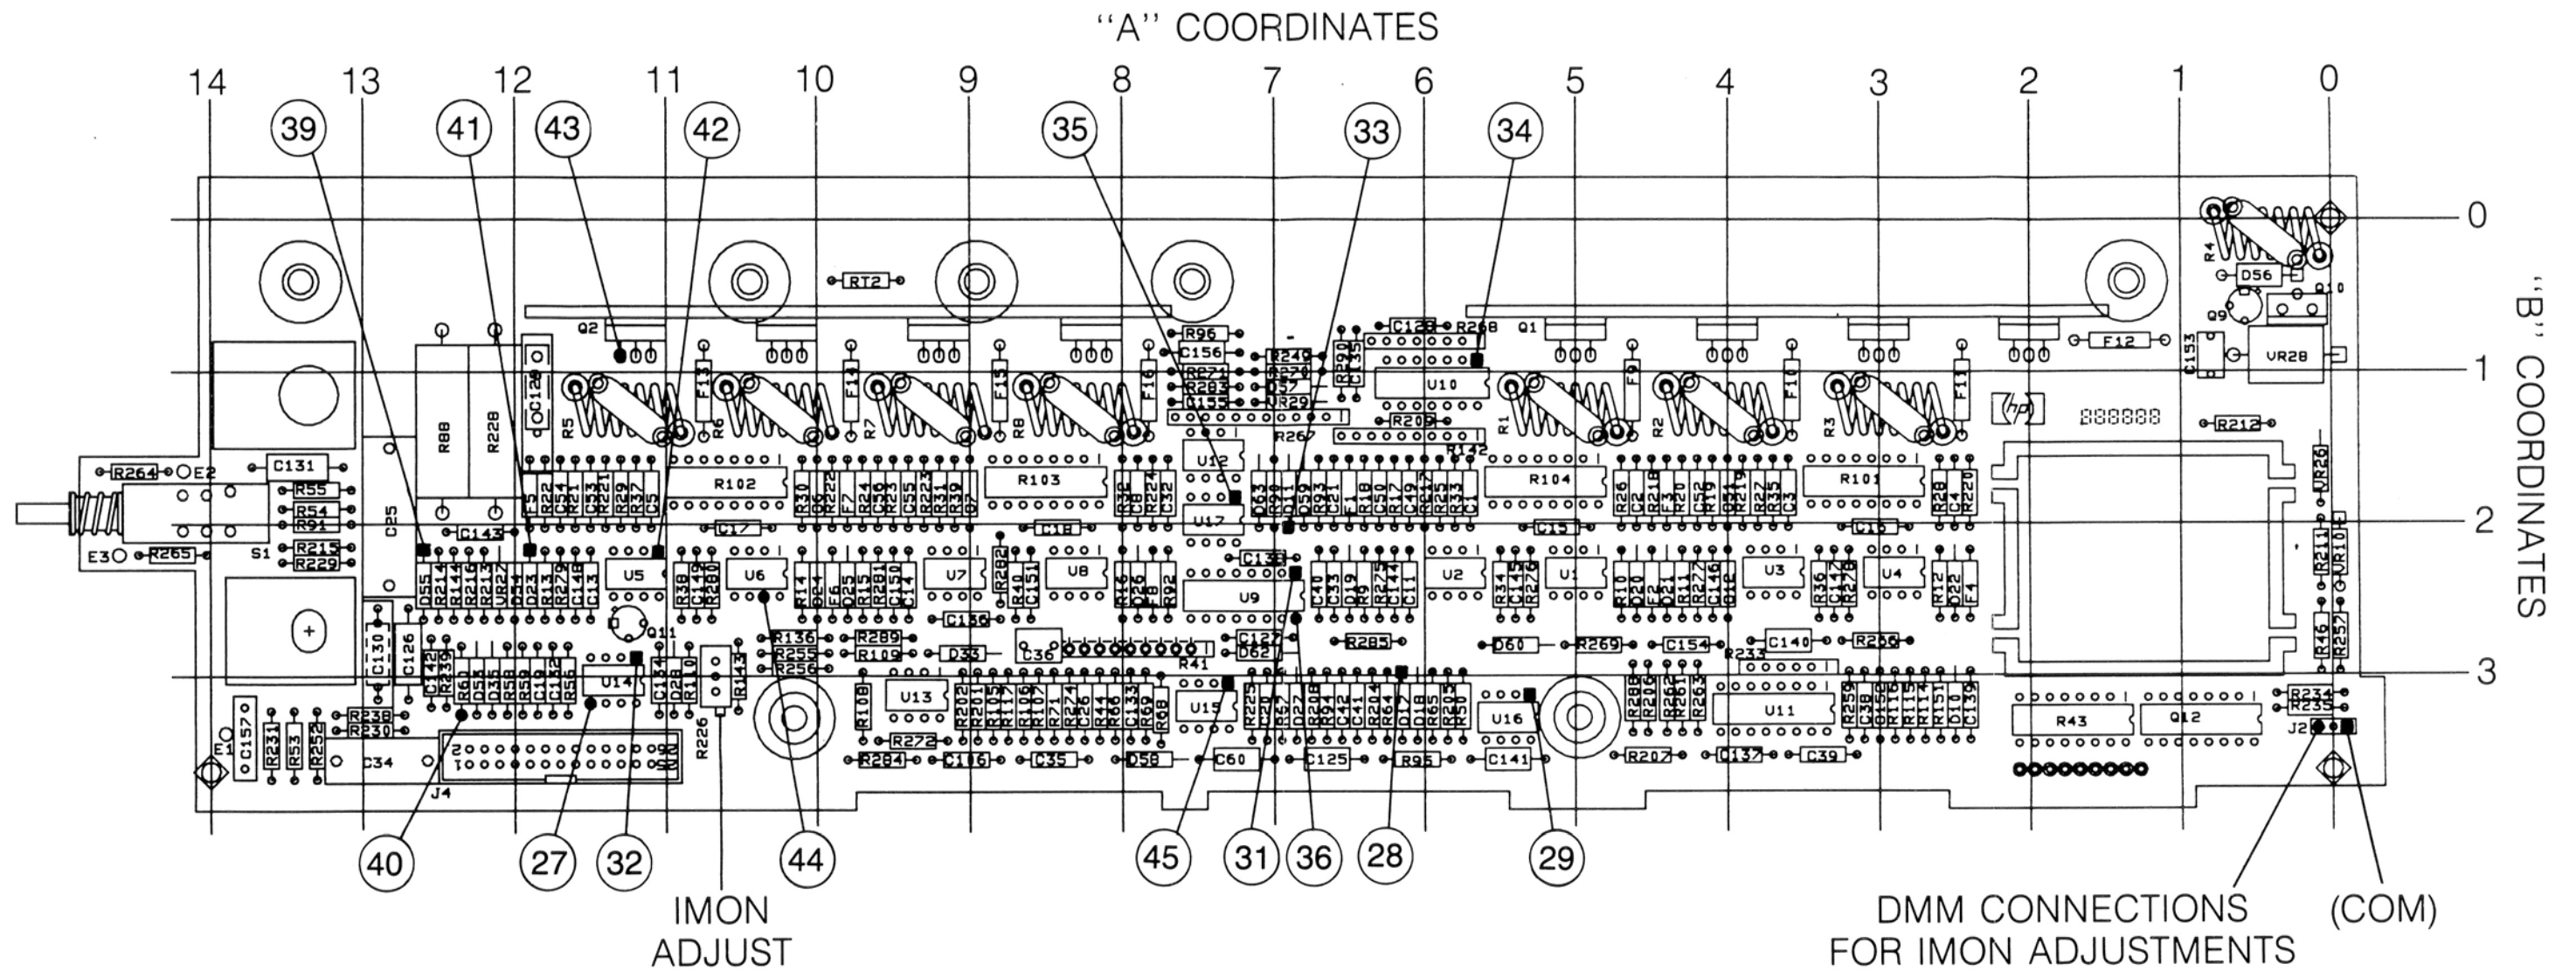

COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES																			
"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"																		
C1	5.7	1.5	C40	6.7	2.1	C140	4.2	2.7	D25	9.8	2.1	F12	1.5	0.8	R16	8.0	2.6	R46	0.1	2.5	R102	10.2	1.5	R211	0.2	2.4	R255	9.9	2.8	R289	9.8	2.7			
C2	4.6	1.5	C1	6.4	2.9	C141	5.7	3.5	D26	7.9	2.1	F13	10.7	0.8	R17	6.2	2.0	R48	6.8	2.0	R103	8.1	1.5	R212	1.0	1.3	R256	9.9	2.9	R290	6.5	0.7			
C3	3.6	1.5	C2	6.5	2.9	C142	12.6	2.8	D27	6.8	2.9	F14	9.7	0.8	R18	6.4	2.0	R50	5.7	3.4	R104	4.8	1.5	R213	12.2	2.6	R257	-0.0	2.9	RT2	9.4	0.4			
C4	2.5	1.5	C9	6.1	1.5	C143	12.7	2.8	D28	10.9	2.8	F15	8.8	0.8	R19	4.1	2.0	R51	6.1	0.7	R105	8.7	3.4	R214	12.4	2.6	R259	3.2	3.4	S1	14.1	1.8			
C5	11.1	1.5	C0	6.3	1.5	C144	6.2	2.1	D31	8.1	3.5	F16	7.8	0.8	R20	4.3	2.0	R52	6.1	0.9	R106	8.6	2.9	R215	13.1	2.0	R261	4.3	3.3	U1	4.8	2.1			
C6	10.0	1.5	C1	4.0	1.5	C145	5.4	2.1	D33	8.9	2.9	J2	0.0	3.2	R21	11.6	2.0	R53	13.4	3.2	R107	8.5	3.4	R216	12.3	2.6	R262	4.4	3.3	U2	5.6	2.1			
C7	9.0	1.5	C2	4.2	1.5	C146	4.1	2.1	D35	12.1	2.8	J4	12.3	3.5	R22	11.8	2.0	R54	13.5	1.9	R108	9.7	3.4	R217	6.0	2.0	R263	4.2	2.9	U3	3.5	2.1			
C8	7.9	1.5	C3	11.5	1.5	C147	3.3	2.1	D53	12.2	2.8	Q1	5.1	0.8	R23	9.5	2.0	R55	12.6	2.6	R109	9.8	2.8	R218	4.5	2.0	R264	14.7	1.6	U4	2.7	2.1			
C11	6.1	2.1	C4	11.7	1.5	C148	11.6	2.1	D54	12.0	2.1	Q2	11.3	0.8	R24	5.7	2.0	R56	11.6	2.8	R110	10.8	2.8	R219	3.9	2.0	R265	14.0	2.2	U5	11.0	2.1			
C12	4.0	2.1	C5	9.4	1.5	C149	10.8	2.1	D55	12.5	2.1	Q9	0.5	0.4	R25	5.9	1.5	R58	12.0	2.8	R111	7.6	0.9	R220	2.4	2.0	R266	2.8	2.7	U6	10.2	2.1			
C13	11.5	2.1	C6	9.6	1.5	C150	9.5	2.1	D56	0.1	0.3	Q10	0.2	0.6	R26	4.7	1.5	R59	11.9	3.2	R114	3.2	3.4	R221	11.4	2.0	R267	6.5	1.3	U7	8.9	2.1			
C14	9.4	2.1	C60	7.0	3.5	C151	8.7	2.1	D57	6.6	1.1	Q11	11.3	2.6	R27	3.8	1.5	R60	12.3	3.2	R115	3.2	3.4	R222	9.9	2.0	R268	5.6	0.8	U8	8.1	2.1			
C15	4.9	2.0	C106	9.2	3.5	C152	3.0	2.9	D58	7.6	3.5	Q12	1.0	3.1	R28	2.6	1.5	R64	6.2	2.9	R116	3.4	3.4	R223	9.3	2.0	R269	5.1	2.8	U9	6.8	2.3			
C16	2.8	2.0	C125	6.4	3.5	C153	0.8	1.0	D59	6.8	1.5	R1	5.4	1.1	R29	11.3	1.5	R65	5.9	2.9	R117	8.7	2.9	R224	7.8	2.0	R270	7.1	1.0	U10	5.6	1.1			
C17	10.3	2.0	C126	12.9	3.2	C154	4.1	2.8	D60	5.1	2.8	R2	4.4	1.1	R30	10.1	1.5	R66	8.0	3.4	R136	10.3	2.8	R225	7.1	3.4	R271	7.7	1.0	U11	3.7	3.0			
C18	8.6	2.0	C127	7.0	1.1	C155	7.2	1.1	D62	6.8	2.8	R3	3.2	1.1	R31	9.2	1.5	R67	6.9	2.9	R142	5.6	1.0	R226	10.6	2.9	R272	9.1	3.4	U12	7.2	1.3			
C19	11.8	3.2	C128	5.5	0.9	C156	7.2	0.8	D63	7.1	1.5	R4	0.1	0.2	R32	8.0	1.5	R68	7.7	3.4	R143	10.5	3.2	R228	12.1	1.9	R274	8.3	2.9	U13	9.2	2.9			
C20	7.1	3.0	C129	11.8	1.3	C157	13.7	3.2	F1	6.5	1.5	R5	11.6	1.1	R33	5.8	1.5	R69	7.8	3.4	R144	12.4	3.2	R229	13.1	2.2	R275	6.3	2.1	U14	11.2	2.8			
C21	6.6	2.0	C130	13.8	3.1	D10	2.8	2.9	F2	4.5	2.1	R6	10.6	1.1	R34	5.5	2.1	R71	8.3	3.4	R151	2.7	3.4	R230	12.7	3.3	R276	5.3	2.1	U15	7.3	3.0			
C25	12.8	2.5	C131	13.7	1.6	D11	6.9	1.5	F3	4.4	1.5	R7	9.6	1.1	R35	3.7	1.5	R88	12.4	1.9	R201	9.0	2.9	R231	13.6	3.2	R278	3.2	2.1	U16	5.3	3.1			
C26	8.2	3.4	C132	11.7	2.8	D17	6.1	2.9	F4	2.3	2.1	R8	8.6	1.1	R36	3.4	2.1	R90	7.0	2.0	R202	9.0	3.4	R233	3.7	2.9	R279	11.7	2.1	U17	7.2	1.8			
C32	7.7	2.0	C133	7.9	3.4	D18	6.0	2.9	F5	11.9	1.5	R9	6.4	2.6	R37	11.2	1.5	R91	7.1	2.0	R204	6.3	3.4	R234	3.1	2.9	R280	10.7	2.1	VR10	0.1	1.9			
C33	6.6	2.6	C134	11.0	2.8	D19	6.5	2.1	F6	9.9	2.1	R10	4.7	2.6	R38	10.9	2.1	R92	7.7	2.6	R205	5.8	2.9	R235	3.0	2.9	R281	9.6	2.1	VR26	0.1	1.4			
C34	13.2	3.5	C135	6.8	1.1	D20	4.6	2.1	F7	9.8	1.5	R11	4.3	2.6	R39	9.1	1.5	R93	6.7	2.0	R206	4.5	2.9	R236	7.0	1.3	R282	8.8	2.5	VR27	12.1	0.9			
C35	8.6	3.5	C136	9.2	2.6	D21	4.4	2.1	F8	7.8	2.1	R12	2.6	2.6	R40	8.8	2.1	R94	6.6	2.9	R207	4.6	2.9	R238	13.1	3.2	R283	7.6	1.1	VR28	-0.0	1.2			
C36	8.6	2.8	C137	4.2	3.5	D22	2.5	2.1	F9	4.6	0.8	R13	11.8	2.6	R41	7.4	2.8	R95	6.2	3.5	R208	6.7	3.4	R239	12.4	3.2	R284	9.3	3.5	VR29	6.6	1.2			
C38	3.5	3.4	C138	6.8	2.2	D23	11.9	2.1	F10	3.5	0.8	R14	10.1	2.6	R43	1.9	3.1	R96	7.2	0.8	R209	6.6	0.7	R249	6.6	0.9	R285	6.6	2.7						
C39	4.1	3.5	C139	2.5	2.8	D24	10.0	2.1	F11	2.4	0.8	R15	9.7	2.6	R44	8.1	3.4	R101	2.7	1.5	R210	5.5	0.8	R252	13.3	3.6	R288	4.6	2.9						

Figure 4-1. Power Board Test Point and Component Locations

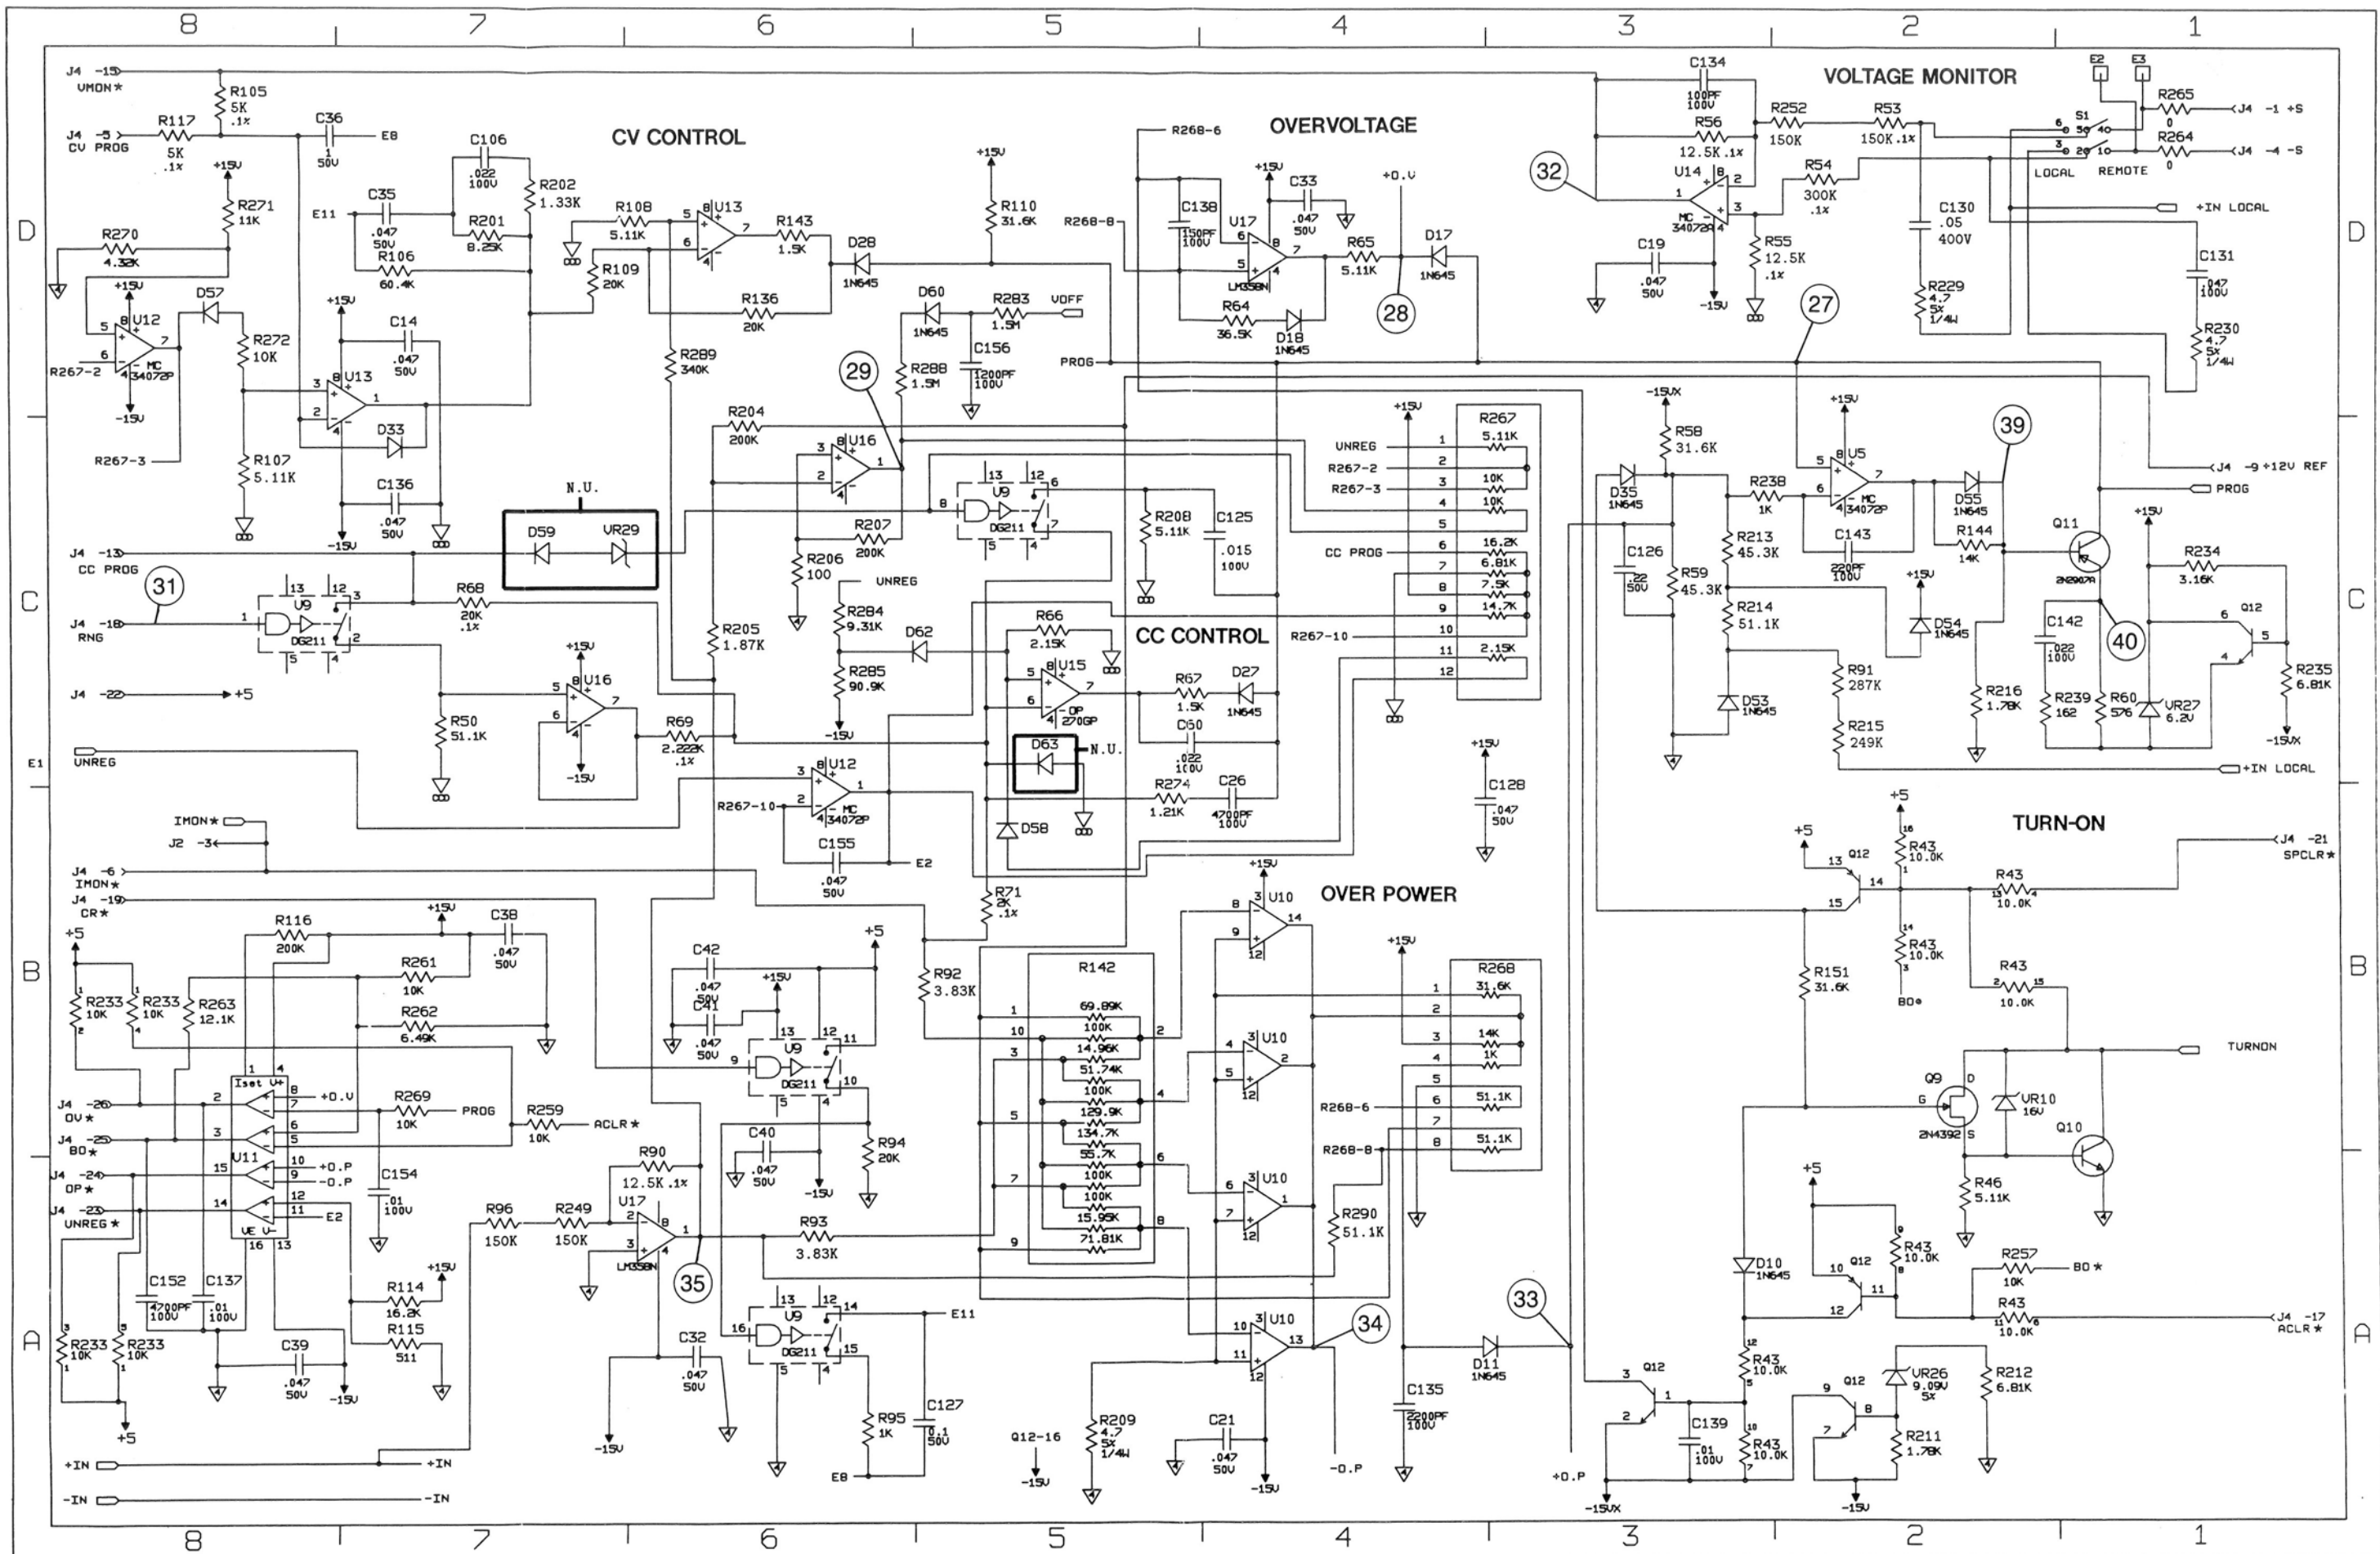


Figure 4-2. HP Model 60503B Power Board Schematic (Sheet 1 of 2)


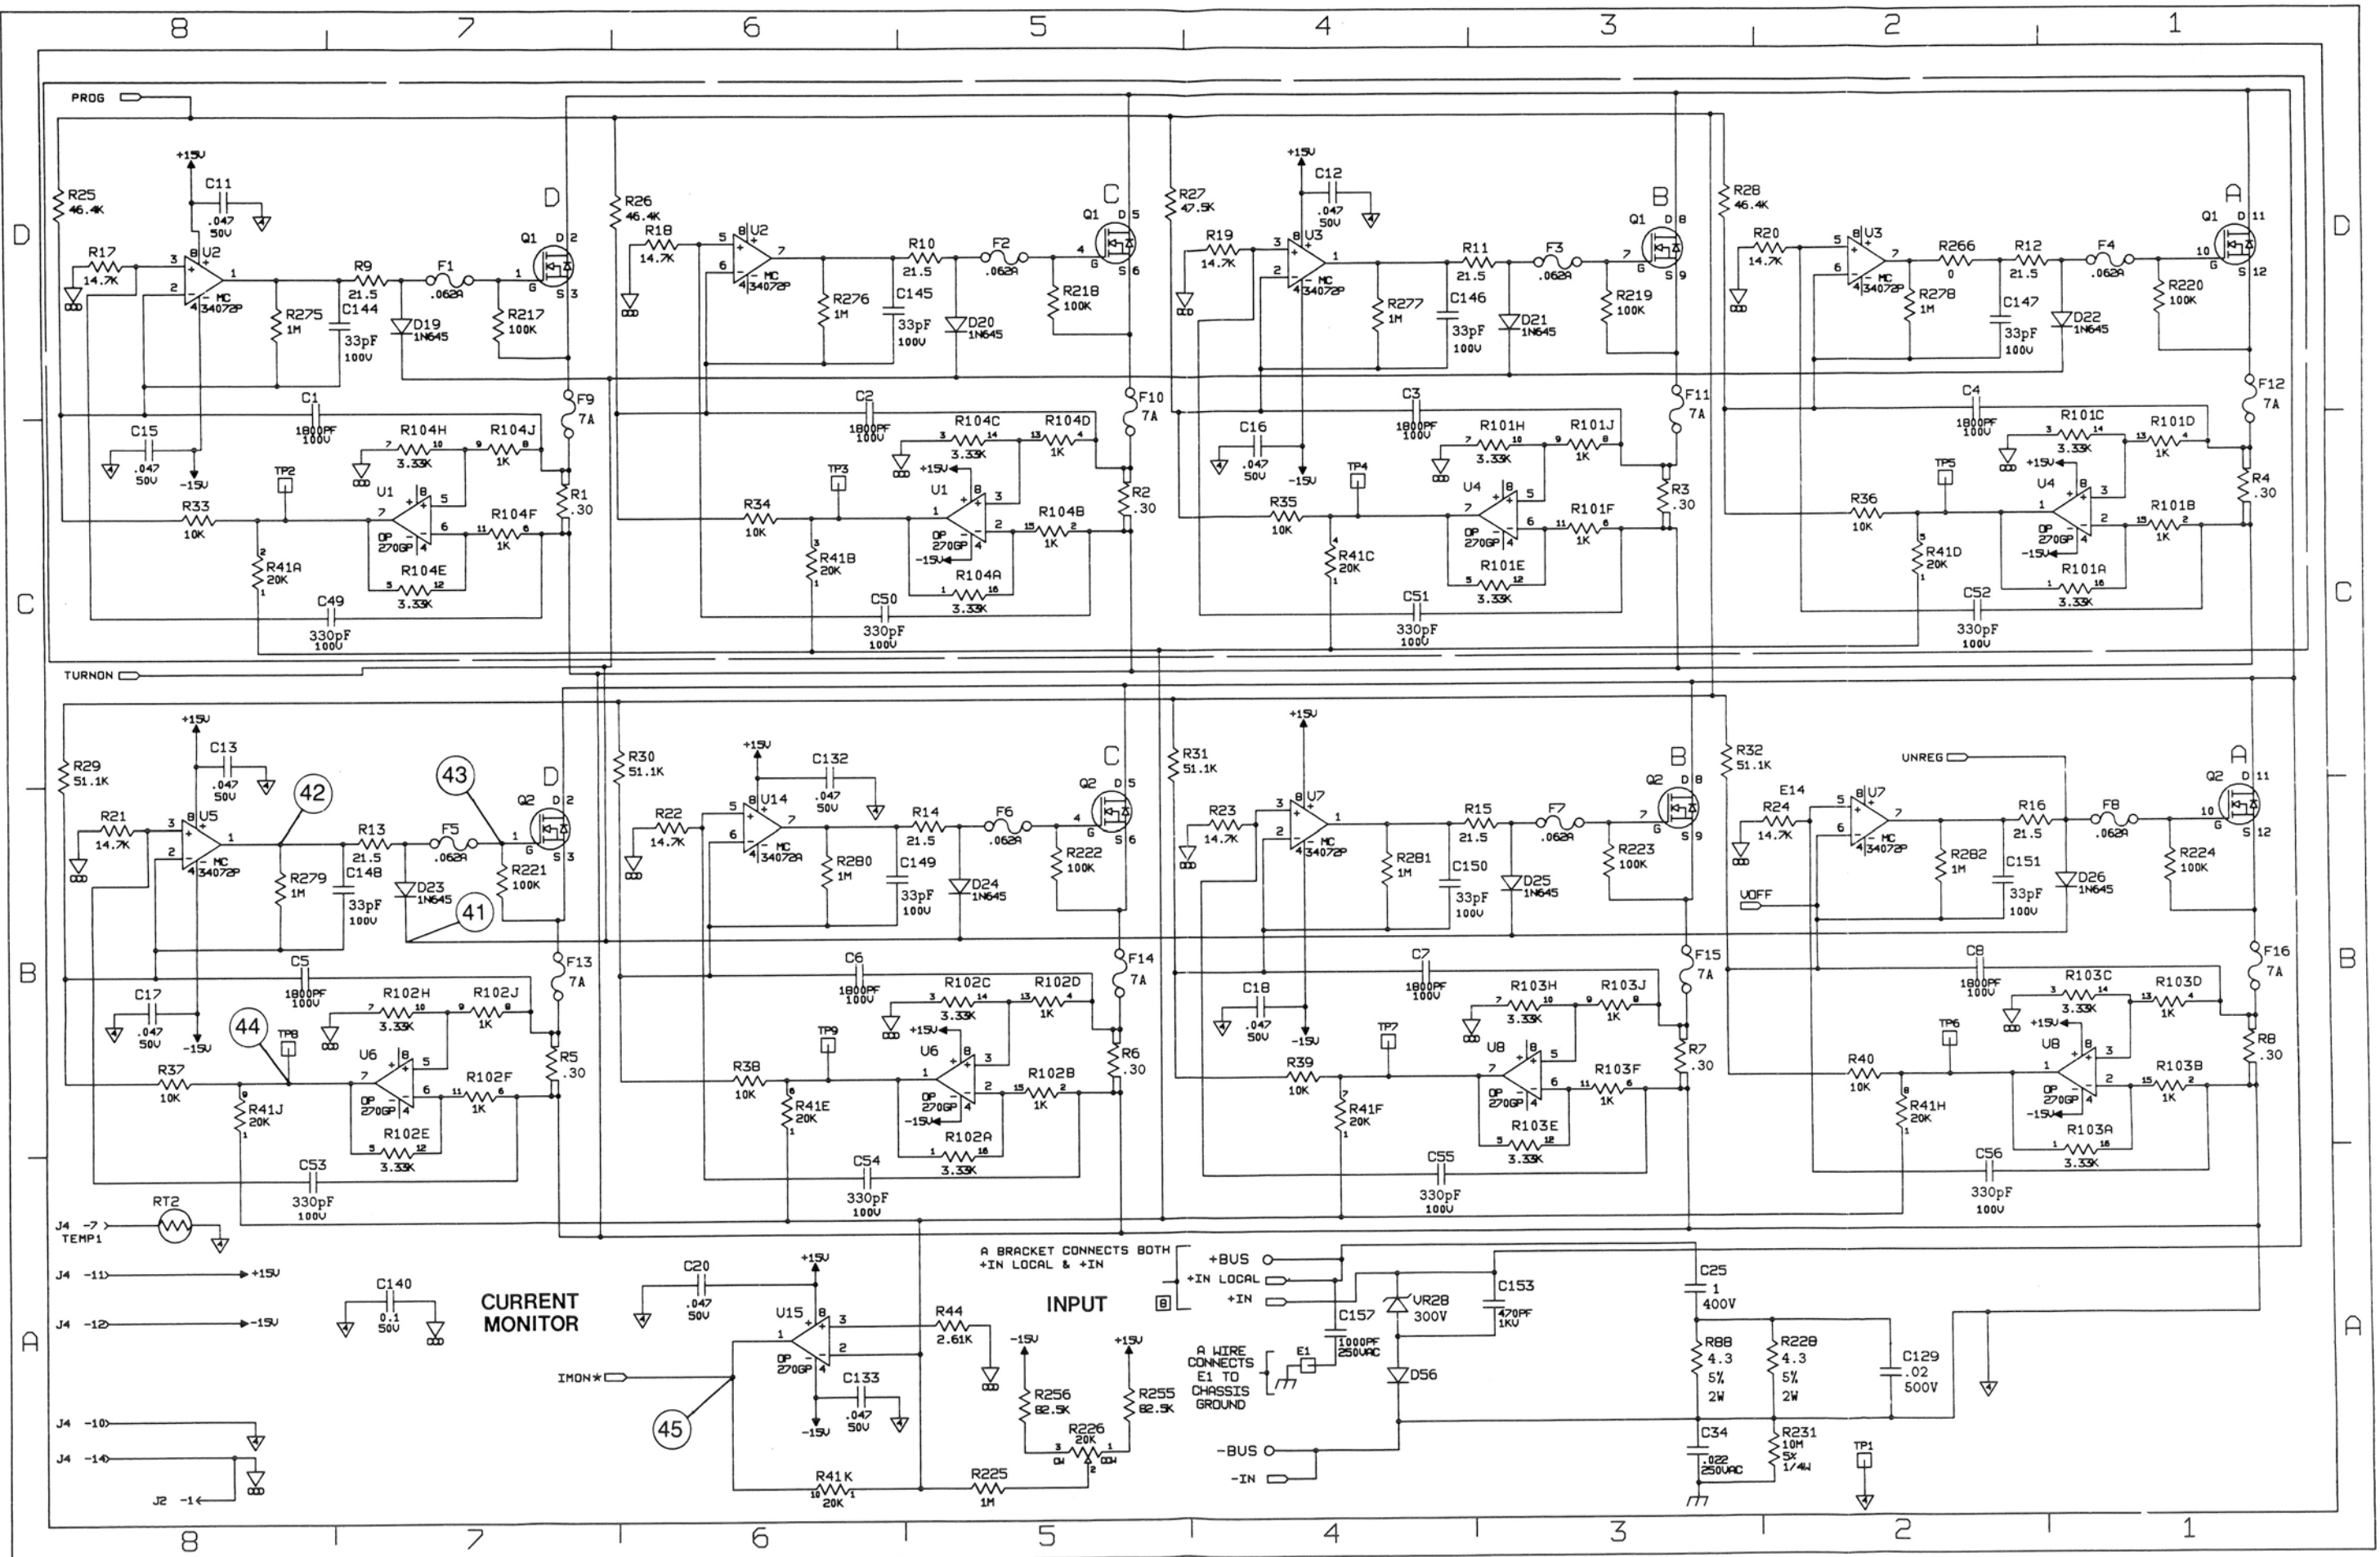


Figure 4-2. HP Model 60503B Power Board Schematic (Sheet 2 of 2)

"A" COORDINATES

"B" COORDINATES

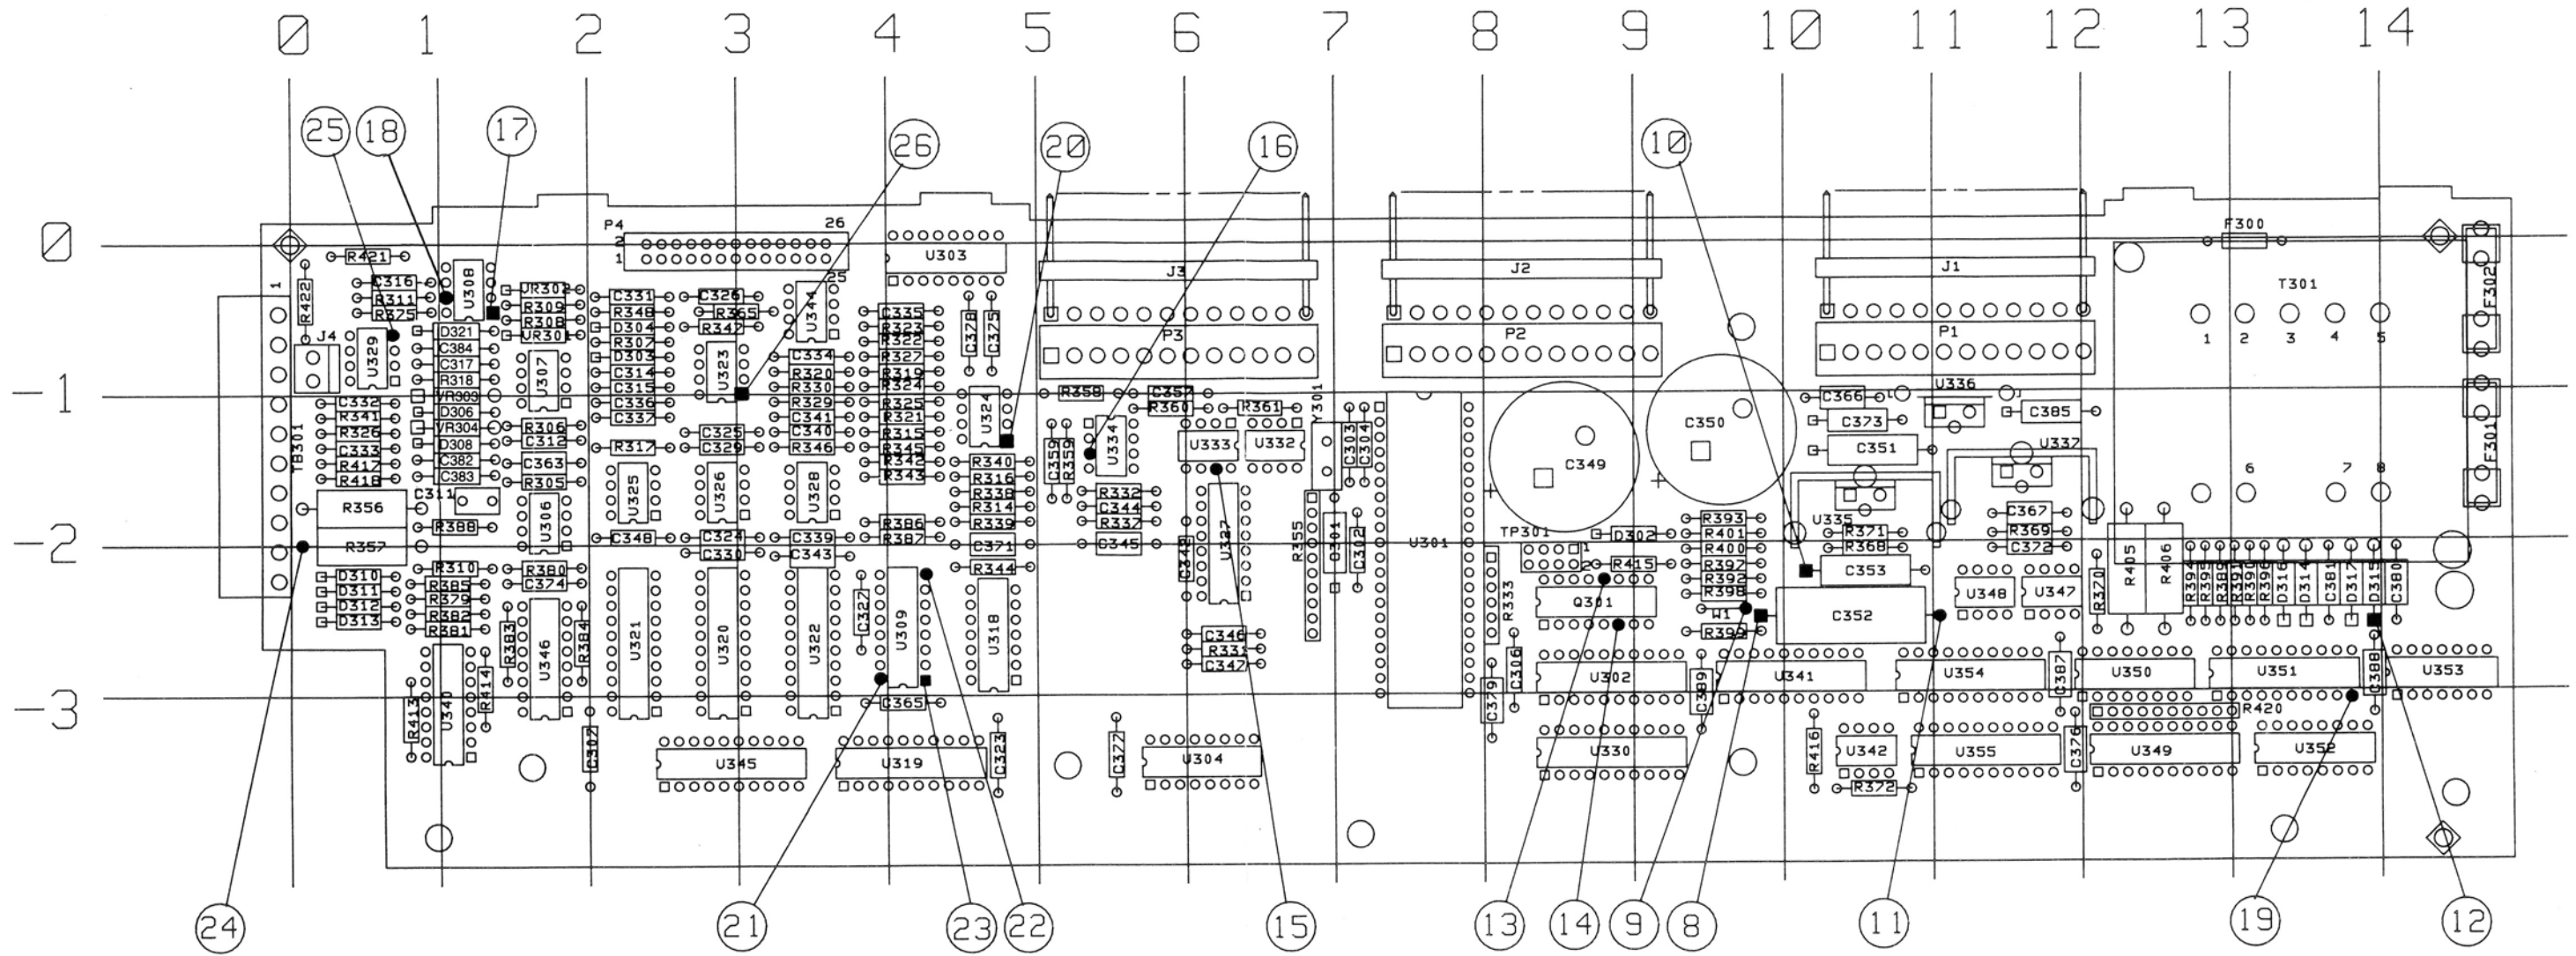

COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES		COORDINATES												
"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"	"A"	"B"											
C301	7.0	-2.3	C340	3.7	-1.2	C377	5.5	-3.6	F302	14.6	0.0	R324	4.3	-0.9	R361	6.7	-1.1	R398	9.3	-2.3	U319	3.7	-3.6	U350	12.0	-3.0
C302	7.1	-2.3	C341	3.2	-1.1	C378	4.5	-0.8	J1	10.3	-0.4	R325	3.8	-1.0	R365	2.7	-0.4	R399	9.3	-2.6	U320	3.0	-3.1	U351	12.9	-3.0
C303	7.1	-1.6	C342	6.0	-1.8	C379	8.0	-2.8	J2	7.4	-0.4	R326	0.2	-1.2	R368	10.3	-2.0	R400	9.8	-2.0	U321	2.4	-3.1	U352	13.2	-3.5
C304	7.2	-1.6	C343	3.7	-2.0	C380	14.1	-2.0	J3	5.1	-0.4	R327	3.8	-0.7	R369	11.4	-1.9	R401	9.3	-1.9	U322	3.6	-3.1	U353	14.1	-3.0
C306	8.2	-3.1	C344	5.8	-1.7	C381	13.6	-2.5	J4	0.1	-0.9	R329	3.7	-1.0	R370	12.1	-2.6	R405	12.3	-2.6	U323	3.0	-1.0	U354	10.8	-3.0
C307	2.0	-3.6	C345	5.8	-2.0	C382	0.8	-1.3	P1	10.3	-0.7	R330	3.2	-0.9	R371	10.8	-1.9	R406	12.5	-1.8	U324	4.8	-1.3	U355	10.9	-3.5
C311	1.1	-1.7	C346	6.0	-2.6	C383	0.8	-1.4	P2	7.4	-0.7	R331	6.0	-2.7	R372	10.8	-3.6	R413	0.8	-3.4	U325	2.4	-1.8	VR301	1.4	-0.6
C312	1.9	-1.3	C347	6.0	-2.8	C384	0.8	-0.6	P3	5.1	-0.7	R332	5.8	-1.6	R375	0.4	-0.4	R414	1.3	-2.7	U326	3.0	-1.8	VR302	1.4	-0.3
C314	2.5	-0.8	C348	2.5	-1.9	C385	11.5	-1.1	P4	2.4	-0.1	R333	8.0	-2.1	R379	0.8	-2.3	R415	9.2	-2.1	U327	6.4	-2.3	VR303	0.8	-0.9
C315	2.0	-0.9	C349	8.4	-1.5	C387	11.8	-2.6	Q301	8.4	-2.5	R337	5.8	-1.8	R380	1.9	-2.1	R416	10.2	-3.1	U328	3.6	-1.8	VR304	0.8	-1.1
C317	0.8	-0.7	C350	9.4	-1.4	C388	13.9	-2.6	R305	1.4	-1.5	R338	4.4	-1.6	R381	0.8	-2.5	R417	0.2	-1.4	U329	0.7	-0.9	W1	9.4	-2.4
C316	0.9	-0.2	C351	10.2	-1.4	C389	9.4	-2.7	R306	1.9	-1.2	R339	4.9	-1.8	R382	0.8	-2.4	R418	0.2	-1.5	U330	8.4	-3.5	Y301	6.9	-1.5
C317	0.8	-0.7	C352	9.8	-2.5	D302	8.7	-1.9	R307	2.0	-0.6	R340	4.4	-1.4	R383	1.4	-2.4	R420	12.1	-3.1	U332	6.7	-1.2			
C323	4.7	-3.6	C353	10.1	-2.2	D303	2.0	-0.7	R308	1.4	-0.5	R341	0.2	-1.1	R384	1.9	-2.9	R421	0.7	-0.0	U333	6.3	-1.2			
C324	2.6	-1.9	C357	6.1	-1.0	D304	2.0	-0.5	R309	1.9	-0.4	R342	4.3	-1.4	R385	1.3	-2.2	R422	0.1	-0.1	U334	5.3	-1.2			
C325	2.6	-1.2	C358	6.7	-1.0	D306	0.8	-1.0	R310	0.8	-2.1	R343	3.8	-1.5	R386	4.3	-1.8	T301	12.8	-0.5	U335	10.5	-1.8			
C326	2.6	-0.3	C359	5.1	-1.7	D308	0.8	-1.2	R311	0.4	-0.3	R344	4.4	-2.1	R387	4.3	-1.9	TP301	-0.0	-2.2	U336	11.1	-1.2			
C327	3.8	-2.7	C363	1.9	-1.4	D310	0.2	-2.2	R314	4.9	-1.7	R345	3.8	-1.3	R388	1.3	-1.8	R390	8.6	-2.0	U337	11.6	-1.6			
C329	2.6	-1.3	C365	4.3	-3.0	D311	0.2	-2.3	R315	4.3	-1.2	R346	3.2	-1.3	R389	12.9	-2.0	U301	7.3	-1.1	U340	1.2	-3.4			
C330	3.1	-2.0	C366	10.6	-1.0	D312	0.2	-2.4	R316	4.4	-1.5	R347	3.1	-0.5	R390	13.1	-2.5	U302	8.4	-3.0	U341	9.6	-3.0			
C331	2.5	-0.3	C367	11.4	-1.8	D313	0.2	-2.5	R317	2.5	-1.3	R348	2.5	-0.4	R391	13.0	-2.0	U303	4.0	-0.2	U342	10.4	-3.5			
C332	0.2	-1.0	C371	4.4	-2.0	D314	13.5	-2.5	R318	0.8	-0.8	R349	6.8	-1.7	R392	9.3	-2.2	U304	5.7	-3.6	U344	3.6	-0.6			
C333	0.2	-1.3	C372	11.4	-2.0	D315	13.9	-2.5	R319	4.3	-0.8	R355	0.0	-1.7	R393	9.9	-1.8	U306	1.8	-2.0	U345	2.5	-3.6			
C334	3.7	-0.7	C373	10.2	-1.2	D316	13.3	-2.5	R320	3.7	-0.8	R356	0.0	-1.7	R394	12.7	-2.5	U307	1.8	-1.0	U346	1.8	-3.1			
C335	3.8	-0.4	C374	1.9	-2.2	D317	13.8	-2.5	R321	3.8	-1.1	R358	5.0	-1.0	R395	12.8	-2.5	U308	1.3	-0.4	U347	11.6	-2.5			
C336	2.0	-1.0	C375	4.7	-0.8	D321	0.8	0.5	R322	3.8	-0.6	R359	5.2	-1.7	R396	13.2	-2.5	U309	4.2	-2.9	U348	11.2	-2.5			
C337	2.0	-1.1	C376	11.9	-3.6	F300	13.3	-0.0	R323	3.8	-0.5	R360	6.1	-1.1	R397	9.3	-2.1	U318	4.8	-2.9	U349	12.1	-3.5			
C339	3.2	-1.9				F301	14.6	-1.7																		

Figure 4-3. Control Board Test Point and Component Locations

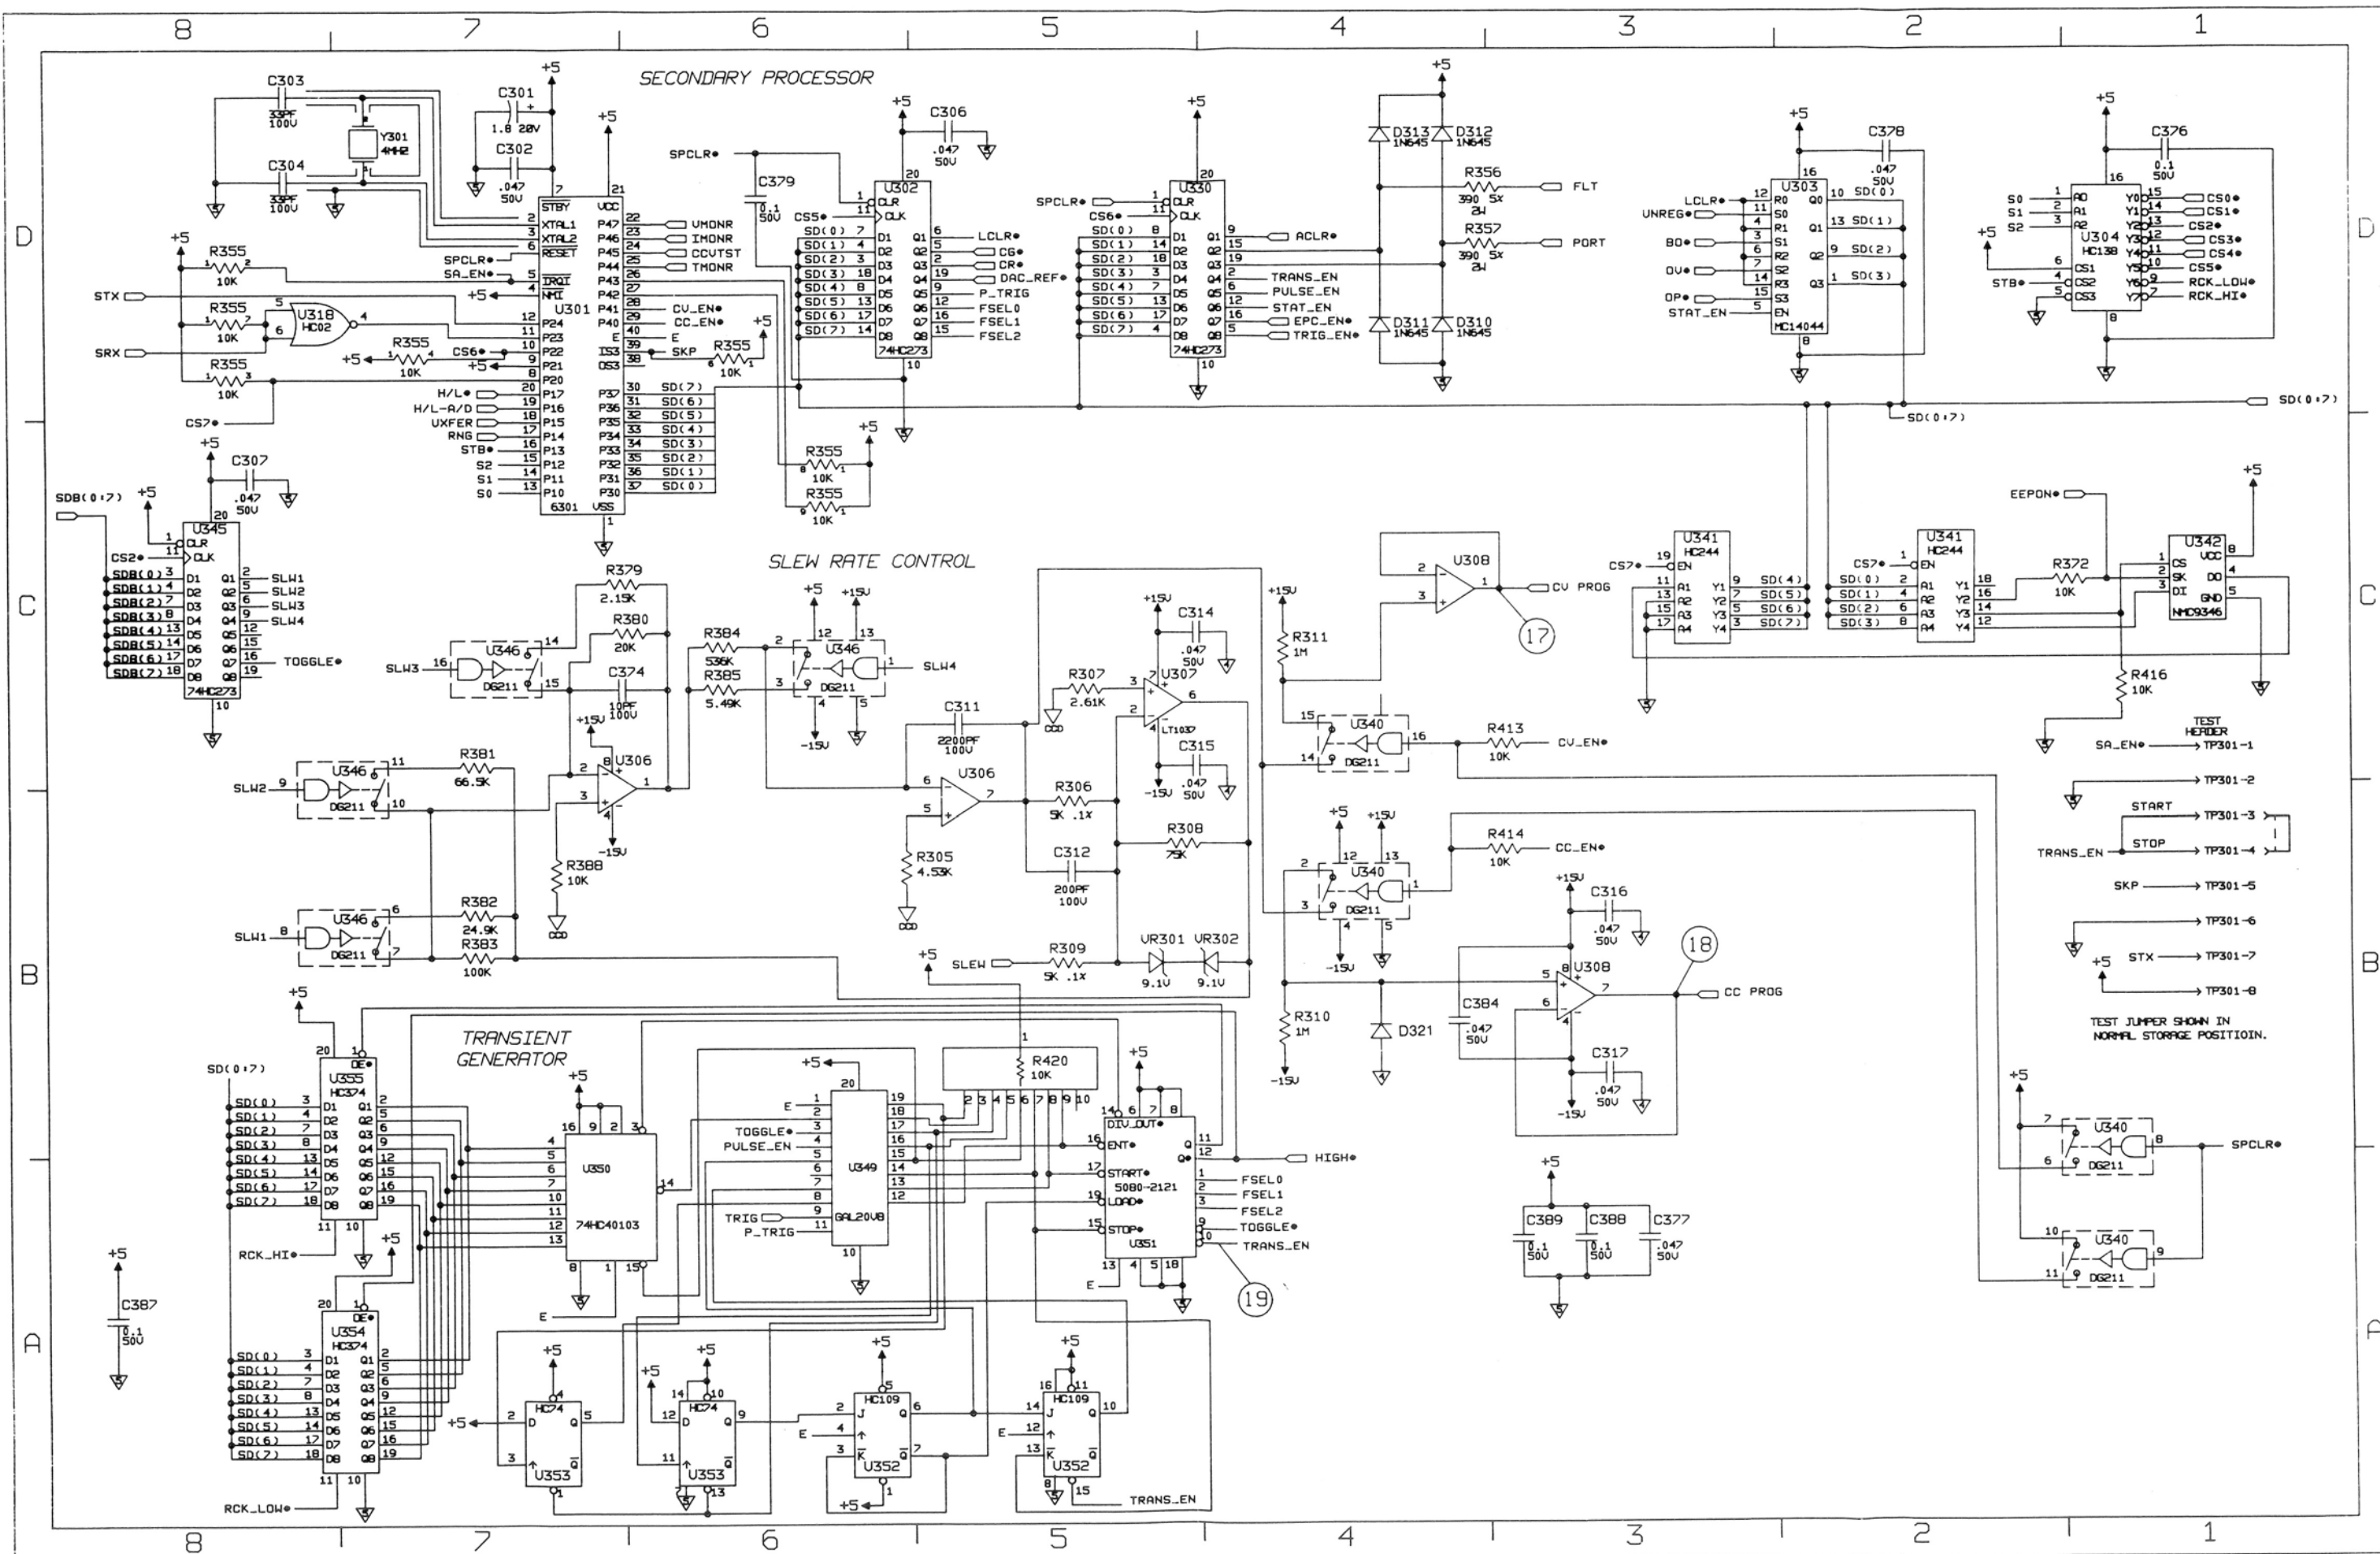


Figure 4-4. HP Model 60503B Control Board Schematic (sheet 1 of 3)


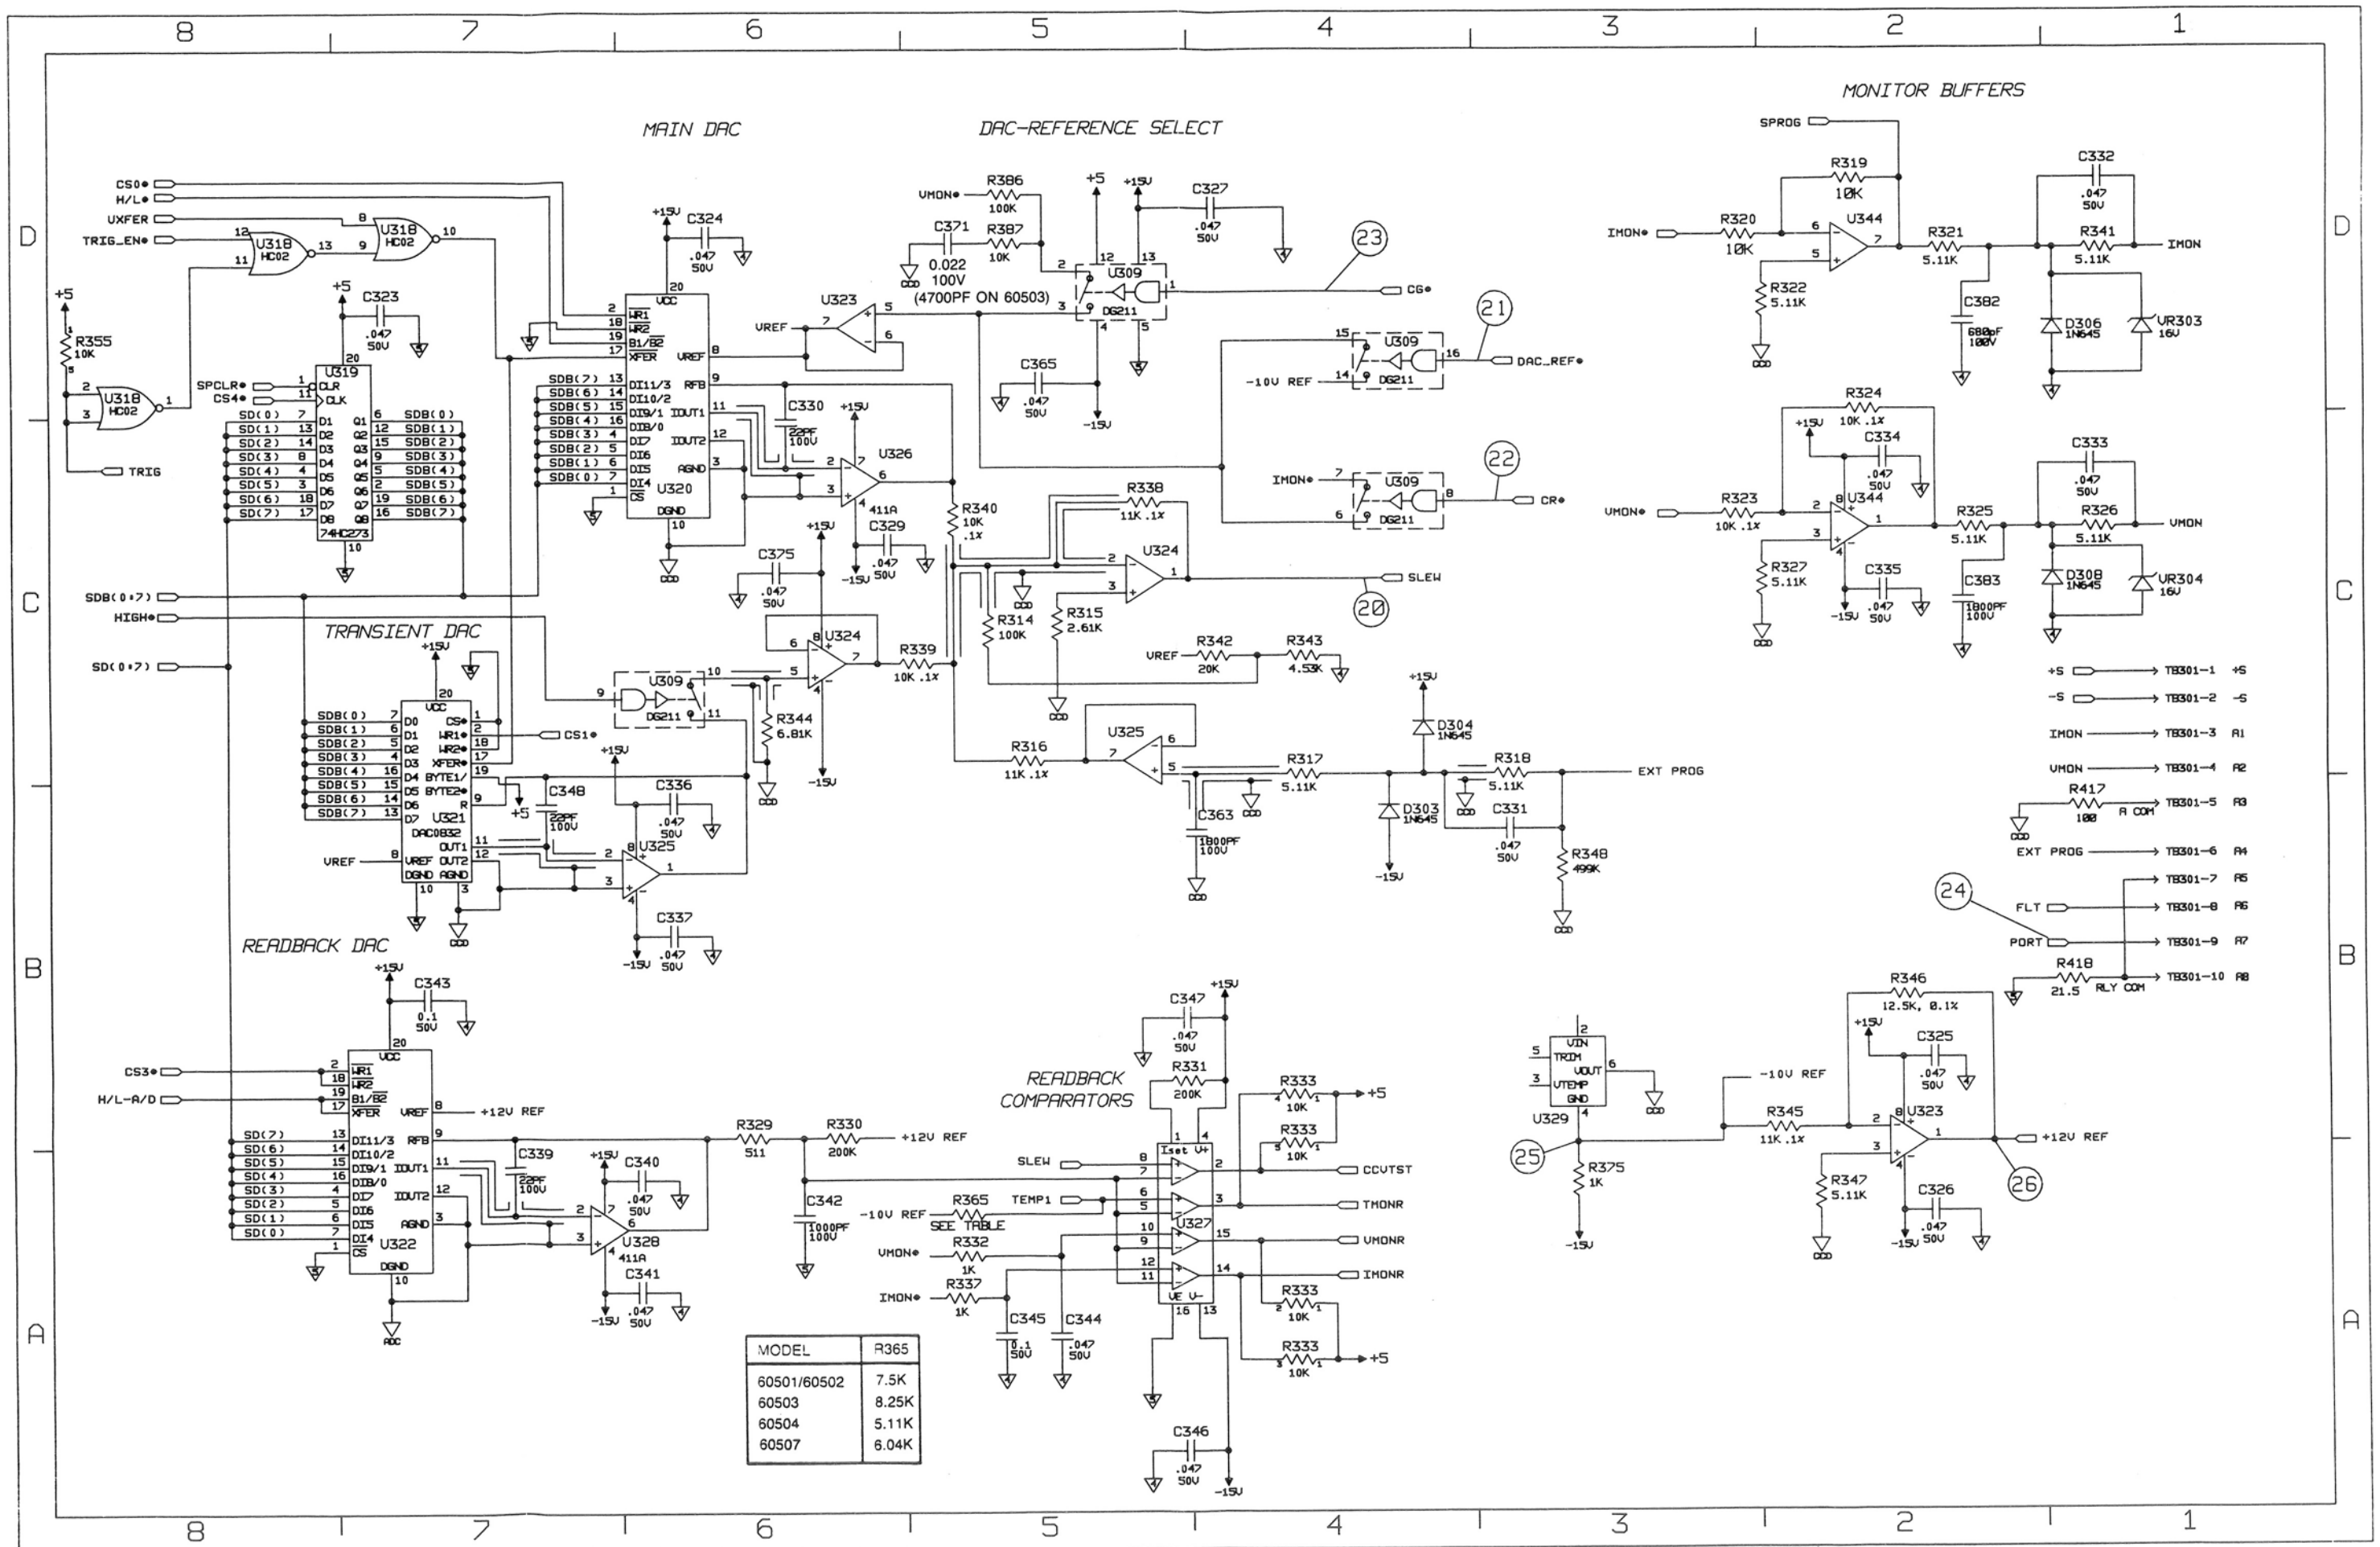


Figure 4-4. HP Model 60503B Control Board Schematic (sheet 2 of 3)

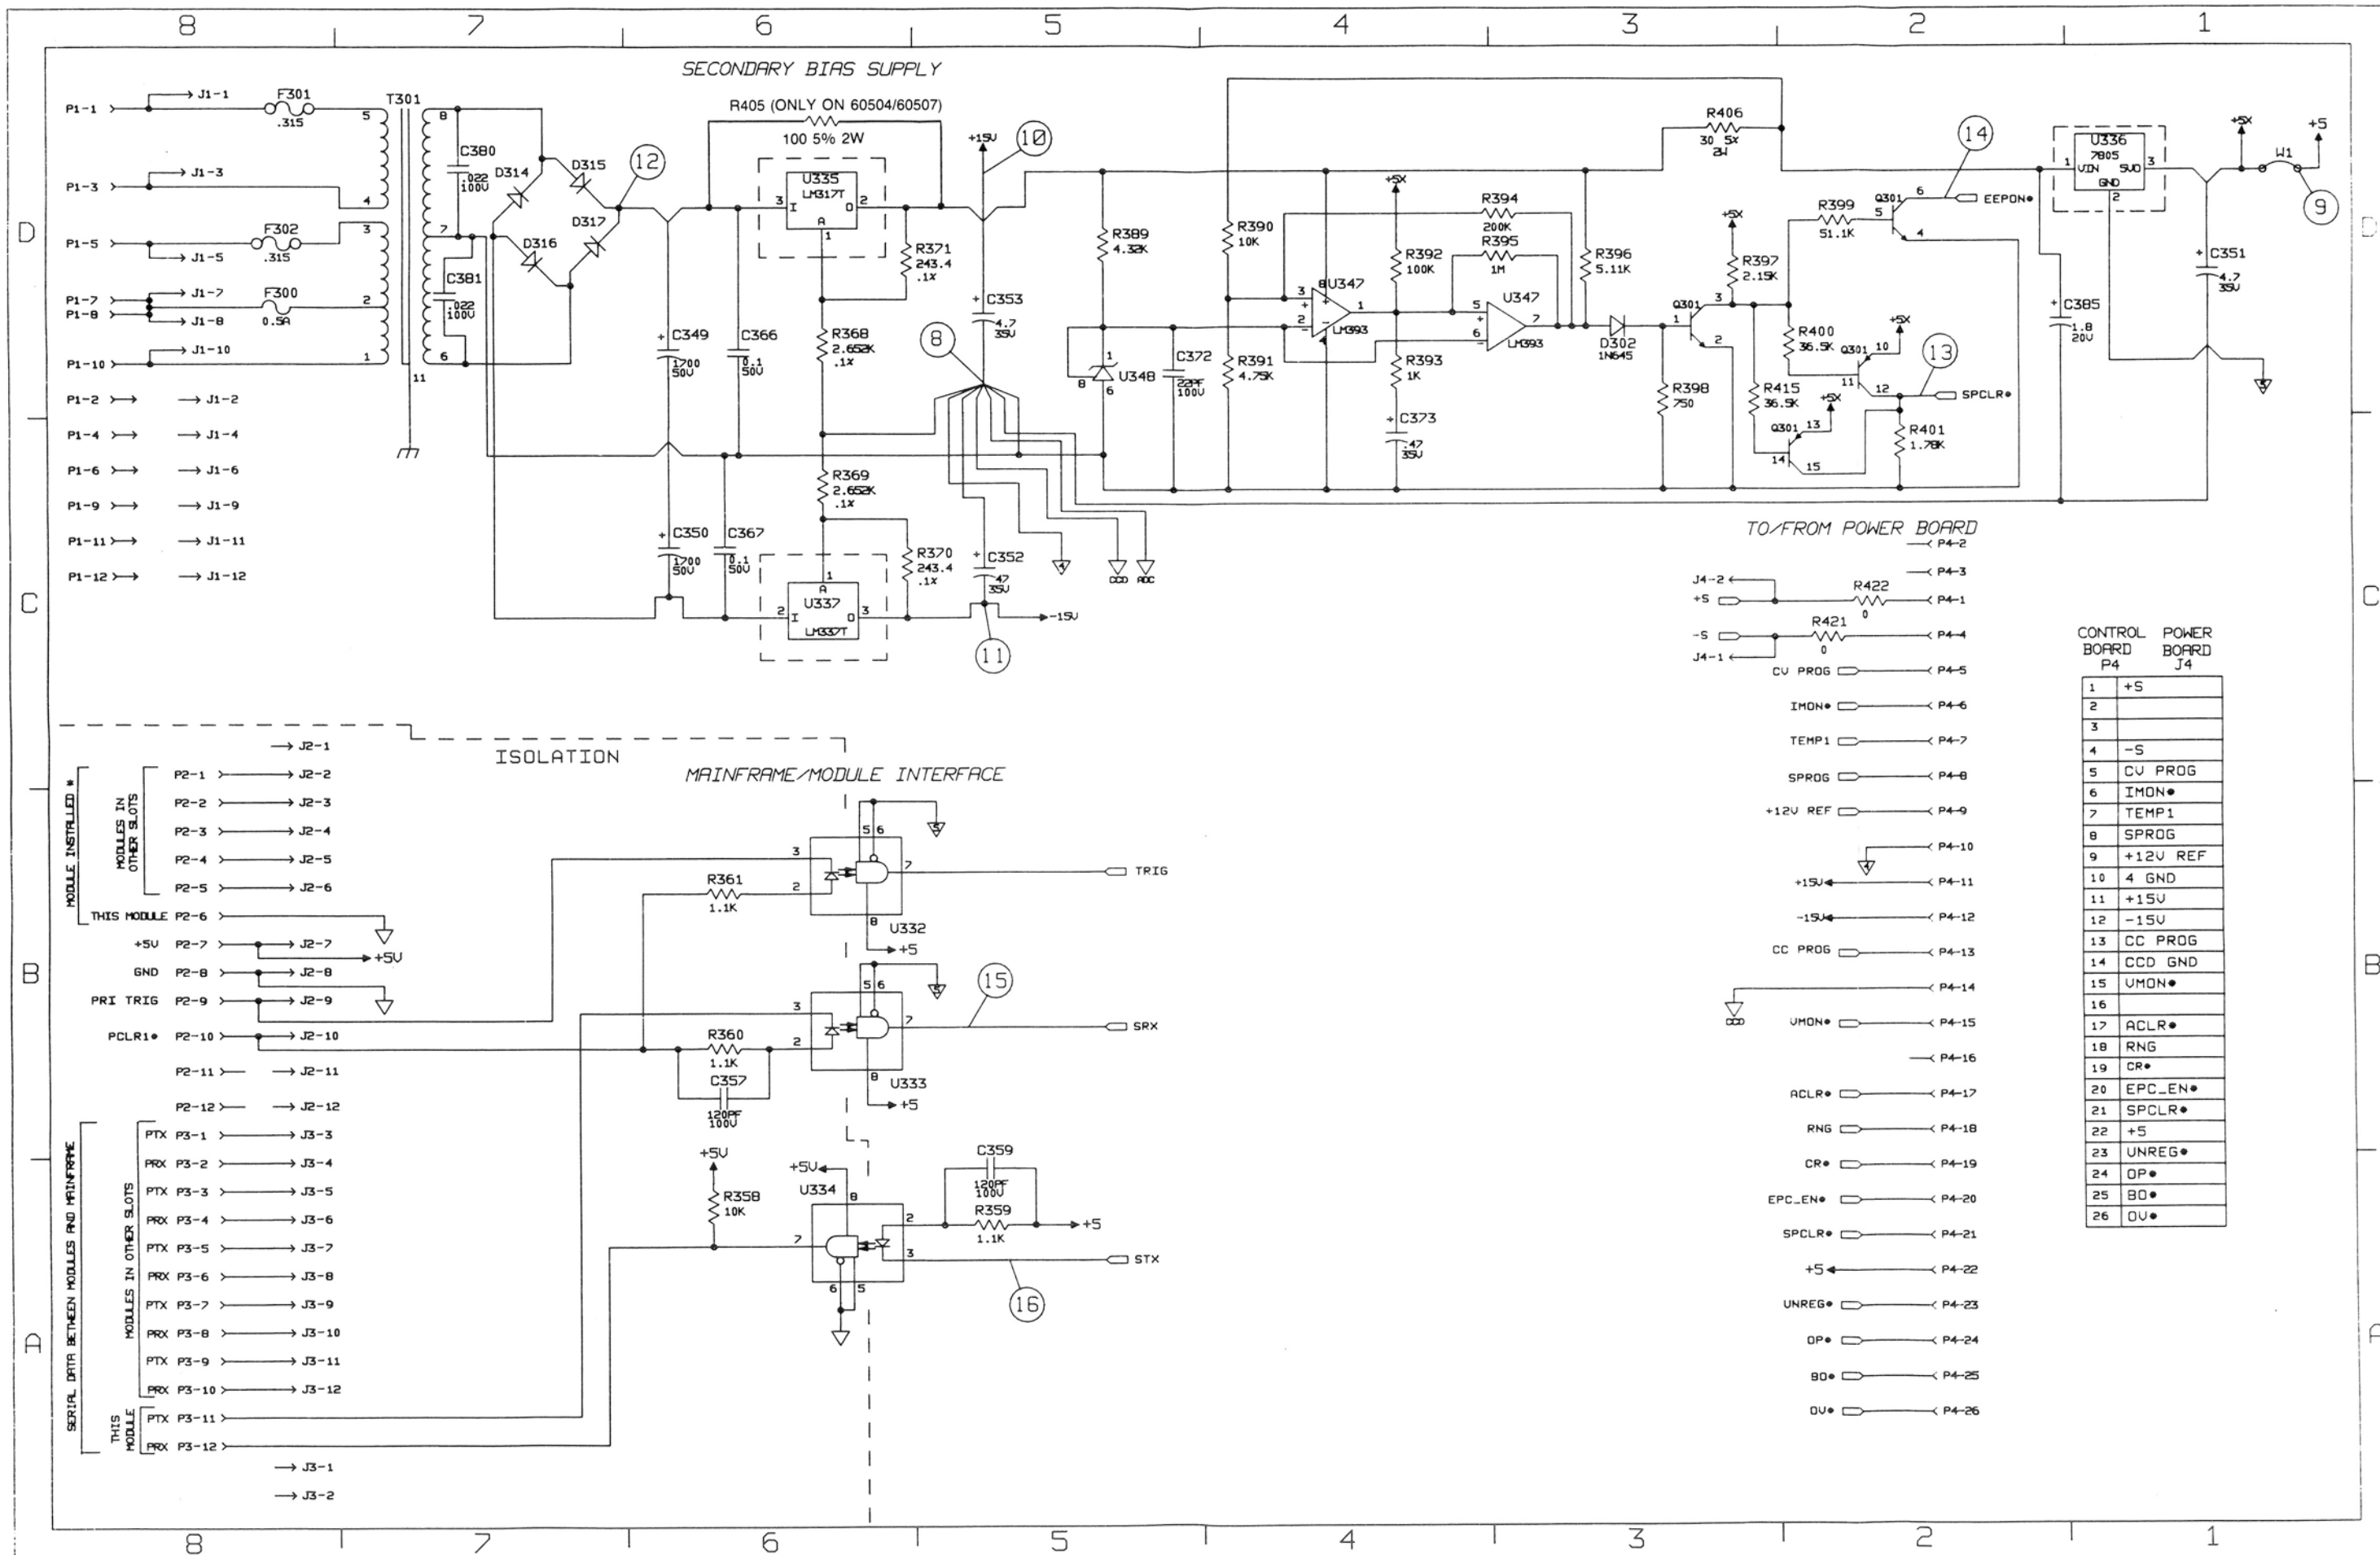

CONTROL BOARD P4	POWER BOARD J4
1	+S
2	
3	
4	-S
5	CV PROG
6	IMDN*
7	TEMP1
8	SPROG
9	+12V REF
10	4 GND
11	+15V
12	-15V
13	CC PROG
14	CCD GND
15	UMDN*
16	
17	ACLR*
18	RNG
19	CR*
20	EPC_EN*
21	SPCLR*
22	+S
23	UNREG*
24	OP*
25	BO*
26	OU*

Figure 4-4. HP Model 60503B Control Board Schematic (sheet 3 of 3)

HP Sales and Support Office

For more information, call your local HP Sales Office listed in the telephone directory or an HP Regional Office listed below for the location of your nearest sales/support office. Ask for the Electronic Instruments Department

Or contact:

United States of America:
Hewlett-Packard Company
4 Choke Cherry Road
Roakville, MD 20850
(301) 670-4300

Hewlett-Packard Company
5201 Tollview Drive
Rolling Meadows, IL 60008
(708) 255-9800

Hewlett-Packard Company
1421 S. Manhattan Ave.
Fullerton, CA 92631
(714) 999-6700

Hewlett-Packard Company
2000 South Park Place
Atlanta, GA 30339
(404) 980-7351

Canada:
Hewlett-Packard Ltd.
6877 Goreway Drive
Mississauga, Ontario L4V 1M8
(416) 678-9430

Australia/New Zealand:
Hewlett-Packard Australia Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
Australia (A.C.N. 004 394 763)
(03) 895-2895

Europe/Africa/Middle East
Hewlett-Packard
European Marketing Centre
P.O. Box 999
1180 AZ Amstelveen
The Netherlands

Far East:
Hewlett-Packard Asia Ltd.
22/F EIE Tower, Bond Centre
89 Queensway
Central, Hong Kong
(852) 848-7777

Japan:
Yokogawa-Hewlett-Packard Ltd.
9-1 Takakura-cho
Hahioji
Tokyo 192, Japan
0426-42-1231

Latin America:
Hewlett-Packard
Latin American Region Headquarters
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 Mexico, D.F.
(525) 202-0155

MANUAL CHANGES
Model 60503B Electronic Load Module
Service Manual HP P/N 60503-90009
Change Date 4/6/93

Make all the corrections according to ERRATA below, then check the following table for your module's serial number and enter any listed changes.

SERIAL NUMBER		MAKE CHANGES
prefix	numbers	
ALL 3252A	00456-up	ERRATA 1

ERRATA:

On the title page, indicate that this manual also applies to units with the following serial numbers

HP 60503B: 3212A-00246 and above

CHANGE 1:

In the parts list on page 3-4 and on the control board schematic, change R385 to 4.99K 1% 1/8W HP p/n 0698-3279. Also change R384 to 499K 1% 1/8W HP p/n 0698-3215.

This change is recommended for all previous HP 60503B units if replacement is required for R384 and R385.