


ESP 6 Pin

Vcc, Gnd, D0, D1, D2, D3, RX, TX, RST, CS

arduino.cc/en/Heading/MiniBooTLoader

+24V
(needed for equip.)

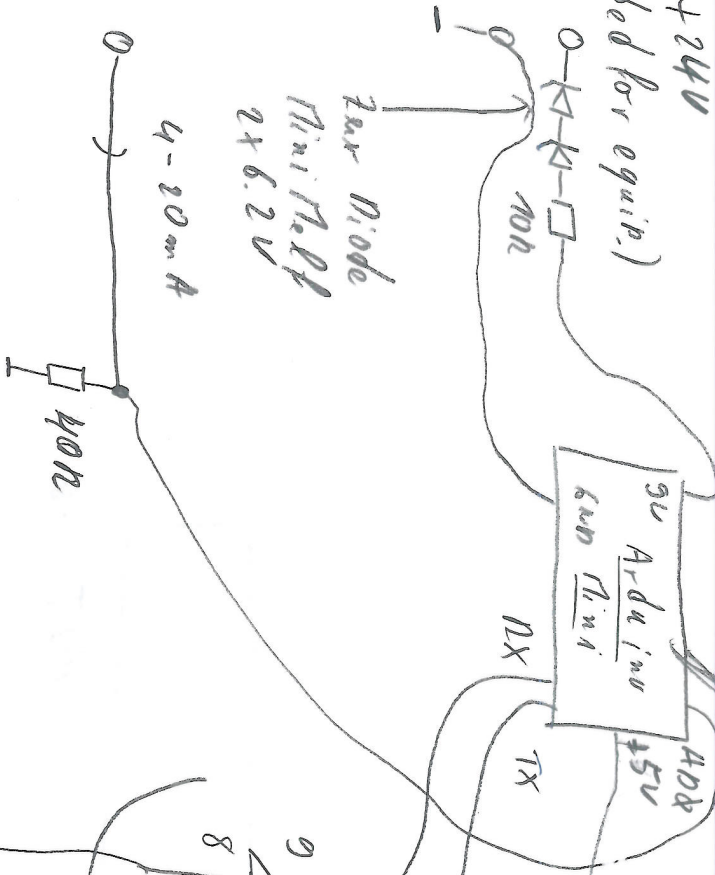

RS232

Max 232

