


# MAXXER 300

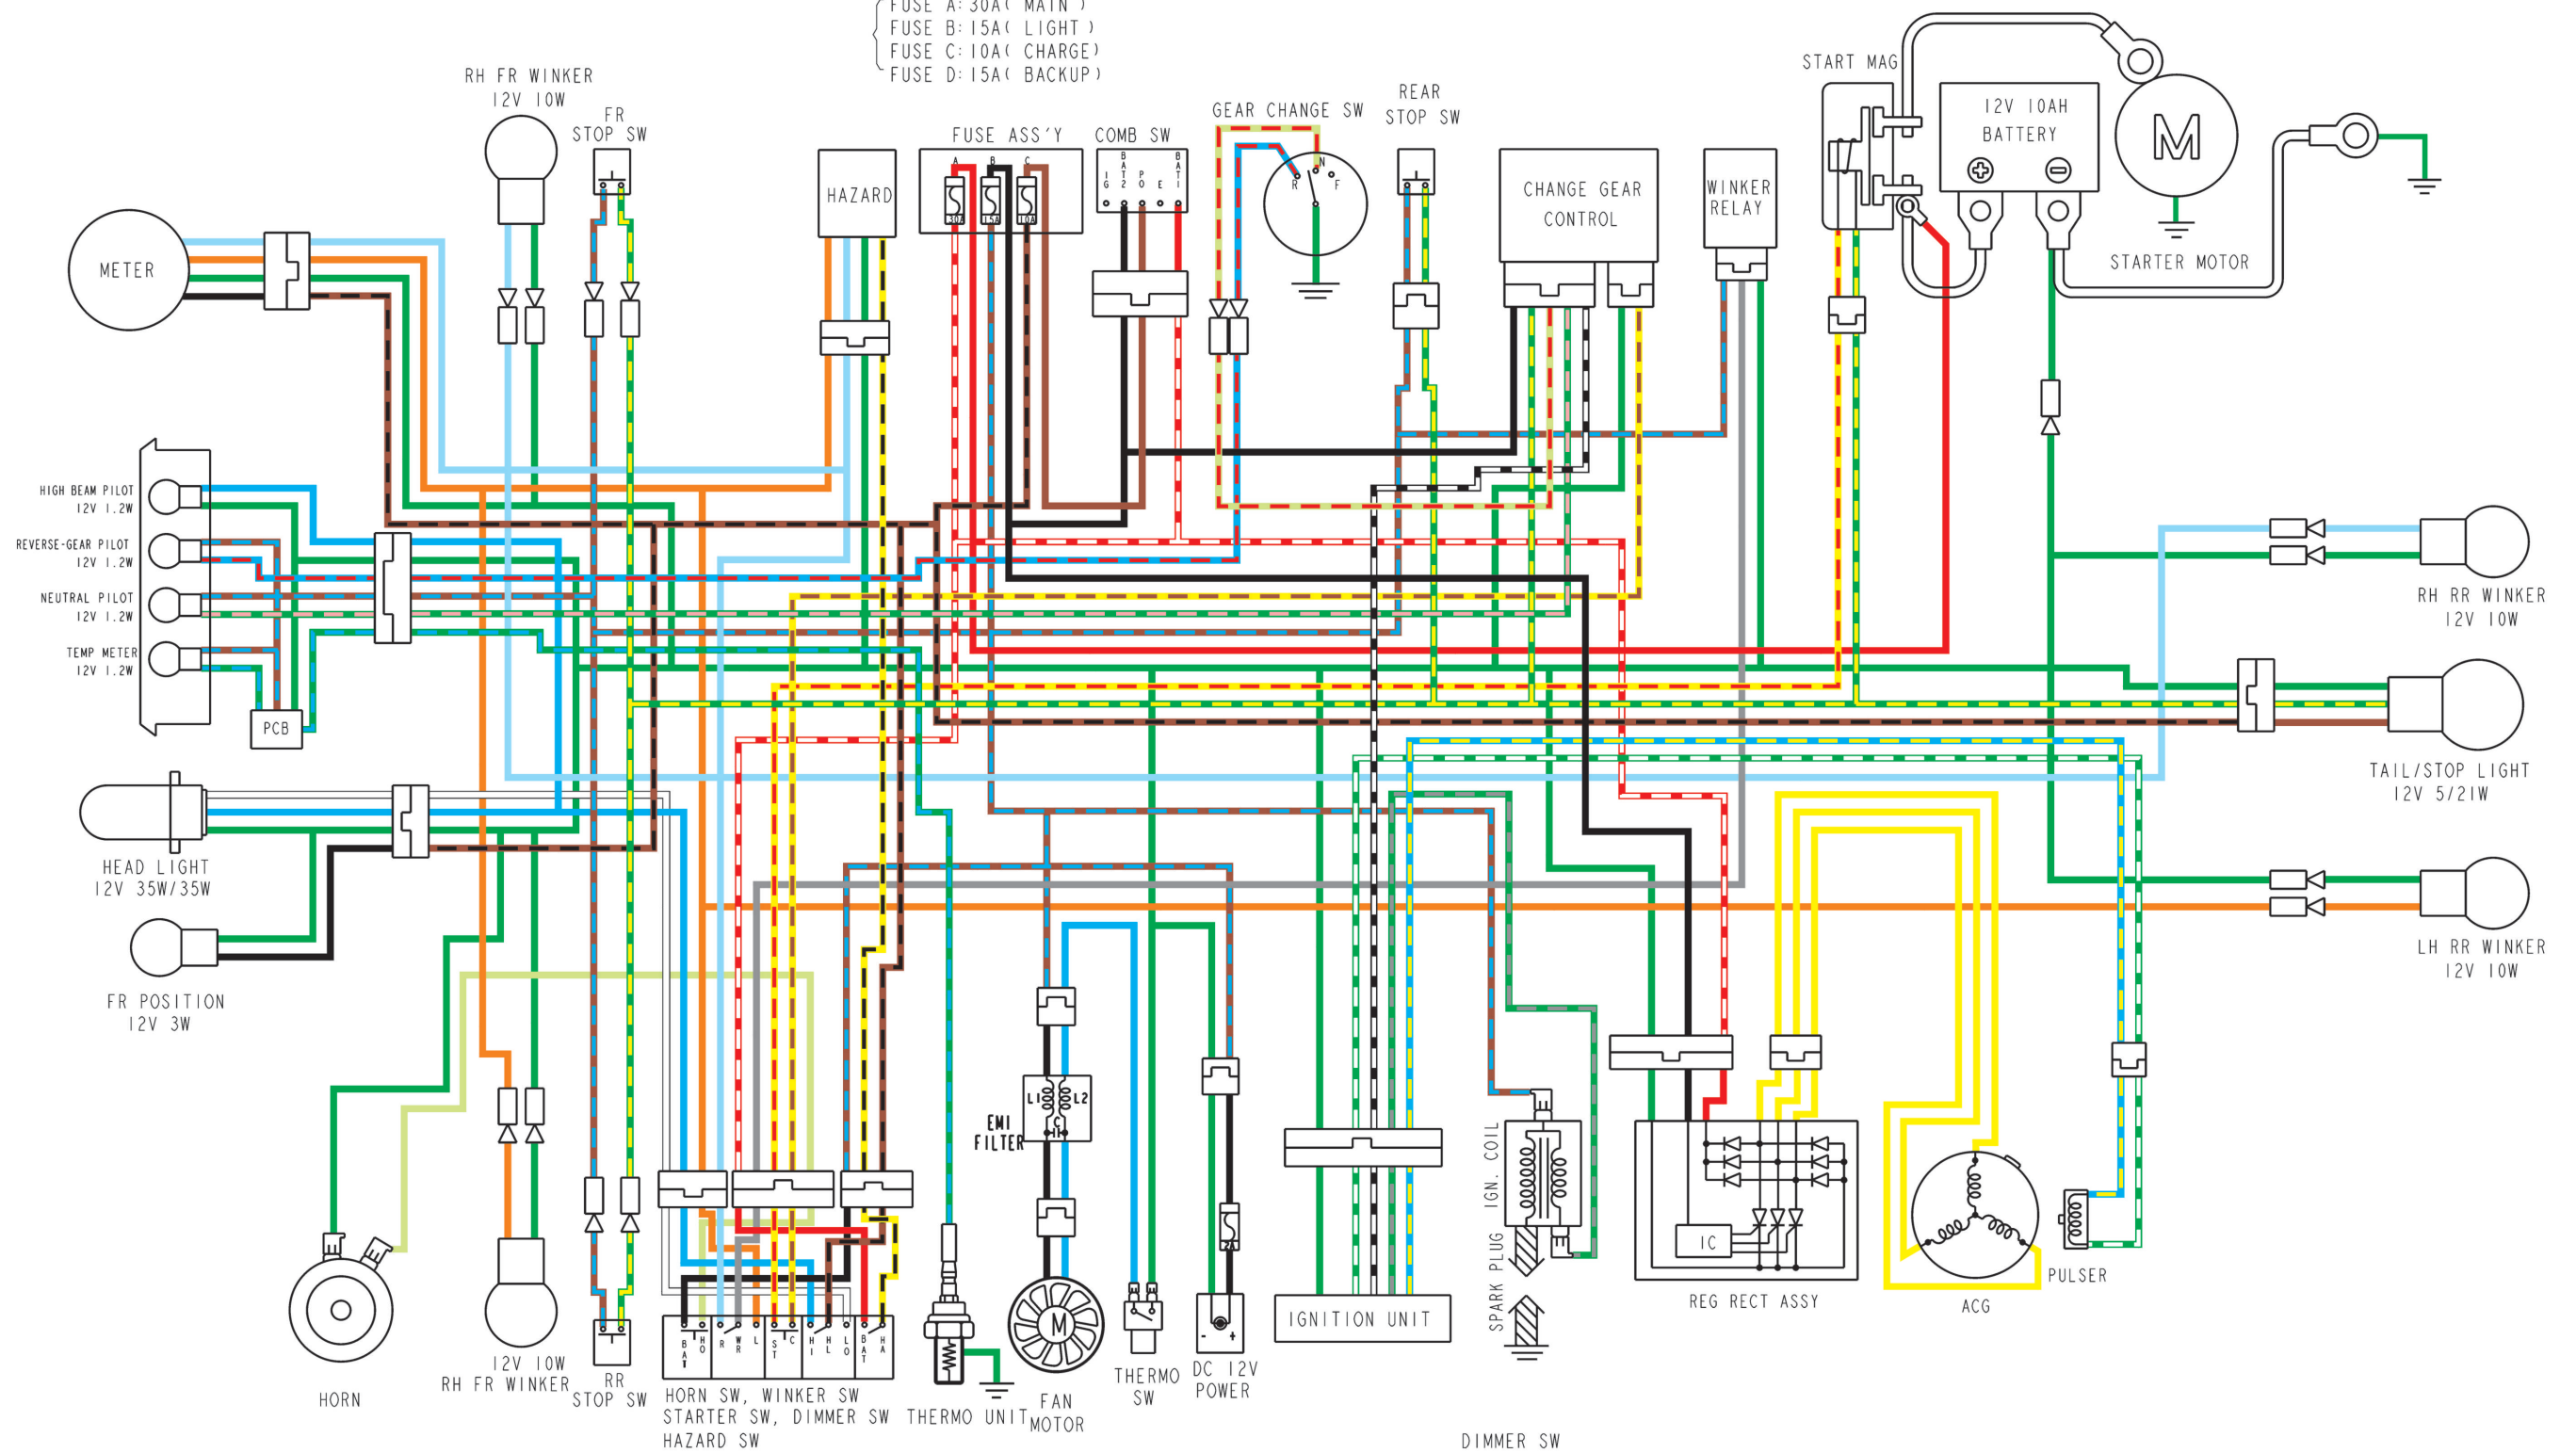

FUSE A: 30A ( MAIN )  
 FUSE B: 15A ( LIGHT )  
 FUSE C: 10A ( CHARGE )  
 FUSE D: 15A ( BACKUP )



HORN SW

	HO	BAT
FREE		
PUSH	○	○
COLOR	LG	B

WINKER SW

	R	L	WR
L		○	
R	○		
COLOR	SB	O	GR

START SW

	ST	C
FREE		
PUSH	○	○
COLOR	Y/R/Y/BR	

DIMMER SW

	HL	LO	HI
☰	○		
☷	○	○	
COLOR	Br/L	W	L

HAZARD SW

	BAT	HA
△	○	○
●		
COLOR	R/W/Y/B	

COMB SW

	IG	E	BAT1	BAT2	PO
OFF	○	○			
ON			○	○	
PO			○	○	○
COLOR	B/W	G	R	B	BR

B	BLACK	BR	BROWN
G	GREEN	GR	GRAY
O	ORANGE	SB	SKY BLUE
L	BLUE	LG	LIGHT GREEN
W	WHITE		
Y	YELLOW		
R	RED		

- YELLOW
- SKY BLUE
- GREEN / RED
- BROWN / WHITE
- BLUE / YELLOW
- BLUE
- GRAY
- BLACK / YELLOW
- BLUE / BLACK
- RED
- LIGHT GREEN
- YELLOW / WHITE
- BLACK / WHITE
- WHITE / YELLOW
- WHITE
- BLACK
- GREEN / BLUE
- RED / YELLOW
- GREEN
- BROWN
- BLUE / WHITE
- RED / YELLOW
- GREEN / YELLOW
- ORANGE
- BROWN / BLUE
- GREEN / WHITE
- WHITE / BLUE
- RED / BLACK
- BLACK / RED
- YELLOW / BLACK