

An additional extern status-LED, which shows the current state of the SmartXX, can be connected.