

PROSTAR

PHOTOVOLTAIC SYSTEM CONTROLLERS

OPERATOR'S MANUAL

MODEL RATINGS

	<u>PROSTAR-12</u>	<u>PROSTAR-20</u>	<u>PROSTAR-30</u>
Rated PV current	12A	20A	30A
Rated Load current	8A	16A	30A
System voltage:	12 and 24 volts, auto selected		
ProStar models included in this manual:	<ul style="list-style-type: none">• Standard• With LCD meter		

CONTENTS

1.0 GENERAL INFORMATION	2
2.0 QUICK START INSTRUCTIONS	3
3.0 INDICATORS	4
3.1 LED Indicators	4
3.2 Digital Meter & Disconnect	5
4.0 INSTALLATION INSTRUCTIONS	6
4.1 Polarity Protection	6
4.2 Installation Procedure	7
5.0 OPERATION	10
5.1 Controller Operation	10
5.2 Controller Functions	10
5.3 Inspection and Maintenance	11
5.4 Troubleshooting.....	12
6.0 SPECIFICATIONS	15

1.0 GENERAL INFORMATION

Thank you for selecting the ProStar PV controller. The ProStar is a highly sophisticated controller using advanced technology and microprocessor control. The battery charging process has been optimized for longer battery life and improved system performance.

Many functions of the ProStar are unique. Although the ProStar is very simple to use, please take the time to read this operator's manual and become familiar with the controller. This will help you to make full use of the many advantages the ProStar can provide to your PV system.


PRECAUTIONS "Always Put Safety First"

- Always be very careful when working with batteries. Batteries can produce explosive hydrogen gas. A short-circuit can pull thousands of amps from the battery.

- Even though the system is only 12 or 24 volts, both the PV array and battery can contain lethal amounts of electrical power.
- Do not splash water on the controller, do not allow water to enter the ventilation slots.
- Do not touch the heatsink. Under certain operating conditions, the heatsink can become hot.
- Always install the controller in a vertical position. Ensure adequate space for ventilation, and never block the ventilation slots.
- Do not short-circuit the PV array while connected to the controller. This will damage the controller.
- Do not exceed the current ratings of the controller.

2.0 QUICK START INSTRUCTIONS

This section provides a brief overview of how to get started using the ProStar controller. However, please review the entire manual to ensure best performance and years of trouble-free service.

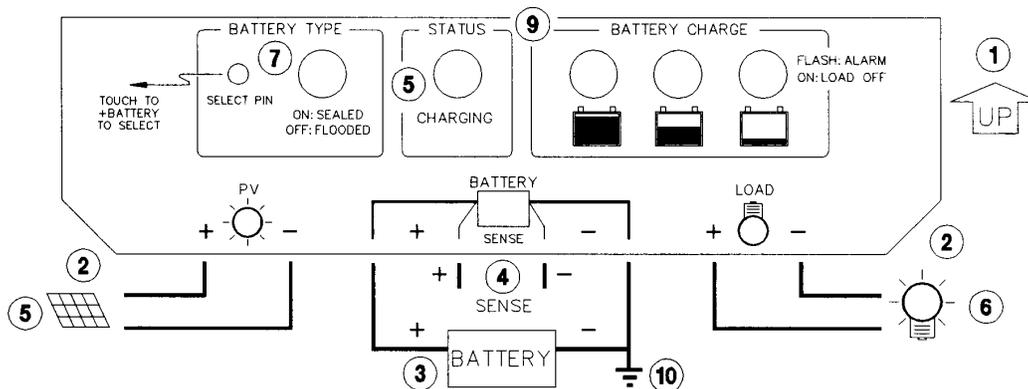

1. Mount the ProStar to a vertical surface. Allow space above and below the controller for air flow. The heatsink **MUST** be in a vertical (up & down) position.
2. Make sure the PV and load currents will not exceed the ratings of the ProStar model being installed.

3. Connect the **BATTERY** first. Observe that all LED's flash in sequence one time.
4. Connect battery **SENSE** leads (if utilized). This is recommended if the controller is placed more than 2 to 3 meters from the battery.
5. Connect the **PV** (solar array). With sunlight, the green **CHARGING** LED will light in 2 minutes.
6. Connect the **LOAD**. If the LED indicators begin to flash, the load is shorted. Refer to the detailed installation instructions.
7. The **BATTERY TYPE** at start-up is sealed (LED on). If the PV system battery is a flooded type, use a piece of wire to touch the **SELECT PIN** to the battery minus terminal to change to flooded (LED goes off). This must be reset every time the battery is disconnected.
8. The ProStar will automatically select for a 12 or 24 volt system. If this is a 24 volt system, first check to confirm that the battery is above 17 volts, and boost-charge the battery if under 17 volts.
9. Observe the LED indicators. After a few minutes to clear delays and resets, the LED's should operate per system conditions as described in the following chart (section 3.1).
10. For effective surge protection, it is recommended that the negative system conductor be properly grounded.

3.0 INDICATORS

3.1 LED INDICATORS

The ProStar utilizes 5 LED (light emitting diode) indicators to provide controller and system status information. These are described in the following table.

<u>INDICATOR</u>	<u>COLOR</u>	<u>DESCRIPTION</u>
BATTERY TYPE	Green	ON: Sealed battery type OFF: Flooded battery type
STATUS	Green	ON: PV array power available and charging battery OFF: PV array power is off

BATTERY CHARGE	Green	ON: Battery near full charge
BATTERY CHARGE	Yellow	ON: Battery at middle capacity (about 35% to 80% SOC) NOTE: does not indicate a problem
BATTERY CHARGE	Red	FLASH: Battery at low charge, warning ON: Load has been disconnected
All LED's		SEQUENTIAL FLASH: Load is short-circuited High temperature shutdown High voltage disconnect Initial battery connection (startup) (flashes one cycle only)

3.2 DIGITAL METER & MANUAL DISCONNECT

If your model is supplied with the LCD meter, the controller will include a precision 3-digit meter that displays battery voltage, PV array current and load current. The meter will automatically sequence between these 3 parameters. The 3 small green status LED's will indicate which parameter is being displayed.

The LCD meter will operate from -30°C to +85°C. The values displayed are accurate to within a few percent. However, please note that if the **BATTERY SENSE** is not connected, the voltage displayed will be reduced by the voltage drops in the battery wires.

The red **DISCONNECT** button will provide an immediate disconnect of both the PV array and load when pushed (the button's red LED turns on). To return the controller to normal operation, push the button a second time. Note that restarting the controller with the button will cause the controller to go through the start-up sequence with the normal delays and LED indications.

4.0 INSTALLATION INSTRUCTIONS

4.1 POLARITY PROTECTION (AND LED INDICATIONS)

CAUTION: Although the ProStar is fully protected from reversed polarity, the system operator and other equipment may be at risk when polarities are reversed. Carefully check each connection and observe the LED's to make sure polarity is correct.

<u>CONNECTION</u>	<u>POLARITY</u>	<u>RESULT AND LED INDICATION</u>
Battery	Correct	All 5 LED's will sequence one time. BATTERY TYPE indicator will remain on (default is sealed). The green BATTERY CHARGE indicator will light within 15 seconds, and will then cycle to the correct state.
Battery	Reversed	No LED's will light. No damage will occur.
Sense	Correct	No additional indications.
Sense	Reversed	If the battery has been connected correctly, there will be sparking at the terminals. If the negative sense lead is connected first, no damage will occur (small possibility of damage if positive connected first). There will be no indications.
PV Array	Correct	LED's will light only if the battery has been connected. During daytime with battery present, the CHARGING indicator will light after a 2 minute delay.
PV Array	Reversed	No damage will occur. The CHARGING indicator will not light after the 2 minute delay.
Load	N/A	If a load short-circuit exists, load will instantly disconnect to protect the controller. LED's will then sequence to indicate a short.

4.2 INSTALLATION PROCEDURE

GENERAL INSTALLATION NOTES:

- The ProStar prevents reverse current leakage at night, so a blocking diode is not required in the system.
- The ProStar is designed to regulate ONLY PV power. Do NOT connect to any other type of power generator.
- The ProStar automatically selects 12 or 24 volt setpoints at battery connection. Do not connect a battery larger than 24 vdc (12 cells) or the controller will be damaged.
- The connector terminals will accept a maximum wire size of AWG #6 (solid/multistrand) or AWG #8 (fine strand) or a maximum wire diameter of 5.0 mm. Use a flathead insulated screwdriver (up to 5 mm).

NOTE: Carefully observe the LED indications at each connection. Per the chart above, the LED's will indicate proper polarity and a good connection.

NOTE: Connections may be made in any order. However, the **BATTERY** must be connected first for the LED indicators to operate. The **SENSE** input will not power the LED's.

INSTALLATION STEPS:

1. Inspect the controller for shipping damage. Mount the ProStar to a vertical surface (4 stainless steel #8 self-tapping screws are included). Do not install directly over an easily combustible surface since the heatsink may get hot under certain operating conditions.

NOTE: Heatsink must be in a vertical (up and down) position.

Allow a minimum of 15 cm (6 inches) space above and below the controller for air flow. Install in an area protected from direct rain and extreme temperatures.

If the controller is installed in an enclosure, some ventilation is recommended. If installed in a sealed enclosure, under extreme conditions the ProStar may, at times, reach 70°C and disconnect the PV array briefly.

2. Confirm that the PV array and loads will not exceed the current ratings of the ProStar model being installed (see chart on front cover).

Multiple ProStar units can be paralleled at the system battery, but be careful that no PV sub-array exceeds a controller's individual current rating.

3. **BATTERY (+ and -)** Before connecting the battery, check the open-circuit voltage of the system battery. It must be at least 8 volts for the controller to operate. If your PV system is 24 volts, the battery **MUST** be over 17 volts, or the controller will regulate at the 12 volt setpoints. Any battery starting at less than 11 (or 22) volts should be fully charged before connection to a PV system, or battery life will be significantly reduced.

NOTE: *The battery should be connected first. This will activate the controller self-protection features, and will power the LED's to guide installation and start-up.*

Connect the battery and observe that all 5 LED's flash in sequence one time. If the LED indicators do not sequence or the **BATTERY TYPE** LED does not light, check the battery polarity.

The green, yellow or red **BATTERY CHARGE** LED will light depending on the battery charge state.

4. **SENSE (+ and -)** Battery sense leads are recommended if the controller is located more than 2 or 3 meters from the battery. This will avoid voltage drops and improve the control accuracy. However, if the sense leads are not connected, the controller will default to **BATTERY** connections for control.

A smaller wire size can be used for sense (draws less than 1 mA current). Note that the wire entry slots into the case for **SENSE** are smaller than the other system power terminals to prevent mixing the **BATTERY** and **SENSE** connections.

5. **PV (+ and -)** Use these terminals to connect the solar array. First confirm that the PV modules are wired for the same voltage as the battery (either 12 or 24 volts).

Use caution, since the PV array will generate power whenever in sunlight. Also, be careful not to short-circuit the PV array while connected to the controller, since this will damage the controller.

There is a 2 minute delay after connection of the PV array before the controller begins charging. Check that the

CHARGING indicator comes on after 2 minutes to confirm that the PV array has been properly connected.

6. **LOAD (+ and -)** Turn the load off. Connect the load to **LOAD** terminals, and then turn the load on. If the battery is below the load disconnect voltage, the load will be disconnected (normal LVD). There may be a short delay.

If the load is short-circuited, the controller will instantly disconnect the load and flash the LED's in sequence. If this occurs, remove the load and repair the short. It will then be necessary to disconnect the **BATTERY +** wire and reconnect the battery to reset the ProStar for normal operation (or press the red **DISCONNECT** button twice if the LCD meter option is supplied).

7. The **BATTERY TYPE** defaults to sealed, and the green LED should be on. If your battery is a flooded type, use a piece of wire to touch the **SELECT PIN** to the **BATTERY -** (negative) terminal or to the negative battery post. This will change the battery charging setpoints from a sealed to a flooded battery. When the change has been made, the green **BATTERY TYPE** LED will turn off.

Check the LED to confirm the change. This **SELECT PIN** can be used repeatedly. No damage can occur from touching the pin to other terminals or parts of the controller. The **BATTERY TYPE** can be changed between sealed and flooded any number of times.

NOTE: Remember that flooded batteries must be selected every time the battery is disconnected, because the controller will default to sealed at start-up.

Confirm that the proper battery type has been selected by checking the green LED. No other control setpoints can be adjusted since they have been factory set for optimum performance.

8. After about 5 minutes, observe all the LED's. Use the LED indicator chart in section 3.1 to make sure the controller is operating normally for system conditions.
9. For safety and effective lightning protection, the negative conductor of the PV system should be properly grounded. The ProStar connects the PV-negative, Battery-negative and Load-negative internally per UL recommendations. No switching is done in the negative current path.

5.0 OPERATION

5.1 CONTROLLER OPERATION

The ProStar is a fully automatic PV system controller that includes many electronic functions to protect both the controller and the PV system. Battery charging is managed by a constant-voltage, PWM algorithm that has been optimized for PV systems.

The only manual tasks performed by the operator are:

- a. Installation (see section 4.0)
- b. Battery type selection (see section 4.2-7)
- c. Disconnect button (with LCD meter, see section 3.2)
- d. Reset if load short-circuits (see section 4.2-6)
- e. Maintenance (see sections 5.3 and 5.4)

5.2 CONTROLLER FUNCTIONS

The PV system operator should become familiar with the following functions of the ProStar controller. Refer to Technical Specifications (6.0) for actual setpoints and other parameter values.

LVD - Low Voltage Load Disconnect	Automatic load disconnect to protect battery from deep discharge. Auto reconnect. Current compensated for high load currents.
Low Voltage Alarm	Red LED flashes at low battery capacity to warn of possible LVD if discharging continues.
Over Voltage Protection	If battery voltage rises above the constant voltage regulation setpoint, the PV array is disconnected. Auto reconnect.
HVD - High Voltage Disconnect	Both PV array and load are disconnected when battery rises to dangerous voltage. The LED's flash in sequence. Auto reconnect as voltage falls.

Automatic Safety Disconnects	<ul style="list-style-type: none"> • Load Short-Circuit: Instant load disconnect. The LED's flash in sequence. Battery must be disconnected to clear and reset (see section 4.2-6) • High Temperature: At very high temperatures, PV array first disconnected, then the load. The LED's flash in sequence. Auto reconnect as temperature falls. • Emergency: If battery is disconnected, the PV and load are instantly disconnected for safety and to protect the load.
Temperature Compensation	Battery charging, equalization, and high voltage functions are corrected for ambient temperature variations.
Equalization	Battery charging is automatically boosted based on low state-of-charge or elapsed time.

NOTE: Actual charging setpoints of the ProStar controller are adjusted for temperature, equalizations, and battery type. In addition, many delays are built into the controller. Remember to consider these factors when working with the controller.

5.3 INSPECTION AND MAINTENANCE

At least 2 times per year the following inspections and maintenance are recommended for best controller performance.

1. Confirm that the desired **BATTERY TYPE** has been selected (check green LED).
2. Confirm that the current levels of the PV array and load do not exceed the ProStar ratings.
3. Tighten all the terminals. Inspect for loose, broken, or burnt wire connections. Be certain no loose strands of wire are touching other terminals.
4. Check that the controller is securely mounted in a clean, protected environment.
5. Be certain the ventilation holes are not blocked.

6. Inspect for dirt, insects, nests, and corrosion.
7. Check that the controller functions and LED indicators are correct for the system conditions at that time.

5.4 TROUBLESHOOTING

If something seems wrong with the PV system (for example, the load is not working or the battery is not charging), then it may be necessary to troubleshoot the controller. Some basic troubleshooting procedures are listed below.

CAUTIONS:

- Troubleshooting should be attempted by qualified personnel only.
- Remember that a battery can cause serious damage if shorted.
- Do not disassemble the ProStar from its case. There are no user serviceable parts inside the ProStar.
- Observe all normal precautions when working with energized circuitry.

NOTE: *There are no internal fuses or circuit-breakers in the ProStar case. There is nothing inside the case that can be adjusted, and there are no consummable parts to replace.*

1. BATTERY IS NOT CHARGING

- a. Check for proper LED indications on the ProStar. The green **CHARGING** LED should be on if it is daytime. One of the **BATTERY CHARGE** LED's should be on. If the ProStar includes the meter option, check for proper battery voltage and array current.
- b. Check that the proper **BATTERY TYPE** has been selected.
- c. Check that all wire connections in the system are correct and tight.
- d. Measure the PV array output voltage and confirm it is within normal limits. If the voltage is low or zero, check the connections at the PV array itself. Disconnect the PV from the controller when working on the PV array.
- e. Check that the load is not too large.
- f. If the **BATTERY SENSE** terminals are not being used, there may be excessive voltage drops between the controller and

the battery. This will cause undercharging of the battery. See section 4.2-4.

- g. Check the condition of the battery. Determine if the battery voltage declines at night with no load. If unable to maintain its voltage, the battery may be failing.
- h. If all the ProStar LED's are flashing in sequence, see item number 4 below.
- i. Check that the controller is operating at the correct system voltage (12 or 24 vdc), and that the battery has enough voltage (over 8 volts) to operate the controller. If there is any question, reset the controller by removing the **BATTERY +** wire from the terminal and reconnecting it to the controller.
- j. If the battery, PV array and wire connections seem to be satisfactory, and if the ProStar LED indications are not normal (refer to section 3.1 "LED Indicators"), then the ProStar may be defective.

NOTE: *The controller's microprocessor should be reset (restarted) if any of the following conditions seem to exist:*

- *The microprocessor latches (locks-up)*
- *The controller seems to be operating at the wrong system voltage (12 or 24 volts)*
- *The battery voltage fell below 8 volts and the controller cannot automatically restart*
- *A load short-circuit caused the controller to shutdown*

*To reset the processor, simply remove the **BATTERY +** wire and reconnect it to the controller. With the LCD meter option, just press the red **DISCONNECT** button twice. The controller will sequence through it's entire start-up routine (See section 4.2).*

2. BATTERY VOLTAGE IS TOO HIGH

- a. Check the operating conditions to confirm that the voltage is higher than specifications. Consider the temperature compensation and automatic equalizations. For example, a 12 volt flooded battery at 0°C in equalization will be regulated at about 15.4 volts.
- b. Check that the proper **BATTERY TYPE** has been selected.
- c. Check that all wire connections in the system are correct and tight.

- d. If there is a problem with high voltage, the controller should go into the High Voltage Disconnect mode (see section 5.2).

3. LOAD NOT OPERATING PROPERLY

- a. Check that the load is turned on. Check that no system fuses are defective. Check that no system circuit breakers are tripped. Recall that there are no fuses or circuit breakers inside the ProStar.
- b. Check connections to the load, and other controller and battery connections.
- c. Check for proper LED indications on the ProStar. If the red **BATTERY CHARGE** LED is on, the load has been disconnected due to low battery voltage. This is generally a normal state when the load exceeds the PV array output due to weather and sunlight conditions.
- d. If all LED indicators are flashing in sequence, the load may be shorted. Determine the cause of the short, repair the short circuit, and reset the controller (see section 4.2-6).
- e. If the ProStar internal temperature is above 80°C, the load will be disconnected. All LED's will be flashing in sequence. Check to ensure for clear airflow around the ProStar and that nothing is obstructing the vents at the top of the case.

4. LED INDICATORS ARE FLASHING IN SEQUENCE

- a. The load may have a short-circuit. Refer to section 4.2-6.
- b. The controller may have shutdown due to excessive temperatures. Refer to 3.e above and section 5.2.
- c. The controller may have shutdown due to a High Voltage Disconnect. See section 5.2 and 2.d above.

5. BATTERY CHARGE RED LED INDICATOR FLASHING

- a. This indicates the battery voltage is very low, and the load may be disconnected soon. Turn off or reduce loads on the system to allow the battery to recharge. When the battery capacity increases, the yellow LED indicator will turn on, followed by the green LED that indicates nearly full charge.
- b. If the red LED flashes frequently, the most likely cause is a load that is too large for the PV array. Another cause is a defective battery that cannot hold a charge.

6.0 TECHNICAL SPECIFICATIONS

MODEL RATINGS

	ProStar-12	ProStar-20	ProStar-30	
PV current (amps)	12	20	30	• All models both 12V and 24V (automatic selection)
Load current (amps)	8	16	30	

Note: Current ratings can be exceeded by 25% for up to 5 minutes.

RELIABILITY

- 5-year failure rates at a 90% confidence level
- ProStar-12 < 0.1%
 - ProStar-20 < 0.1%
 - ProStar-30 0.4%

ENVIRONMENTAL

- Operating temperature -40 to +85°C
- Max ambient temperature +60°C
- Storage temperature -55 to +100°C
- Humidity 100% (NC)

PERFORMANCE / ELECTRICAL

- Accuracy 12V +/- 22 mV
24V +/- 38 mV
- Maximum array voltage 50 V
- Min voltage to operate 8.0 V
- Ground negative
- Parallel capability yes
- Self-consumption (tare):
 - Night 11 mA
 - Charging 12 mA
 - Load disconnected 10 mA
- Voltage drops:
 - Maximum: PV/Batt 0.7 V
 - Batt/Load 0.4 V
 - Typical: PV/Batt 0.5 V
 - Batt/Load 0.1 V
- Operating life 15 years
- Noise:
 - µP protection all inputs
 - Output noise pulses < 400 mV
 - Noise pulse width < 500 nanosec
 - Radiated noise < 100 picowatts/Khz
- FET's:
 - Rds (on resistance) 0.018 ohm
 - Pulse rating 120 A
 - Junction temp rating 175°C
 - Operating junction temp 110°C
- µP memory 2K ROM
- µP clock speed 2 Mhz
- Transient surge suppressors:
 - Pulse power rating 1500 watts
 - Response < 5 nanosec
- LED's:
 - Pulse rate 300 Hz
 - Current consumption < 1 mA/LED

METER DISPLAY

- Type LCD
- Display 3-digit x .5 inch
- Temp rating -30 to +85°C
- Voltage accuracy 0.5%
- Current accuracy 2.5%
- Status LED's 3
- Self-consumption (tare) 8.5 mA
- Manual disconnect < 100 microsec

MECHANICAL

- Dimensions: (inches) 6.01 (W) x 4.14 (H) x 2.17 (D)
- (mm) 153 (W) x 105 (H) x 55 (D)
- Weight: (oz) 12
- (kg) 0.34
- Wire terminals Euro-style
- Max wire size:
 - (solid) #6 AWG/16 mm²
 - (multistrand) #6 AWG/10 mm²
 - (fine strand) #8 AWG/10 mm²
- Terminal diameter 0.2 inch/5 mm
- Mounting orientation vertical
- Case:
 - Material VALOX #310 SEO
 - Fungicidal resistance ASTM G21-70
 - Moisture absorption < 0.4%
 - UL Thermal Index 120°C/140°C

ELECTRONIC FUSE / SYSTEM SAFETY

- Load short-circuit Short-circuit is > 10X load rating for > 5 msec
- Load disconnected < 50 microsec
- Emergency disconnect If voltage < 2.4 V, PV/load disconnected < 0.1 sec
- Reverse polarity All 4 system inputs fully protected
- High temp shutdown 70°C disconnect PV input
- 80°C disconnect load
- 60°C reconnect load
- 50°C reconnect PV

CONTROL SETPOINTS

	12 Volt	
	Sealed	Flooded
• Low volt load disconnect	11.4	11.5
• LVD reconnect	12.5	12.6
• Constant-voltage regulation	14.1	14.3
• Equalization	14.35	14.6
• HVD	15.5	15.5

(24V setpoints are twice 12V values)

CONTROL PARAMETERS

- Charge algorithm constant-voltage PWM pulse charging series configuration
- Temp comp coefficient - 5.0 mV/°C/cell (25°C ref)
- LVD current coefficient - 20 mV/amp load
- Auto equalize:
 - Sealed 16 days or 11.9/23.8 V
 - Flooded 11 days or 12.0/24.0 V
- Temp comp setpoints Regulation, Equalize, HVD
- Software delays LVD = 55 sec; HVD = 7 sec
- Software filtering average 2 inputs/50 µsec
- Measurement rate 37.5 samples/sec

Specifications subject to change without notice.

Manufactured in the U.S.A.





*P.O. Box 958
OLNEY, MARYLAND 20830 USA*

R1- APRIL 1996