


ARDUINO	CP/M	AVR
-	TX_PROP	-
-	RX_PROP	-
RESET	RESET CP/M	RESET
3V3	3V3	3V3
5V	5	5
GND	GND	GND
GND	GND	GND
VIN	/DTR	-
A0	/RAS	PC0
A1	/CAS	PC1
A2	/OE	PC2
A3	/WE	PC3
A4	SDA	PC4
A5	SCL	PC5
-	ADC6	ADC7
-	ADC7	ADC6
-	ADC7	ADC7
-	ADC6	ADC6
-	SDA	PC2
-	SCL	PC4
-	3V3	3V3
-	NOT USED	NOT USED--
-	NOT USED	NOT USED
-	GND	GND

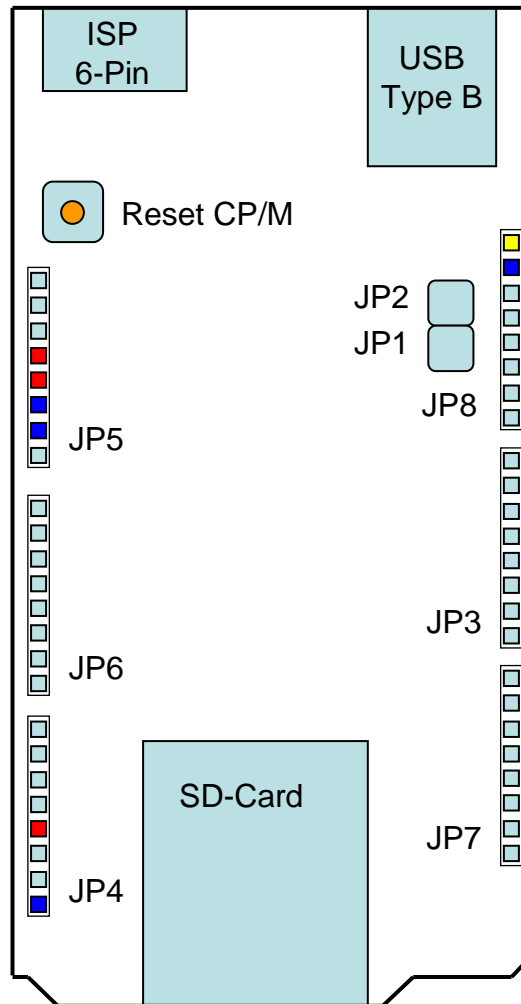

AVR	CP/M	ARDUINO
AREF	NOT USED	AREF
GND	GND	GND
PB5	SCK_A10	D13/SCK
PB4	MISO_A9	D12/MISO
PB3	MOSI_A8	D11/MOSI
PB2	CS	D10/SS
PB1	TXD_AVR	D9
PB0	RXD_AVR	D8
PD7	D7_A7	D7
PD6	D6_A6	D6
PD5	D5_A5	D5
PD4	D4_A4	D4
PD3	D3_A3	D3
PD2	D2_A2	D2
PD1	D1_A1	D1/TX
PD0	D0_A0	D0/RX
P0	I2C-P0	-
P1	I2C-P1	-
P2	I2C-P2	-
P3	I2C-P3	-
P4	I2C-P4	-
P5	I2C-P5	-
P6	I2C-P6	-
P7	I2C-P7	-

CP/M
DUINO

16.02.2014

Joe G.

