


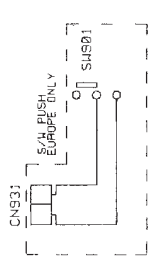
**WARNING:**  
Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacture.

**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 460kohms, the unit is defective.

**WARNING:**  
DO NOT return the unit to the customer until the problem is located and corrected.

**SCHEMATIC DIAGRAMS (5/8)**  
MAIN UNIT  
VOLTAGE UNIT  
OUTLET UNIT

**CAUTION:** For continued safety, replace critical components only with manufacturers recommended parts (refer to parts list).  
 indicates safety critical components. To reduce the risk of electric shock, leakage current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance returned to the customer.



VALUES IN OHM, K=1,000 OHM M=1,000,000 OHM  
VALUES IN MICRO FARAD, P=MICRO-MICRO FARAD  
AND CURRENT ARE MEASURED AT MO SIGNAL INPUT

PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR