
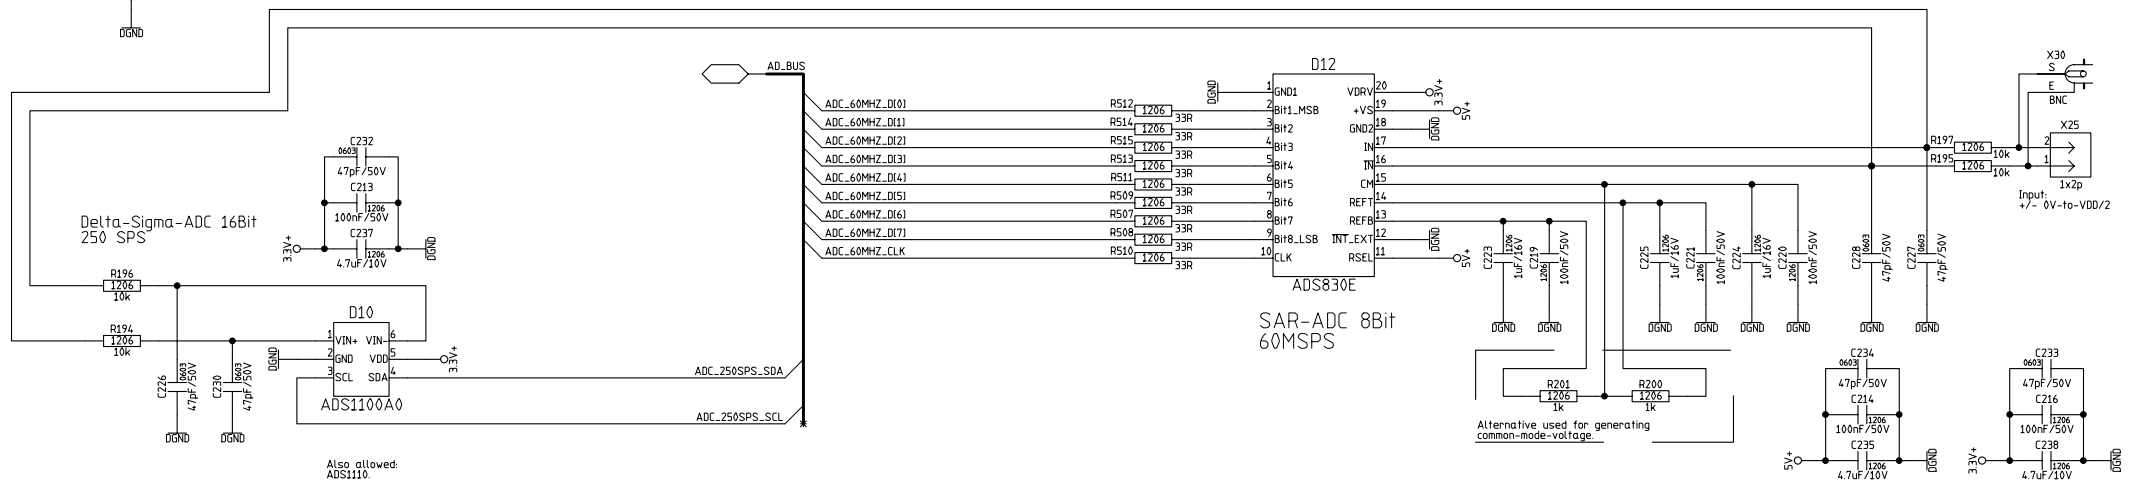
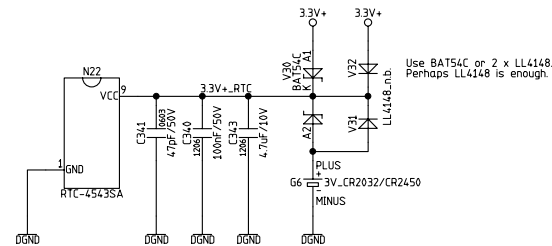
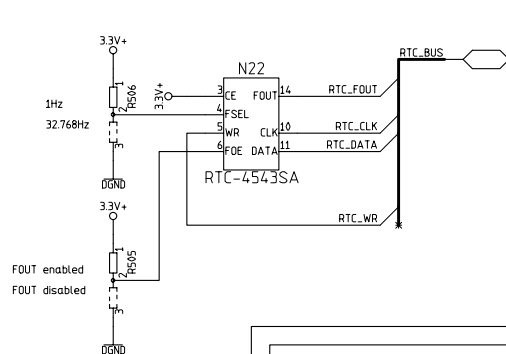
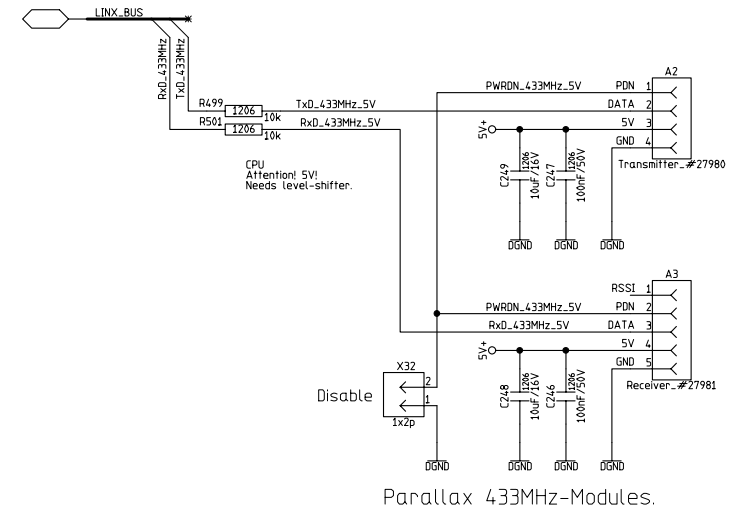
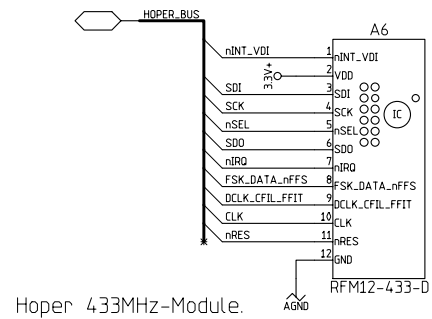


[illegible]

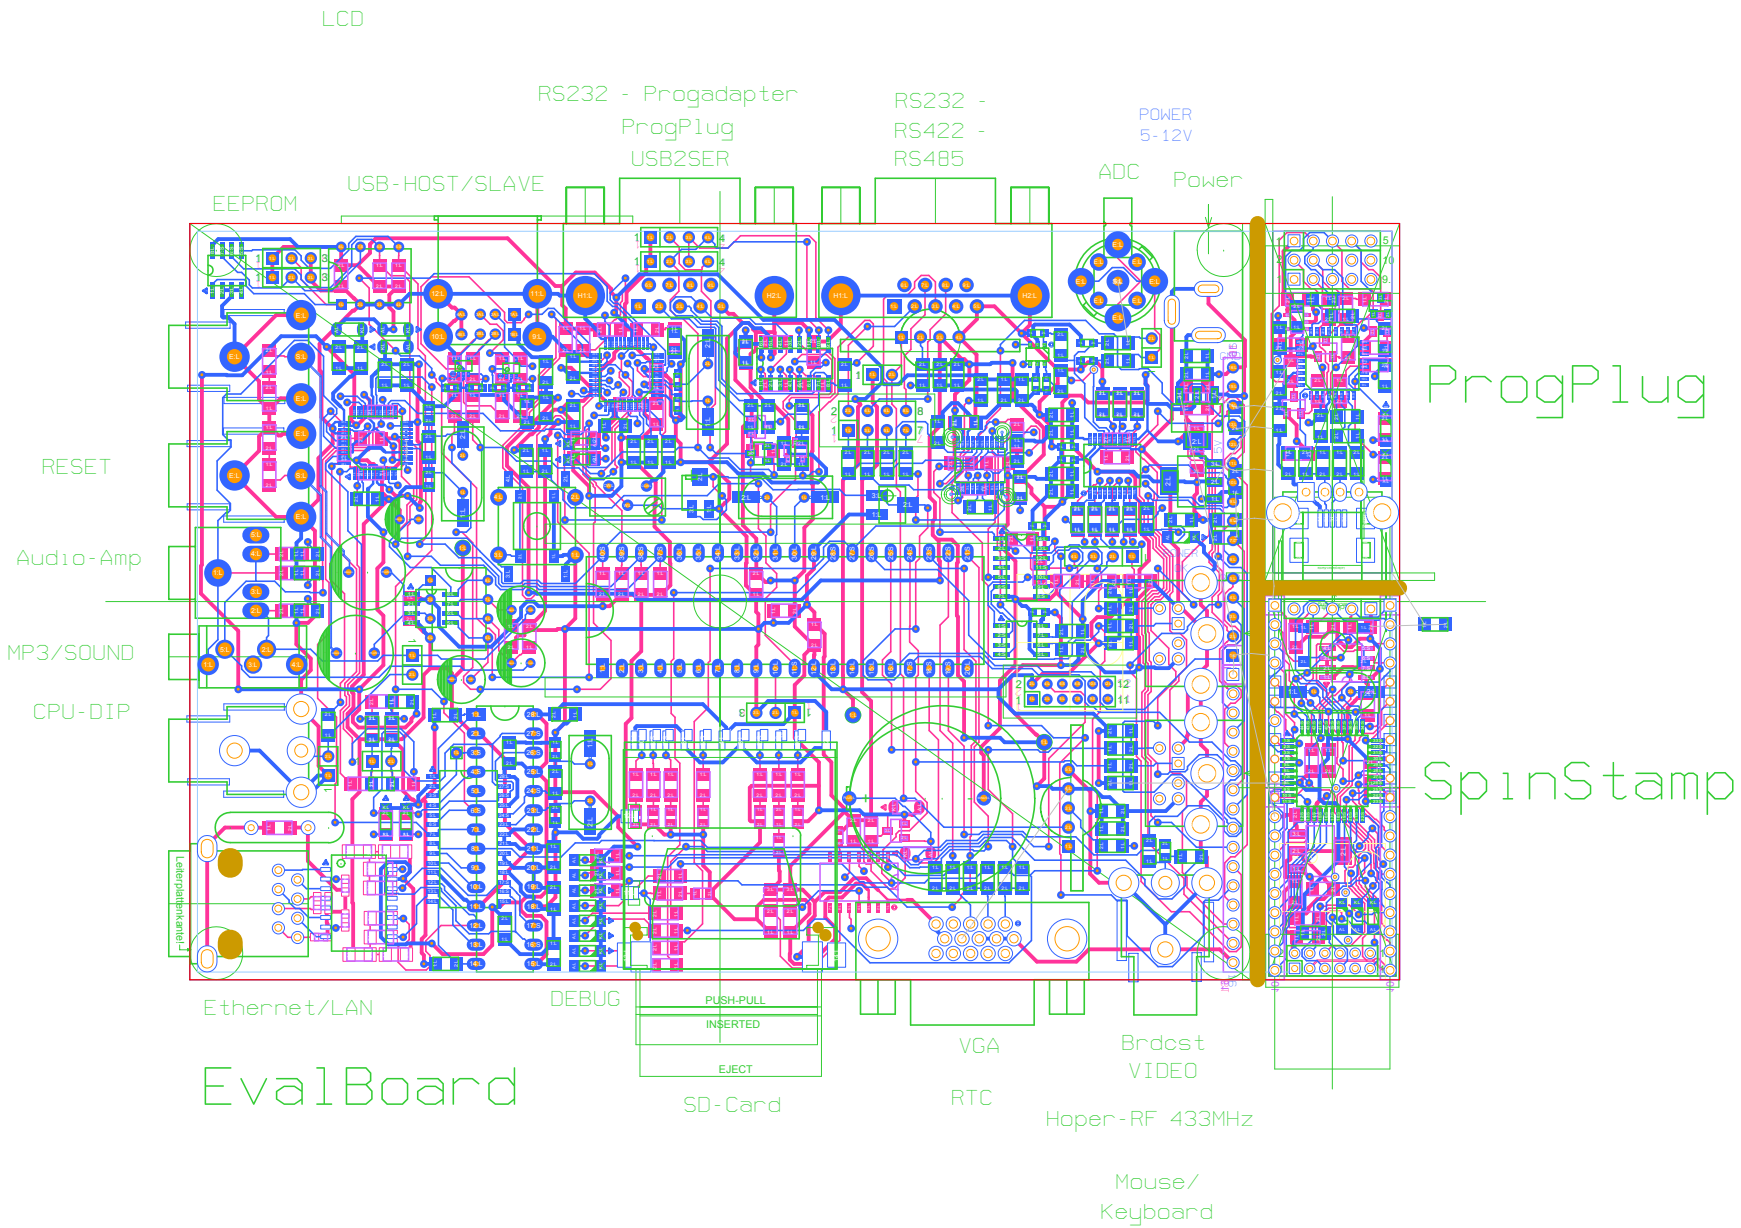

RS232 - Progadapter
ProgPlug
USB2SER

RS232 -
RS422 -
RS485

ADC Power

EEPROM

USB-HOST/SLAVE

RESET

Audio-Amp

MP3/SOUND

CPU-DIP

Ethernet/LAN

DEBUG

SD-Card

RTC


Hoper-RF 433MHz

Mouse/
Keyboard

ProgPlug

SpinStamp

EvalBoard

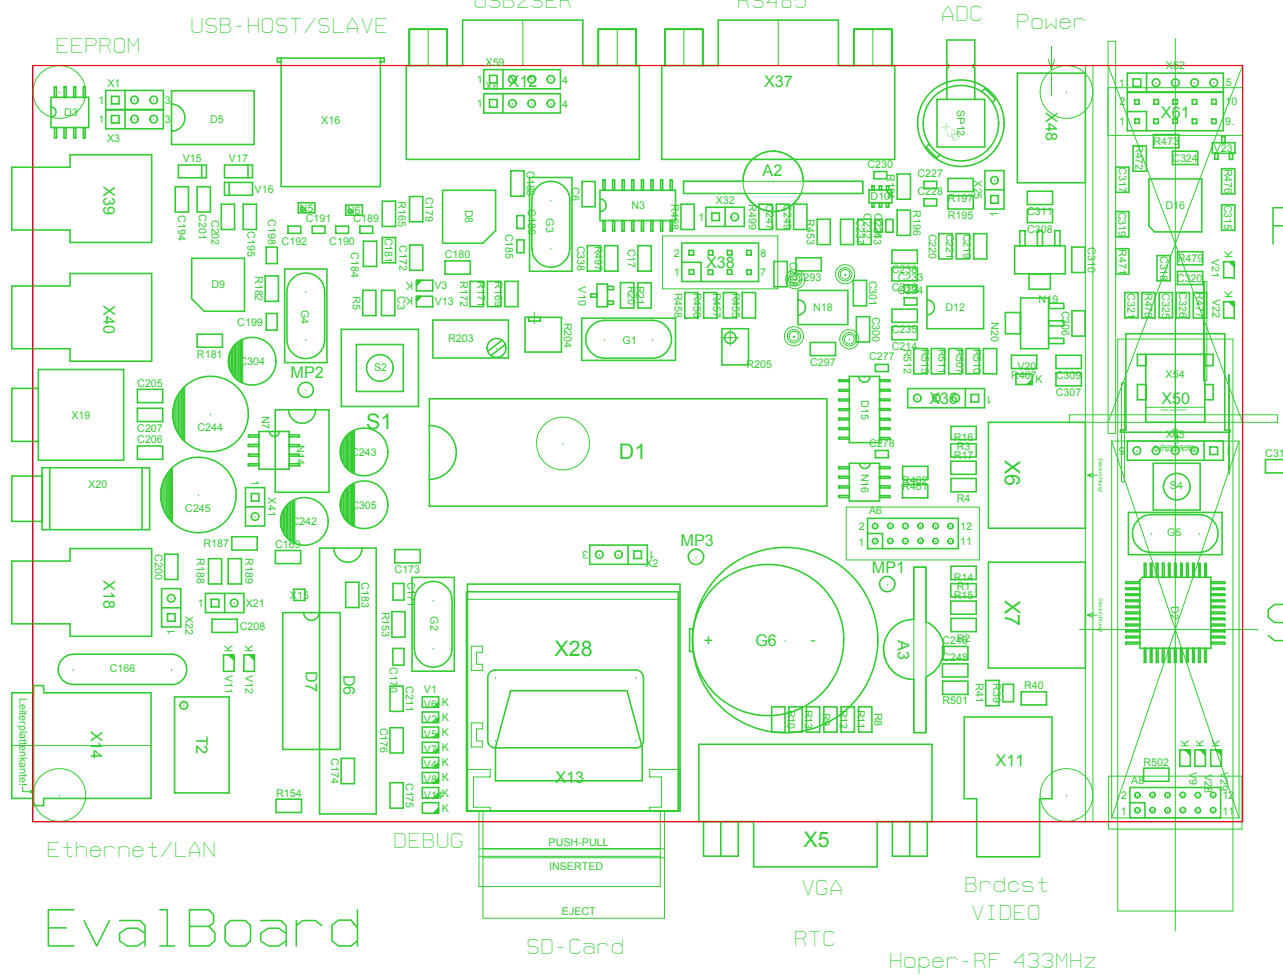

POWER
5-12V

