## **Electronic Combination Meter Unit Inspection**

• Remove the meter unit [A] (see Meter Unit Removal). [1]

High Beam Indicator Light (LED) (+)

[2] FI Indicator Light (LED) (-) [3]

Speed Sensor Signal

[4] Tachometer Signal

[5] ABS Indicator Light (LED) (EX650D Models) [6]

Oil Pressure Warning Indicator Light (LED) (-) [7]

Battery (+)

[8] Ground (-)

[9] Neutral Indicator Light (LED) (-)

[10] Right Turn Signal Indicator Light (LED) (+) [11]

Fuel Level Gauge

[12] Fuel Reserve Switch

[13] Left Turn Signal Indicator Light (LED) (+) [14]

Water Temperature Sensor

[15] Speed Sensor Supply Voltage [16]

Ignition



