

● BLAUPUNKT

AUTORADIO

Los Angeles MP74

7 644 815 310

Seattle MP74

7 644 810 310

8 622 404 243 BE-ST 06/04

Schaltbild • Circuit diagram

**CLASS 1
LASER PRODUCT**



**UNSICHTBARE LASERSTRAHLUNG
NICHT DEM STRAHL AUSSETZEN**

(D) VORSICHT!

**Die Geräte beinhalten eine Laserkomponente!
Im Servicefall bitte nachfolgende Hinweise
beachten:**


- Das Gerät arbeitet mit unsichtbarem Laserstrahl.
- Bei geöffnetem Gerät tritt im Bereich des Plattenfaches Laserstrahlung aus.
- Nicht in den Strahl blicken.
- Unbeteiligte Personen vom Arbeitsplatz fernhalten.
- Der Betrachtungsabstand darf 13 cm nicht unterschreiten.
- Kann dies nicht eingehalten werden, muß eine geeignete Laserschutzbrille getragen werden.


(GB) CAUTION!


**The CD units are equipped with a laser component!
For servicing make sure to observe the following
instructions:**


- The unit operates with invisible laser beams.
- When the cover is removed, invisible laser beams are emitted near the disc compartment.
- Avoid direct eye contact with these beams.
- Keep unauthorised persons away from the workbench.
- The viewing distance should not be less than 13 cm.
- If this distance cannot be kept, use suitable laser safety goggles.




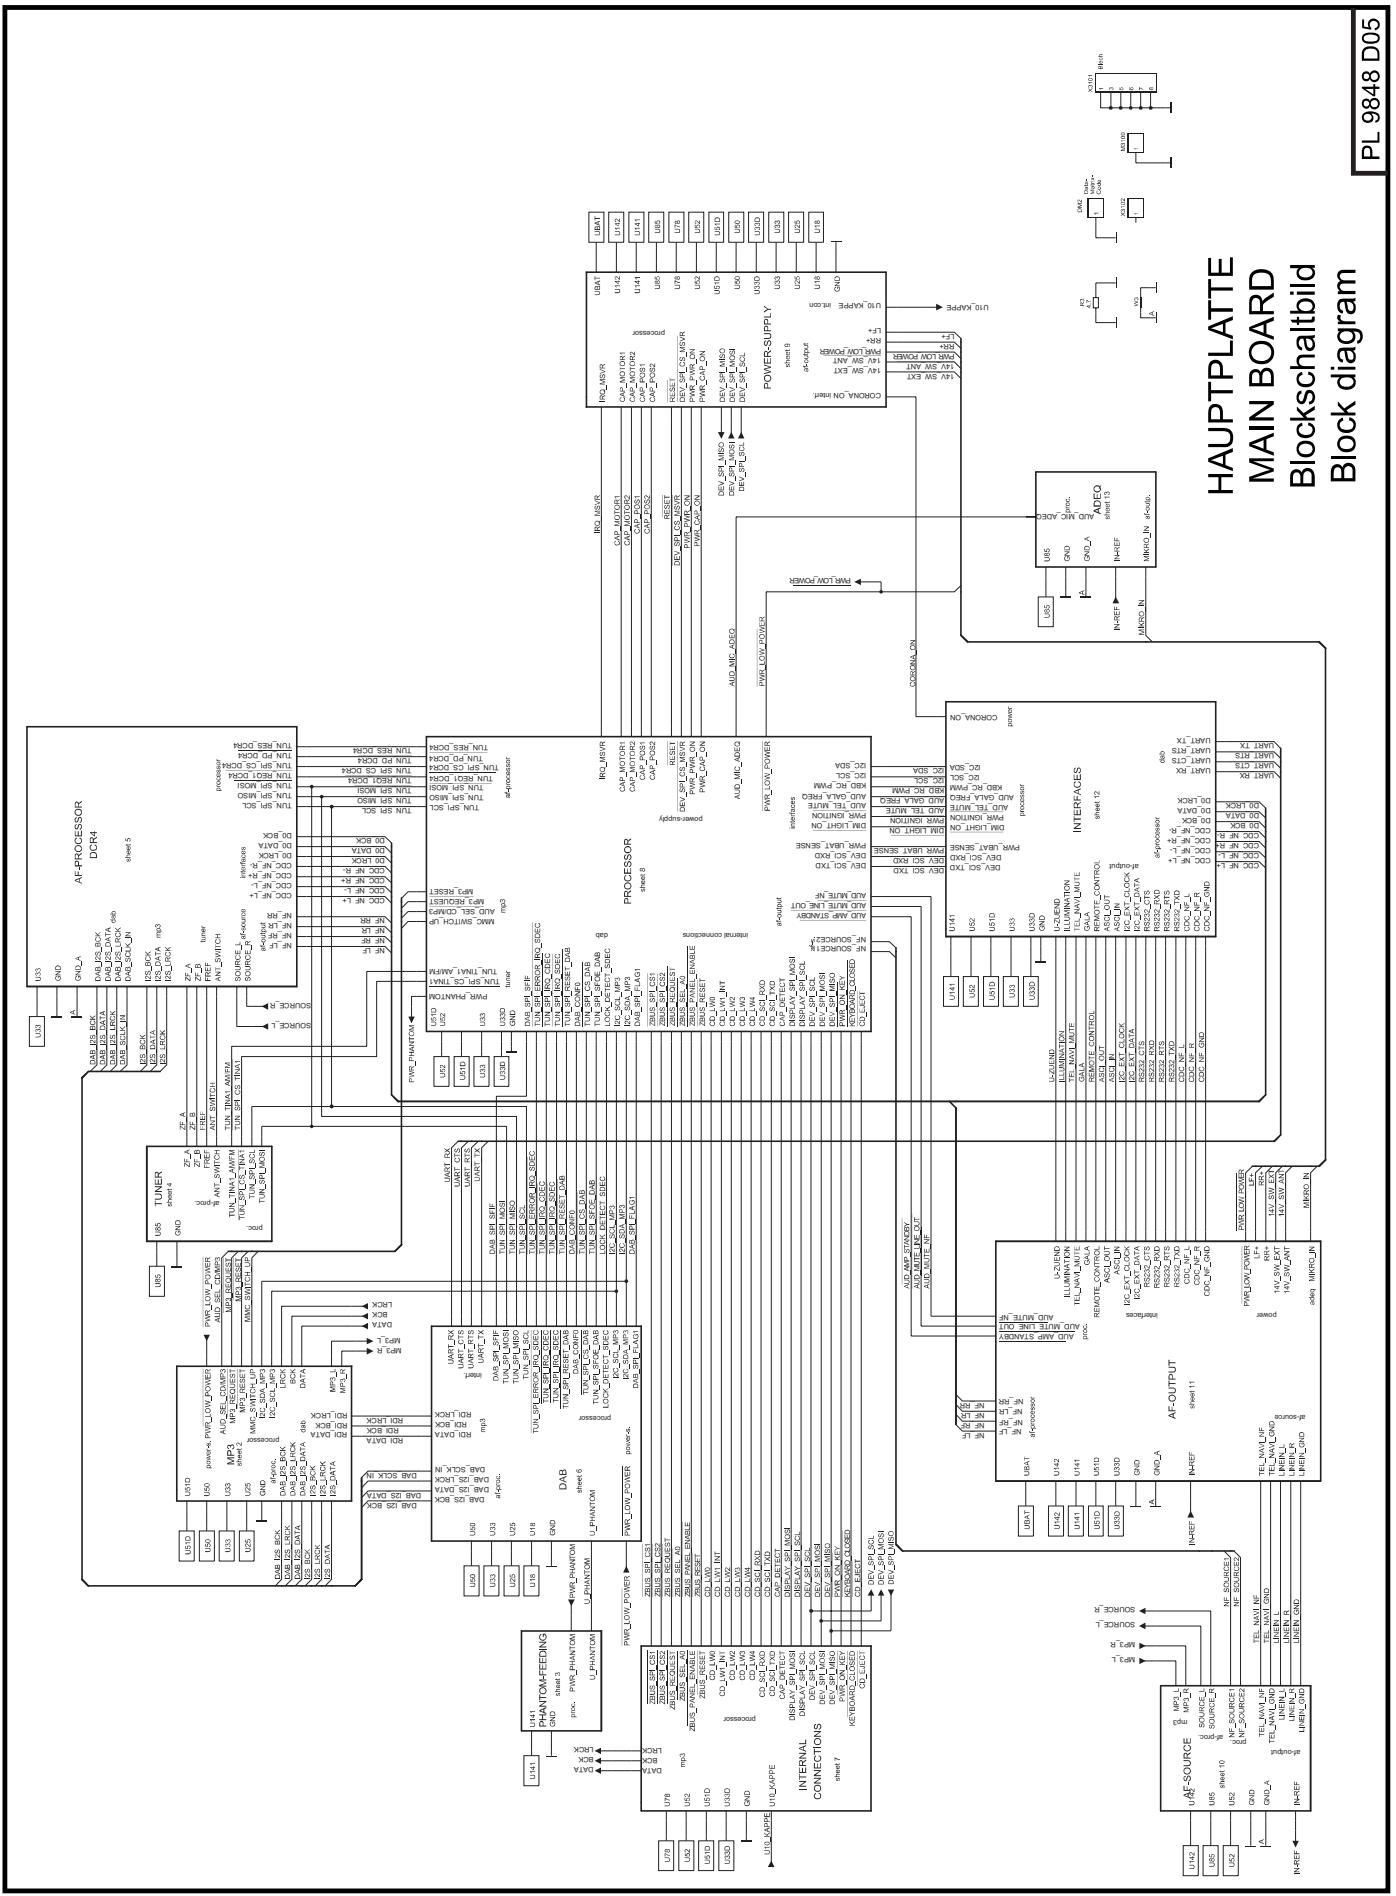


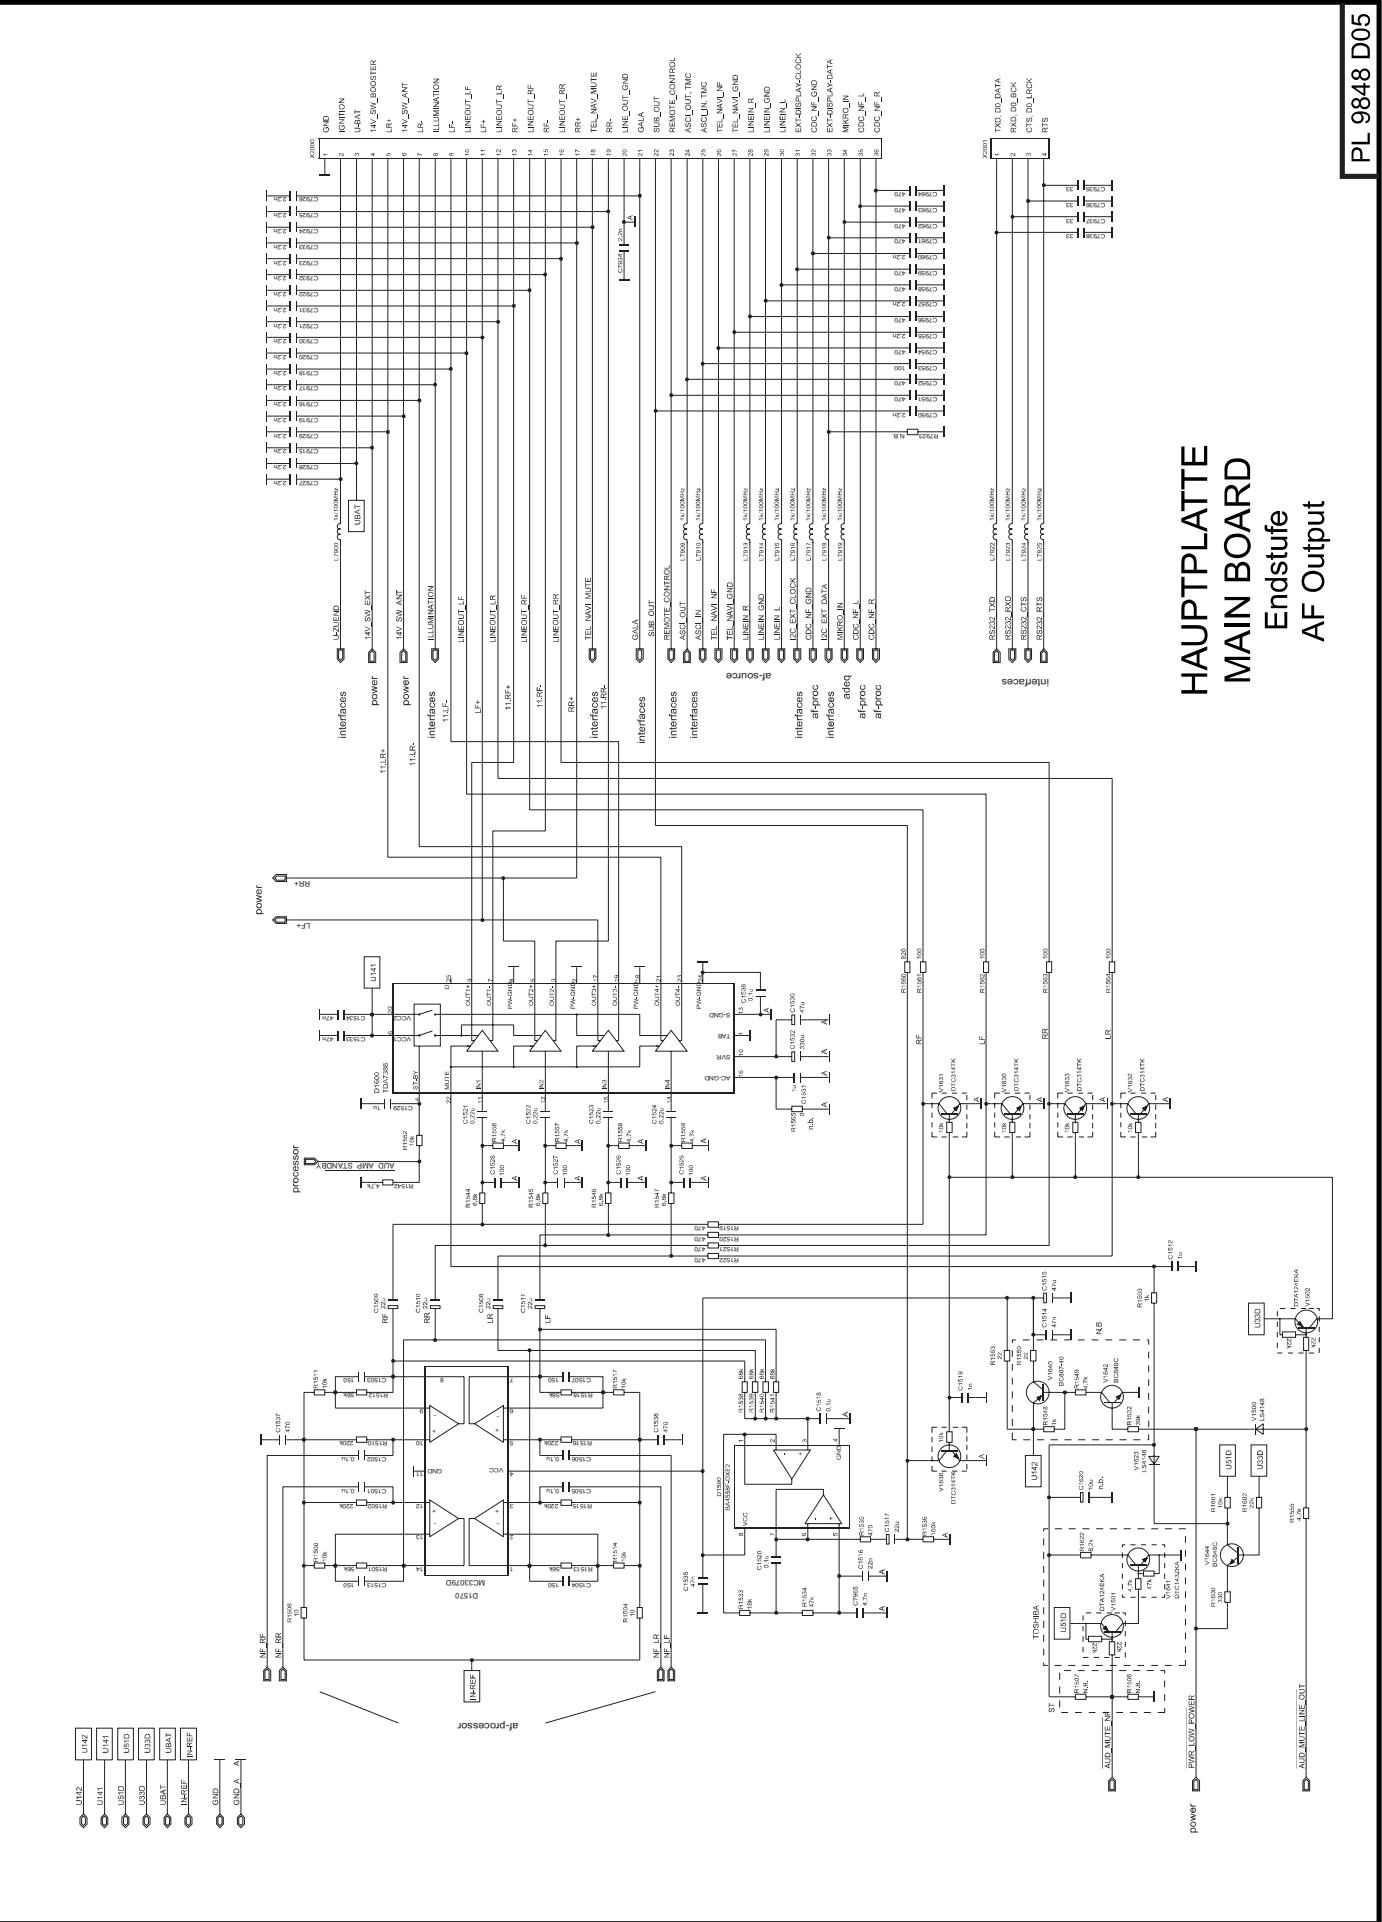

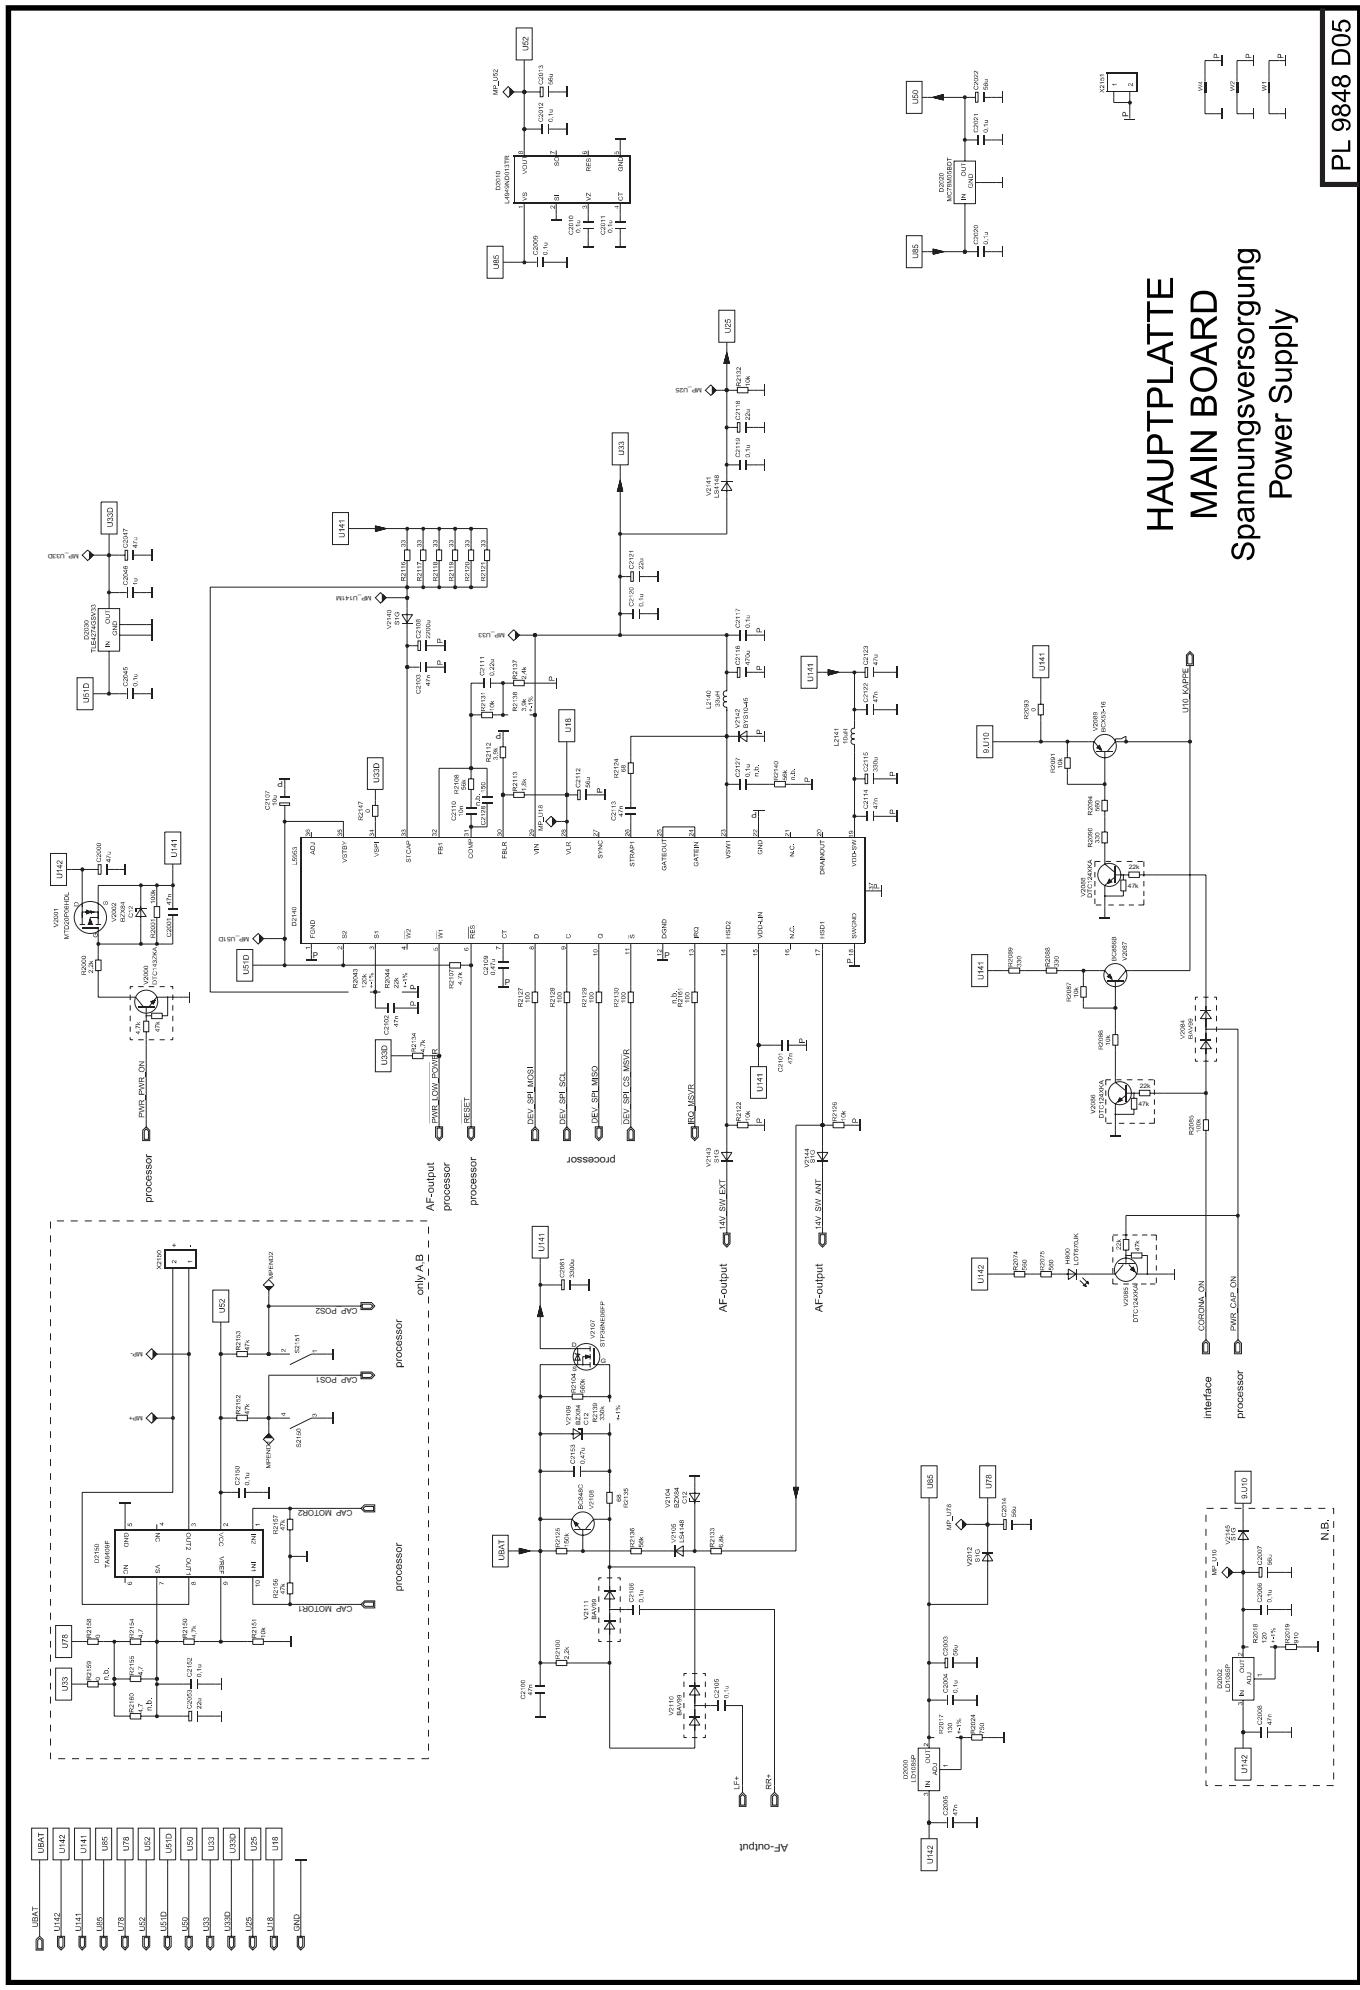


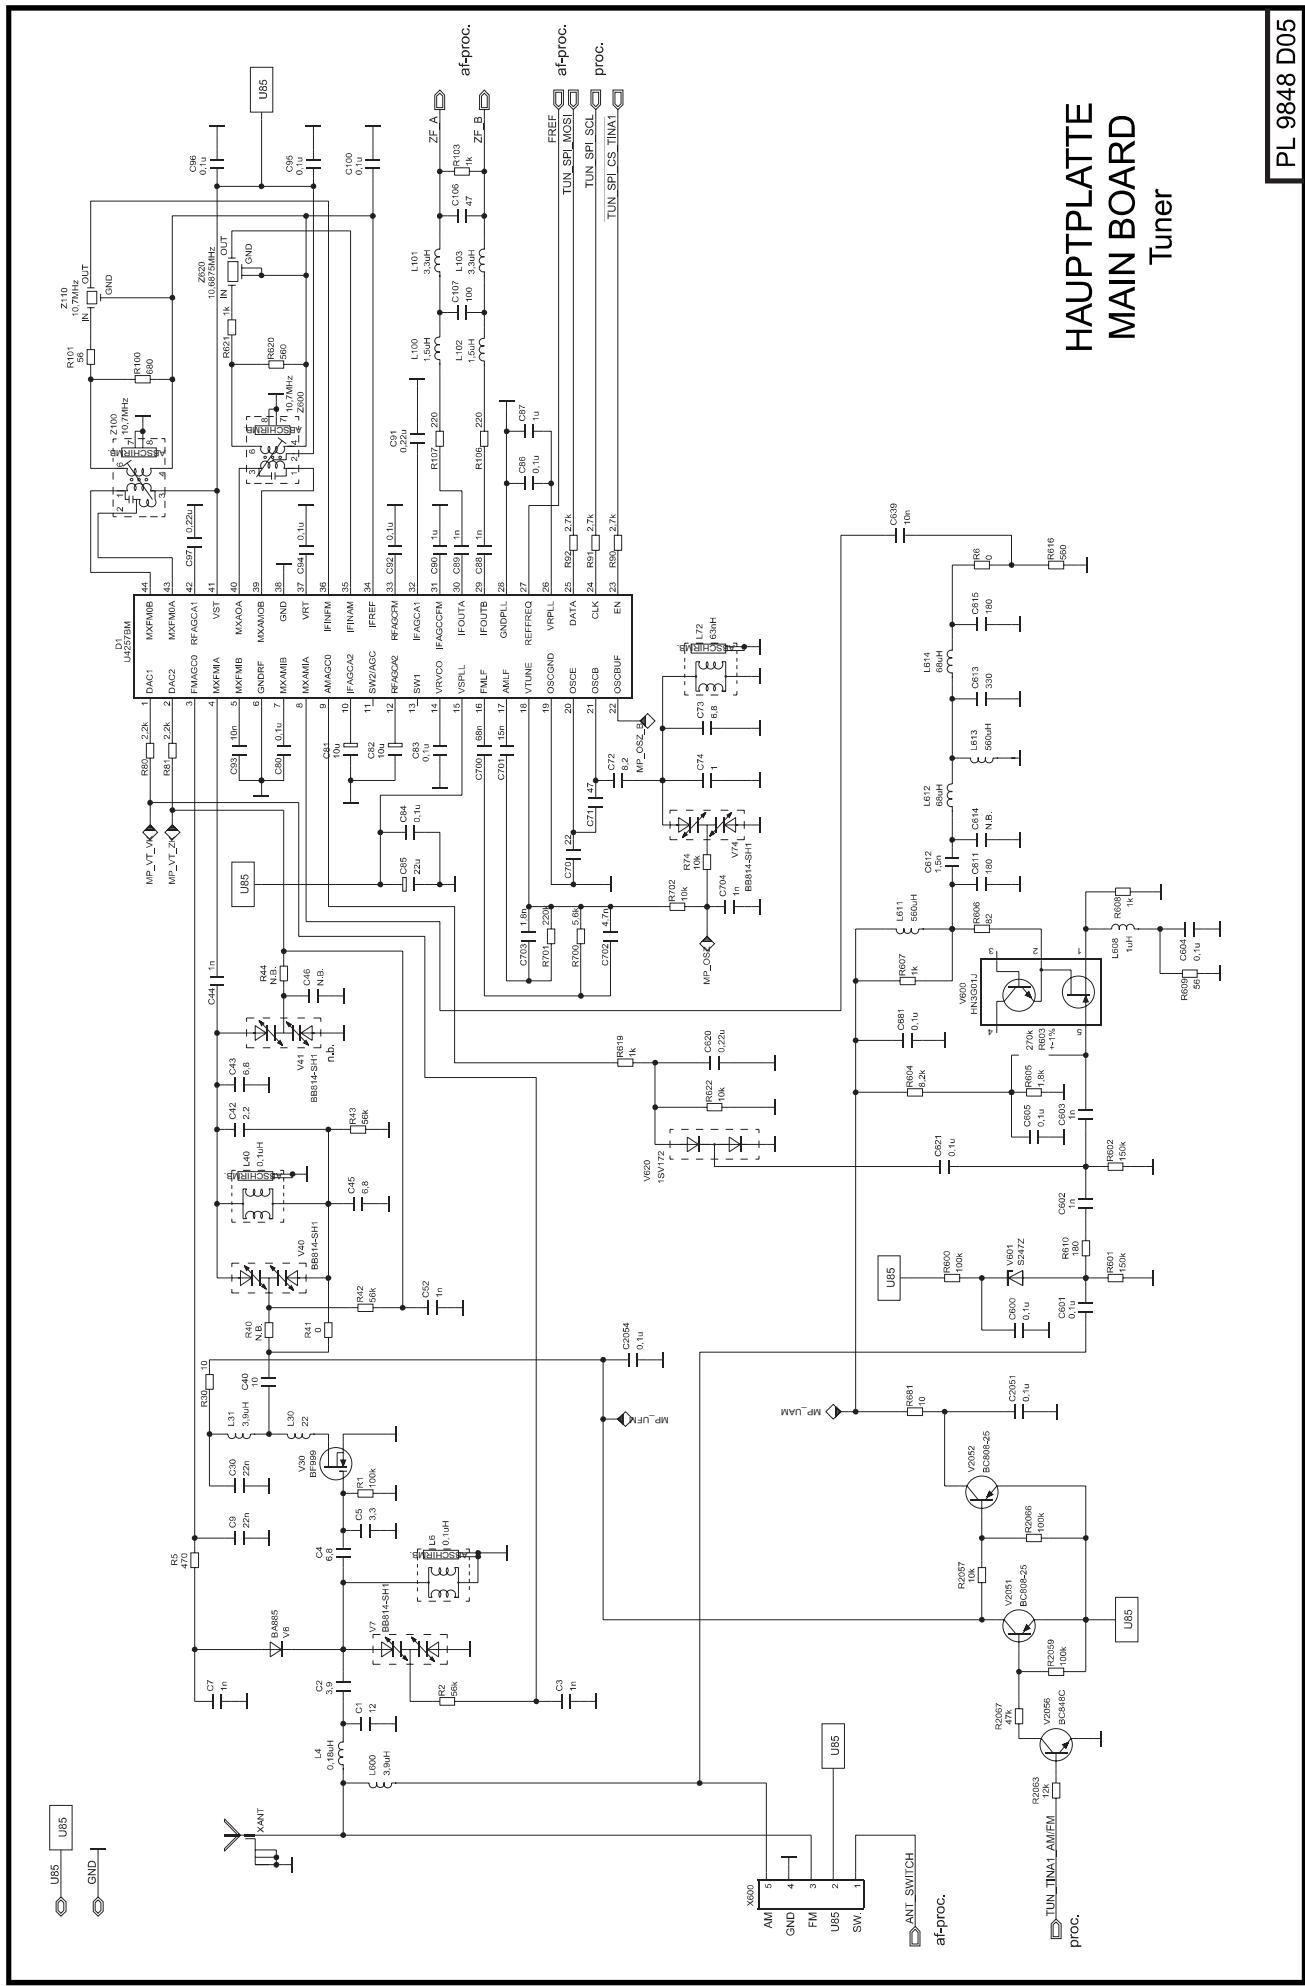

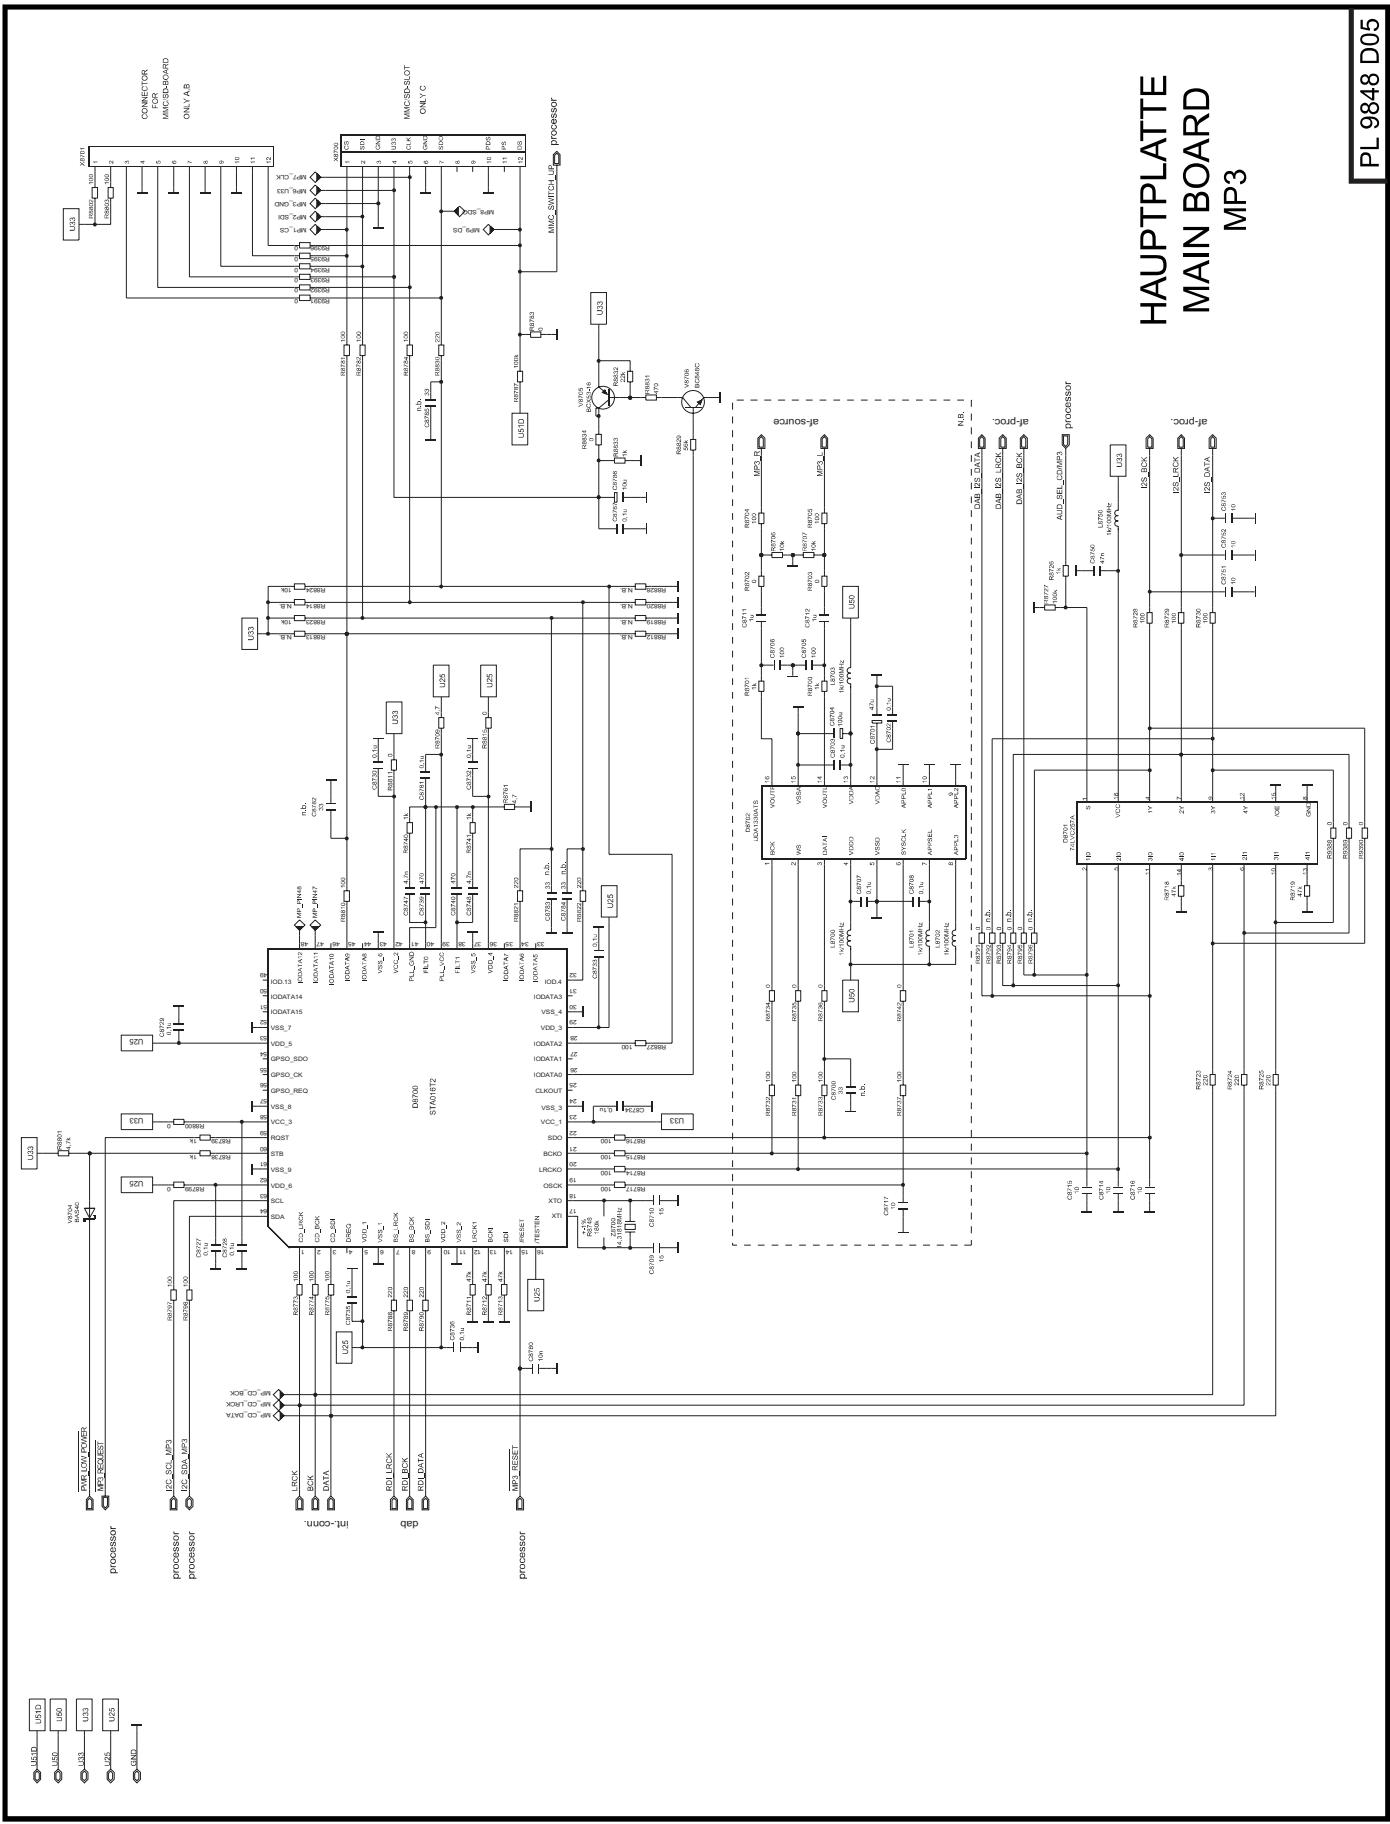


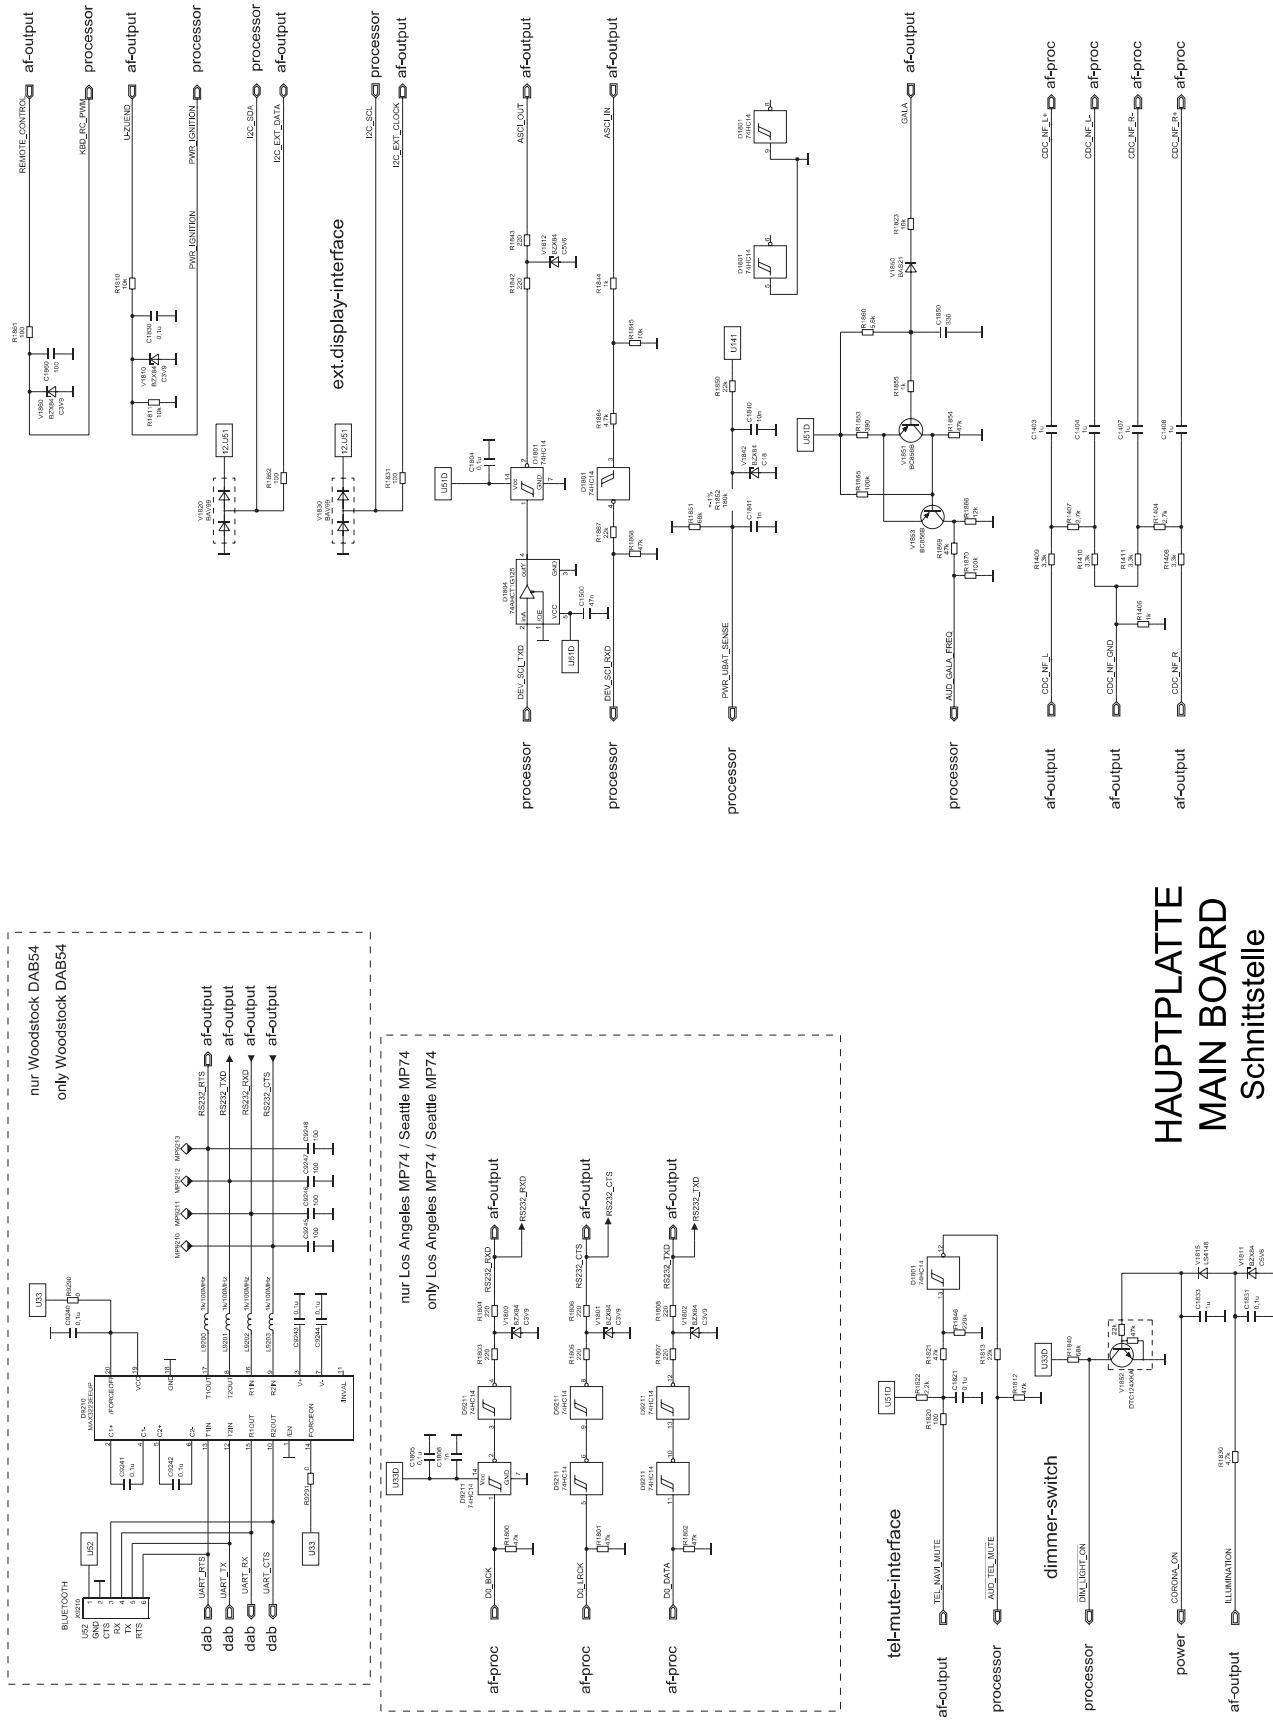


HAUPTPLATTE
MAIN BOARD
Schnittstelle
Interface

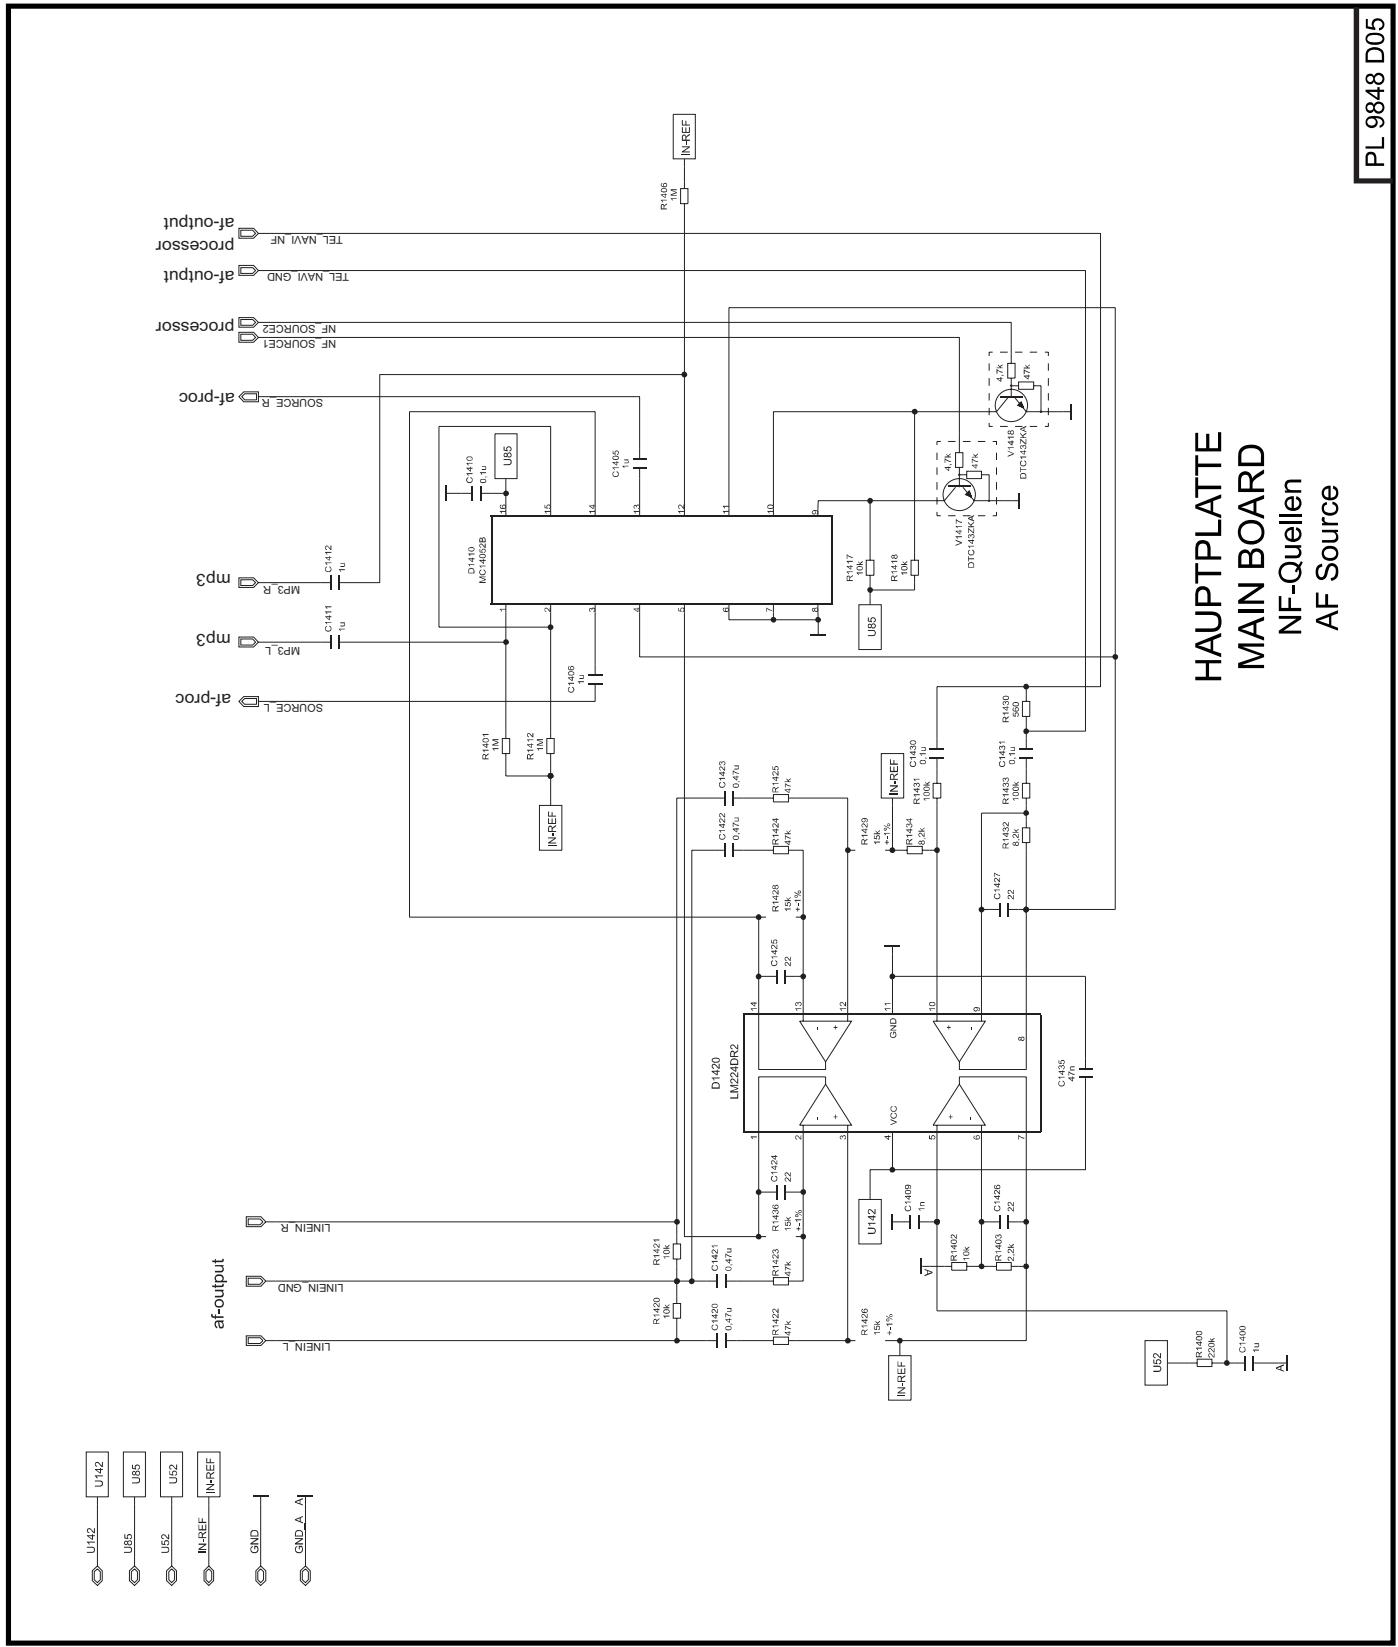

HAUPTPLATTE
MAIN BOARD
NF-Quellen
AF Source

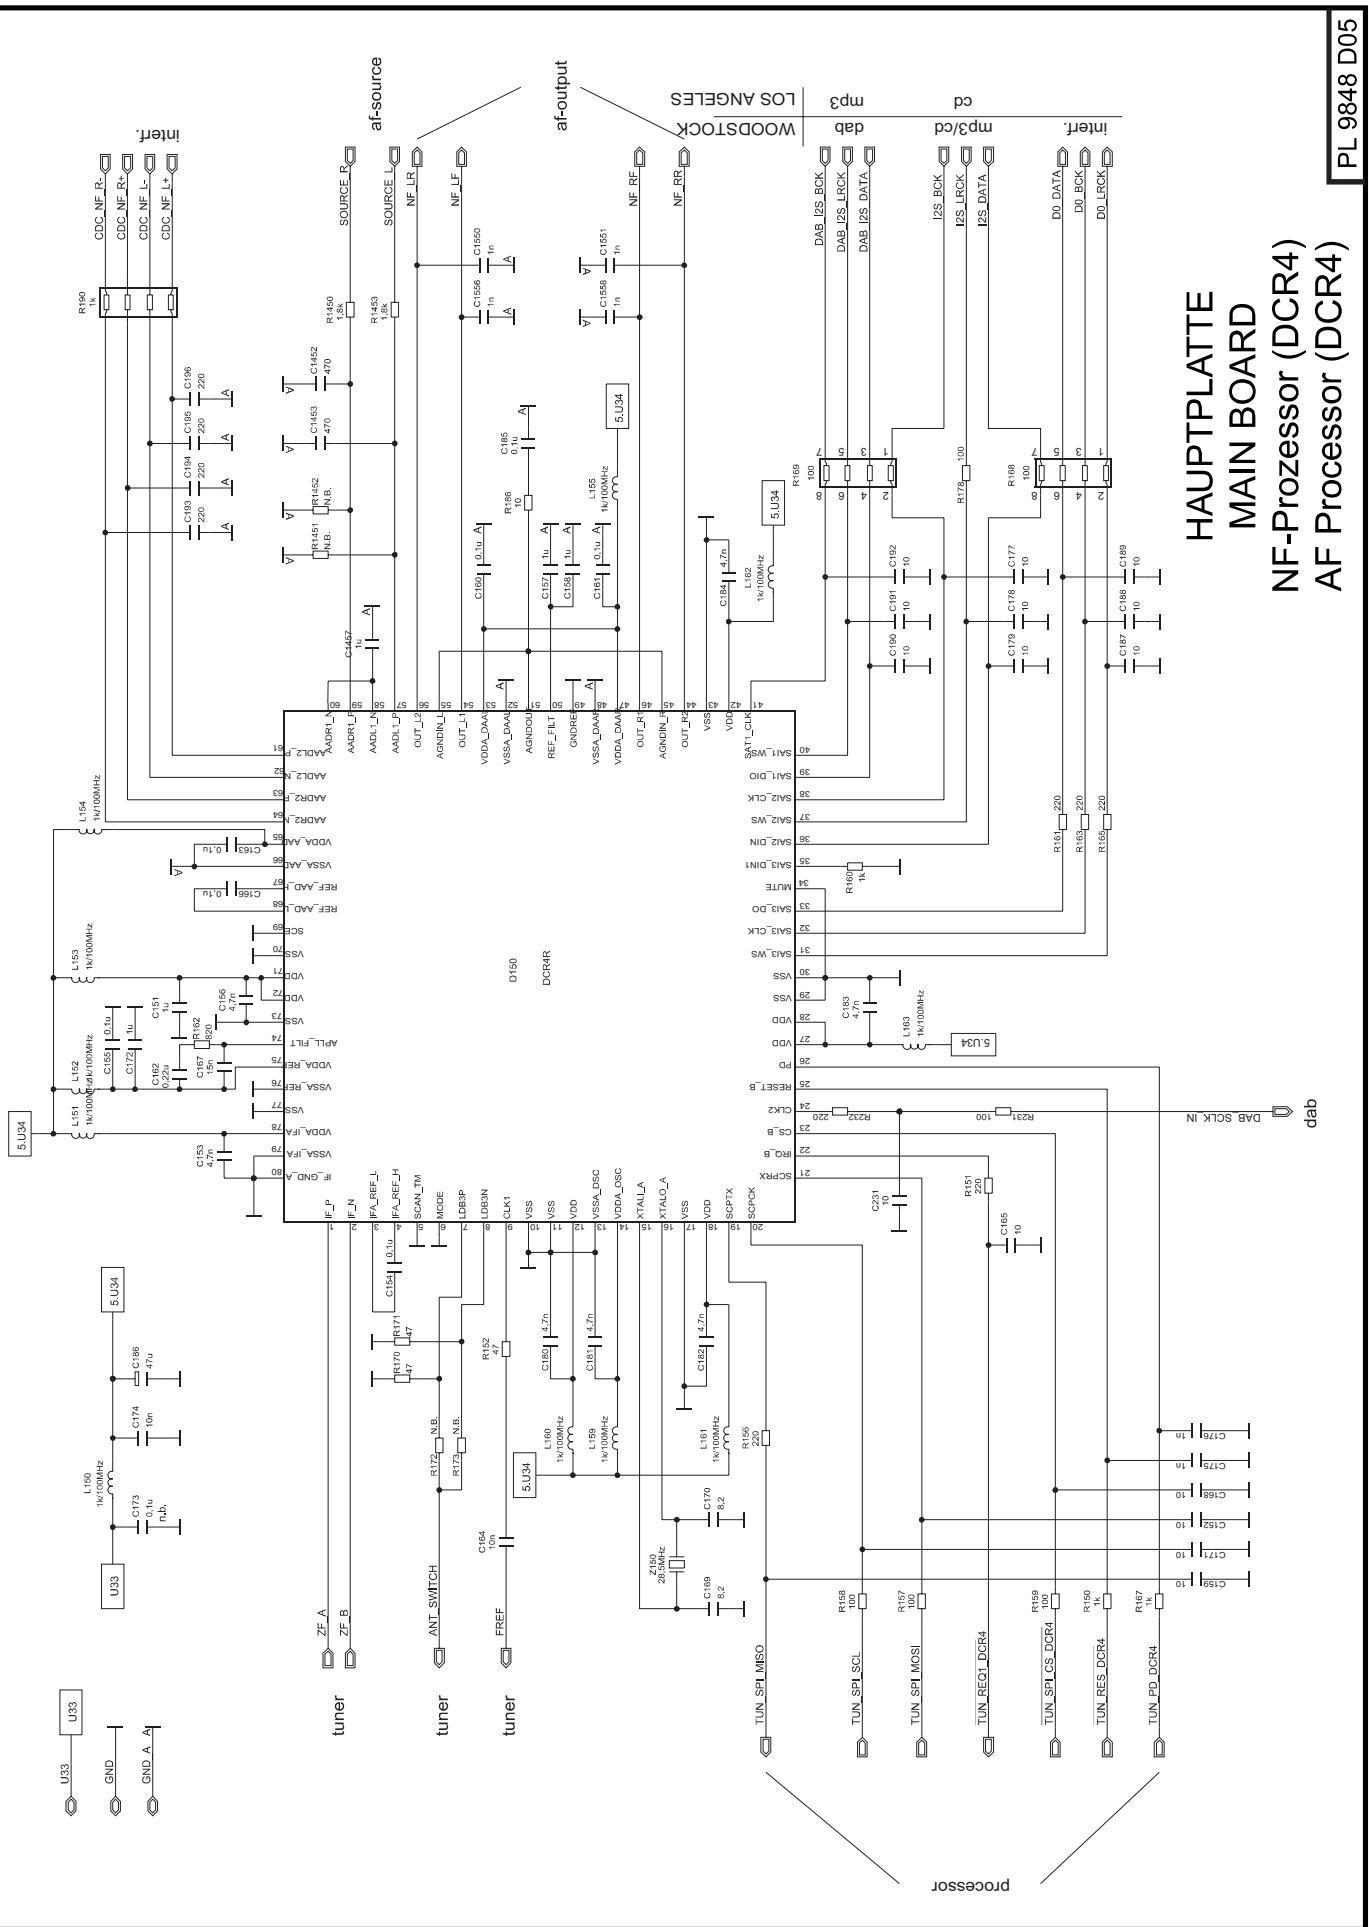

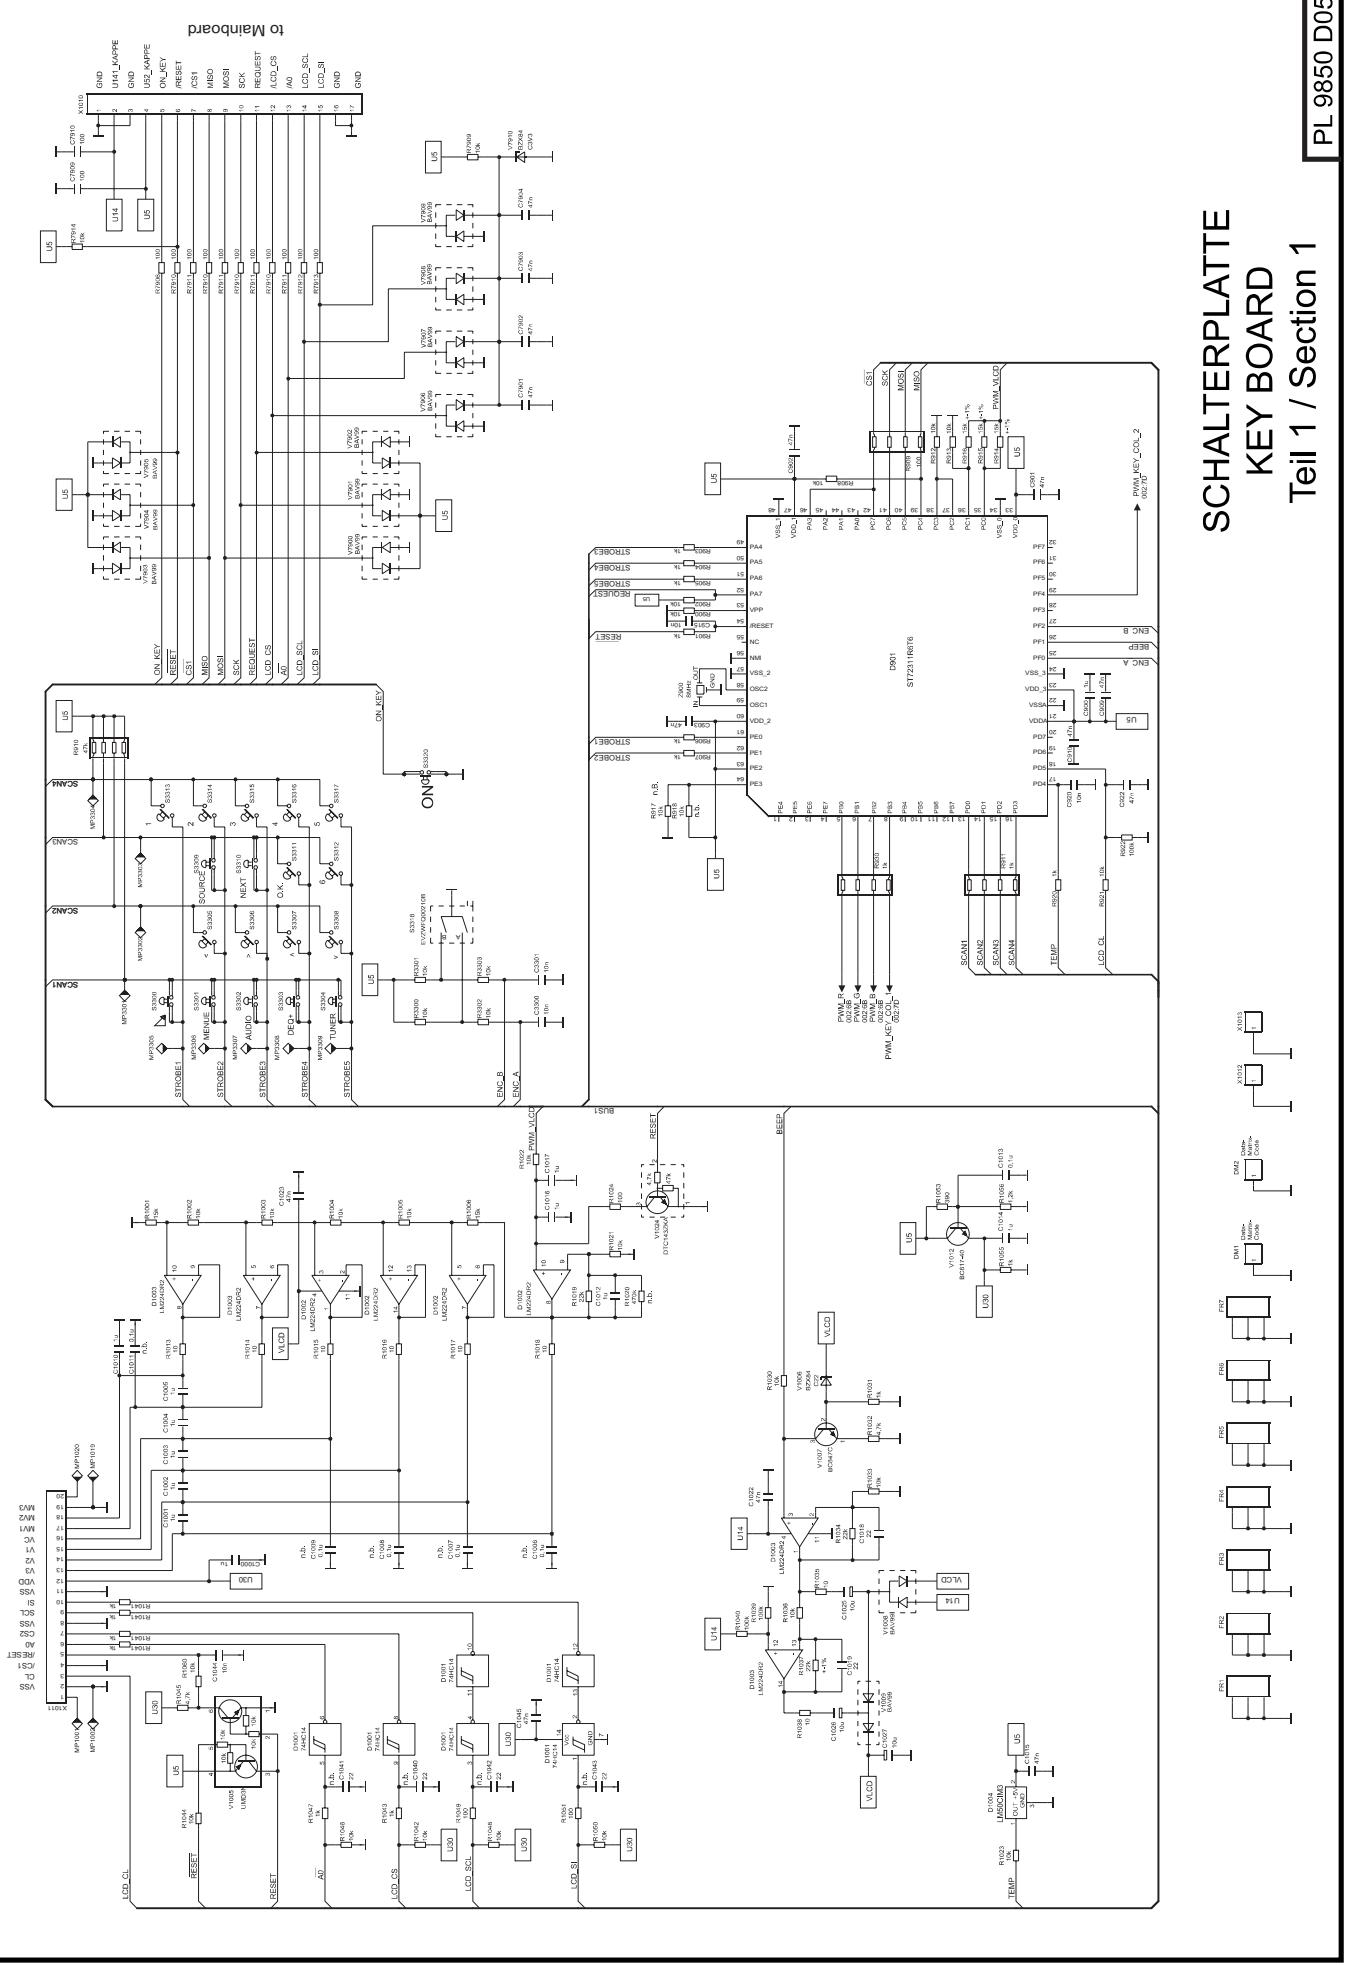



Teil 2 / Section 2

PL 9850 D05

SCHALTERPLATTE


KEY BOARD

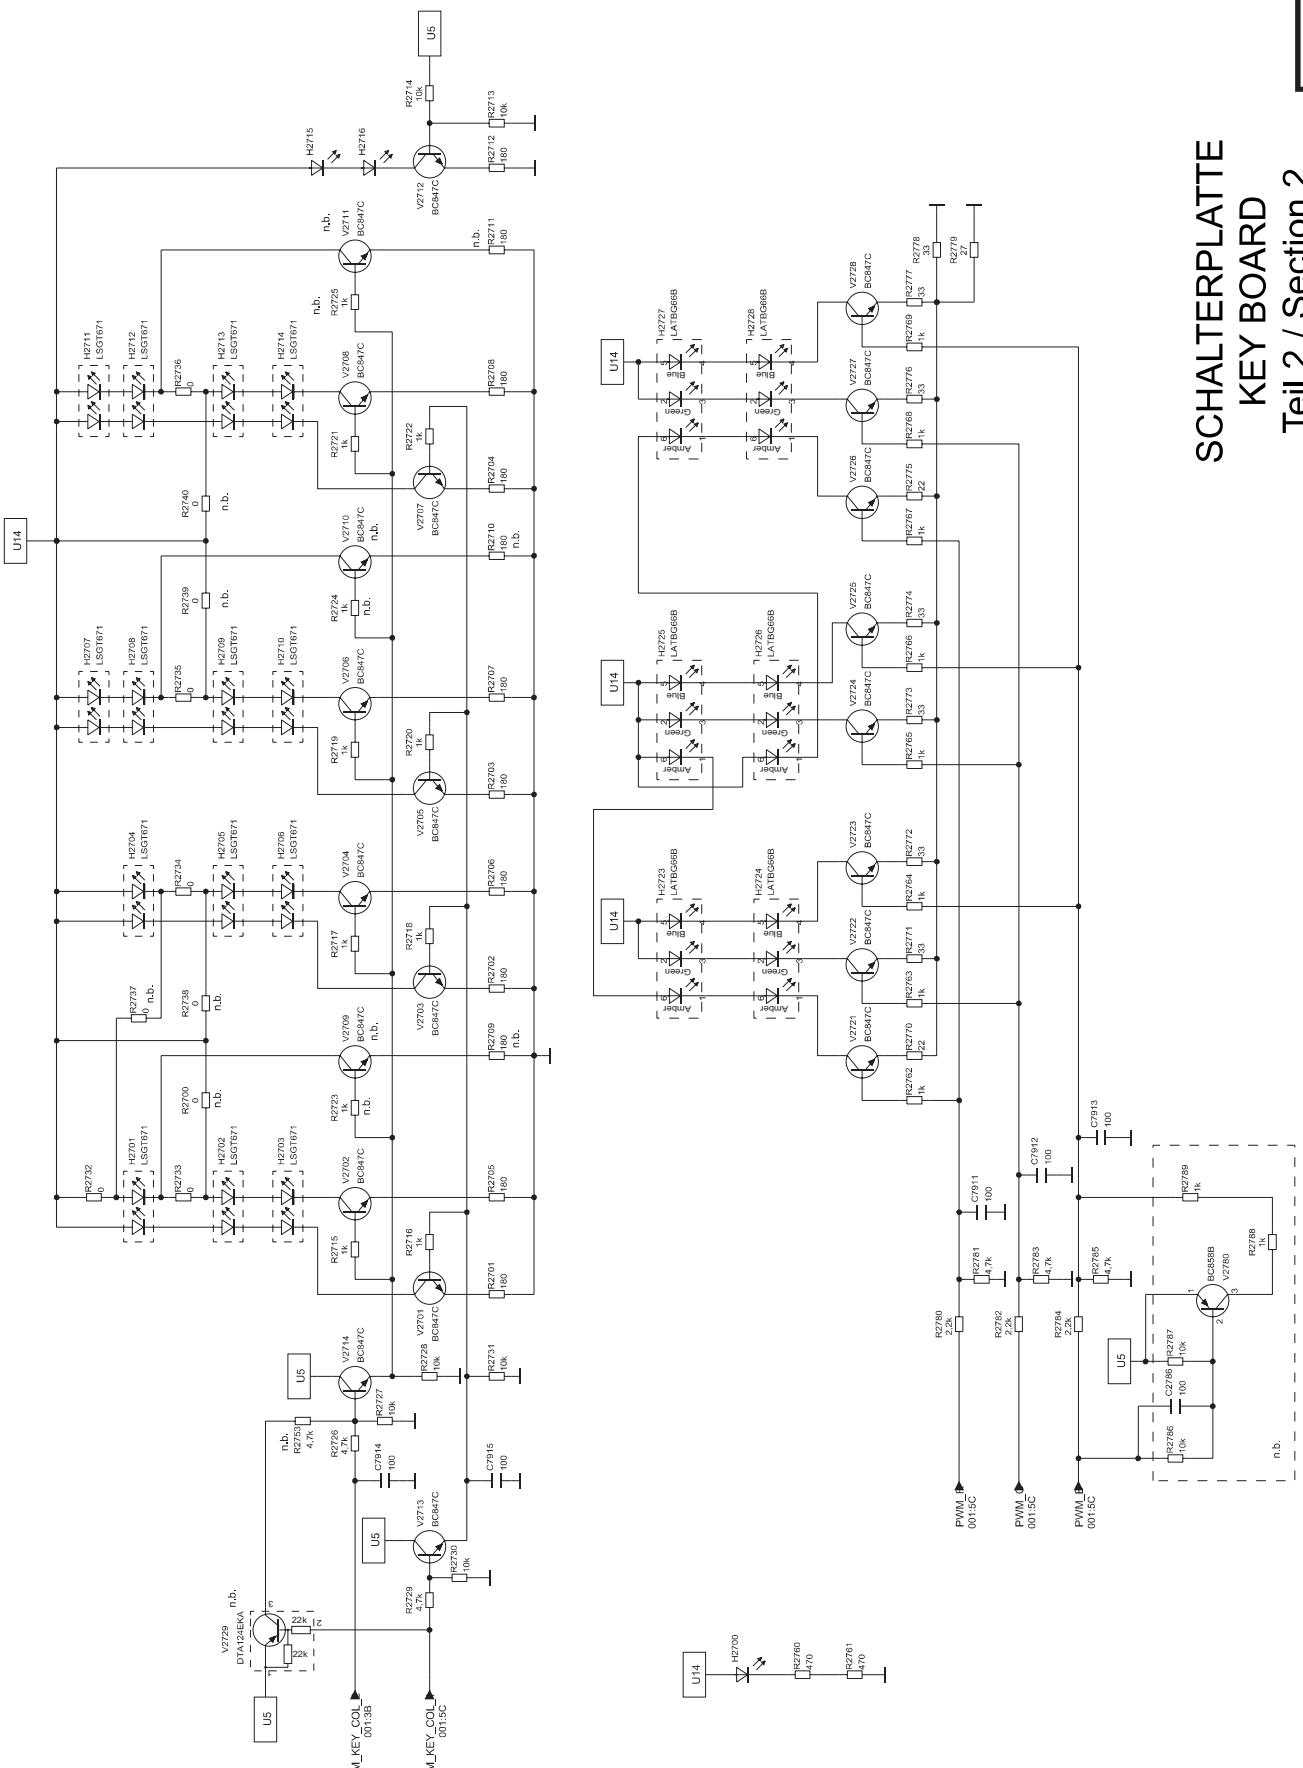

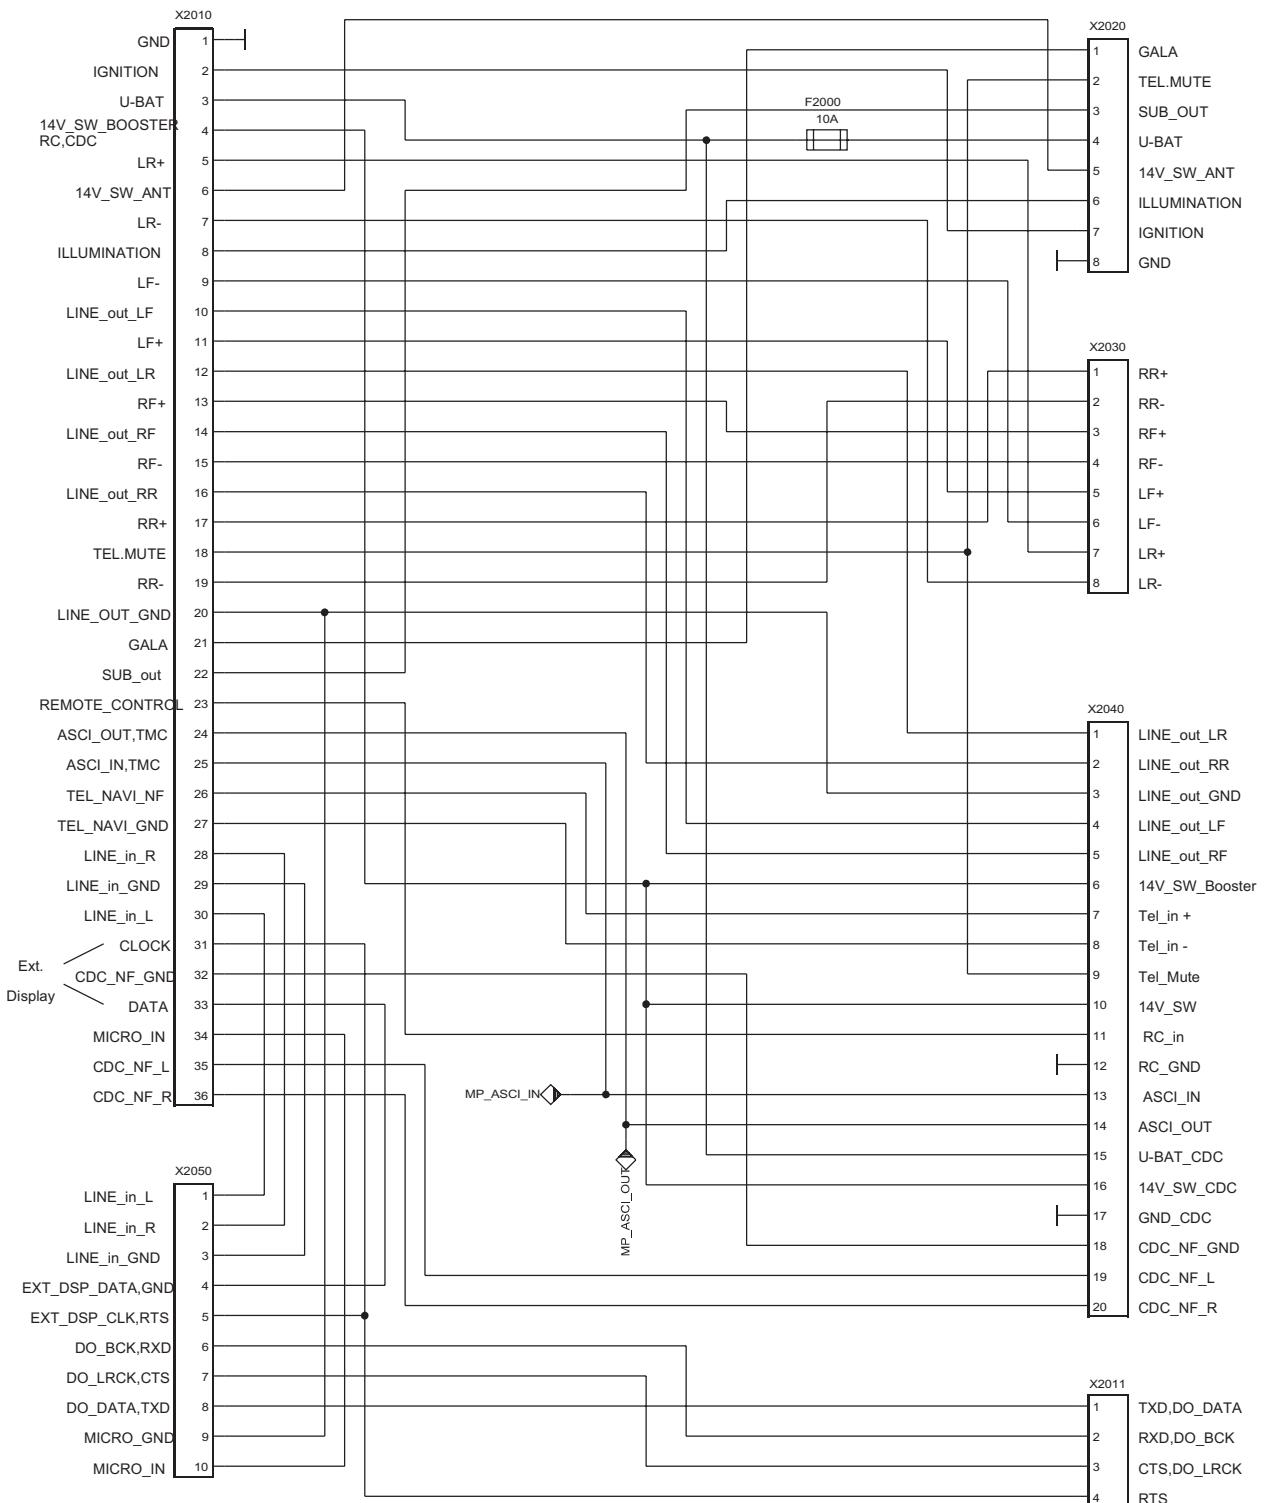

**ANSCHLUSSPLATTE
CONNECTOR BOARD**

PL 9849 D02

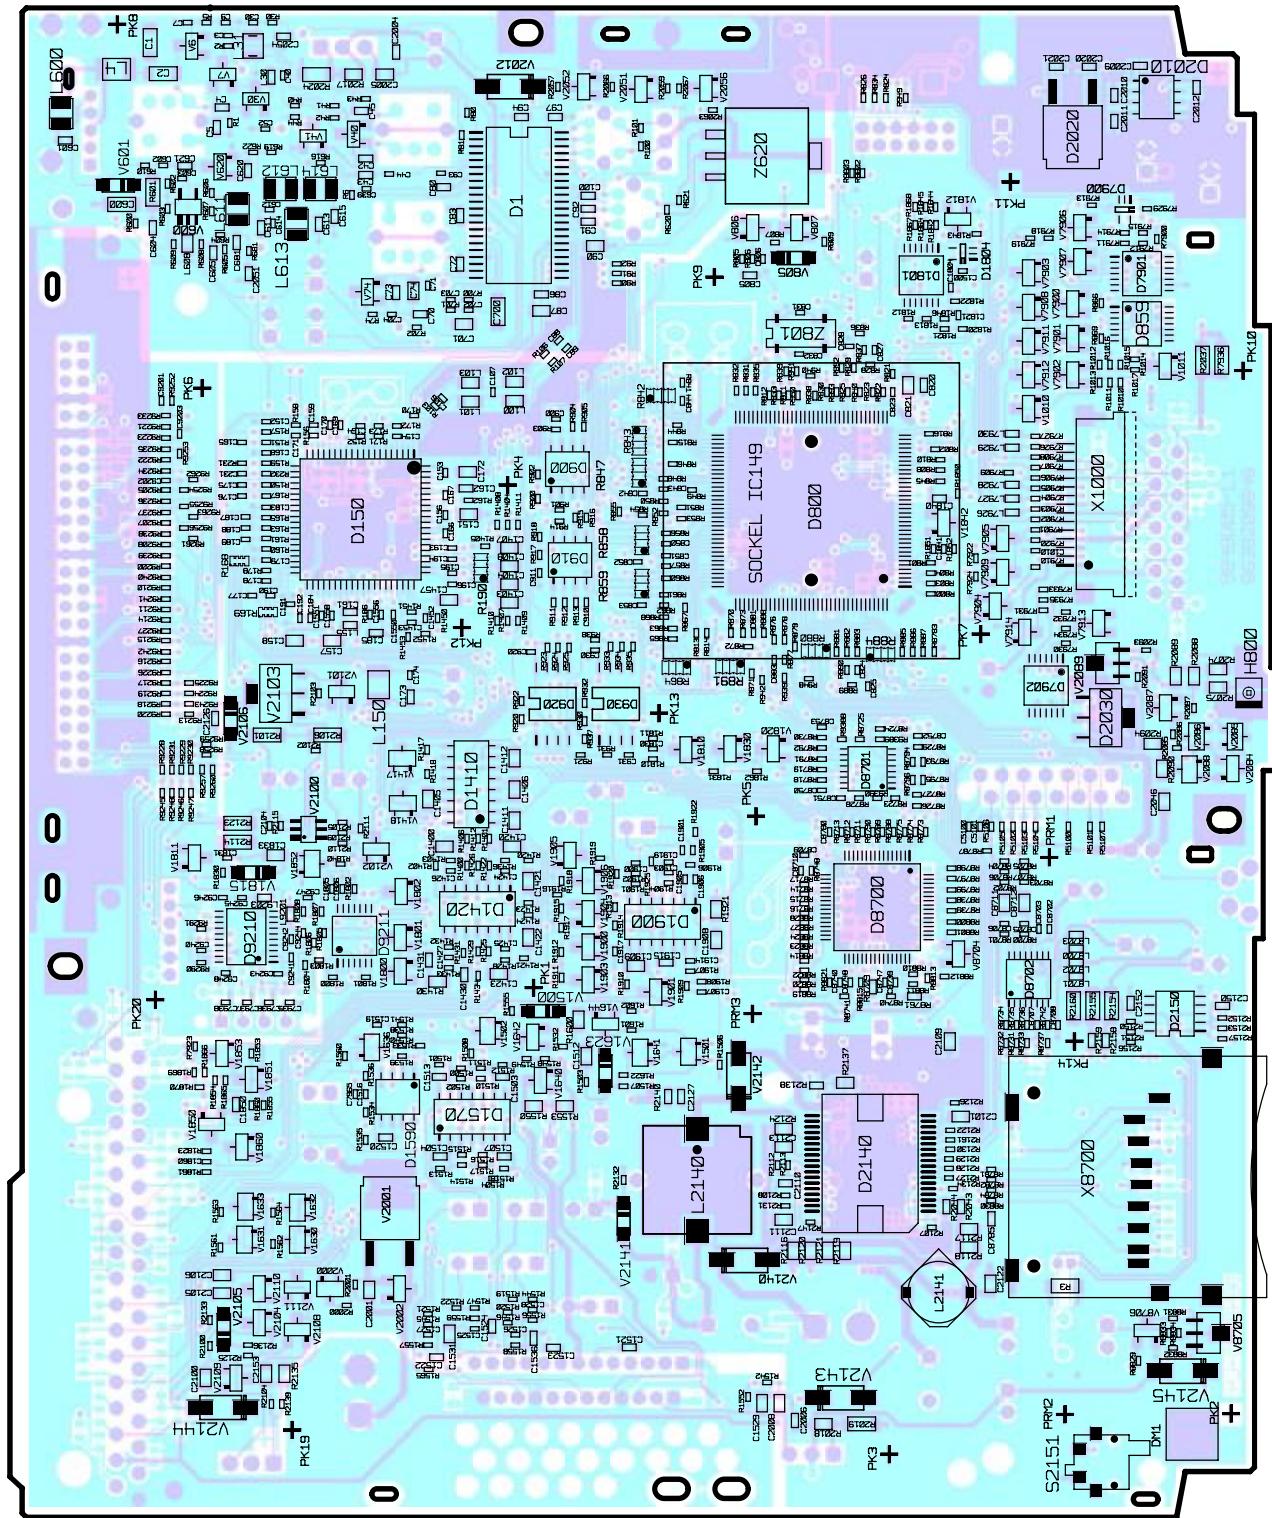

Hauptplatte
Main board
PL 8 638 219 848 D05
Chip