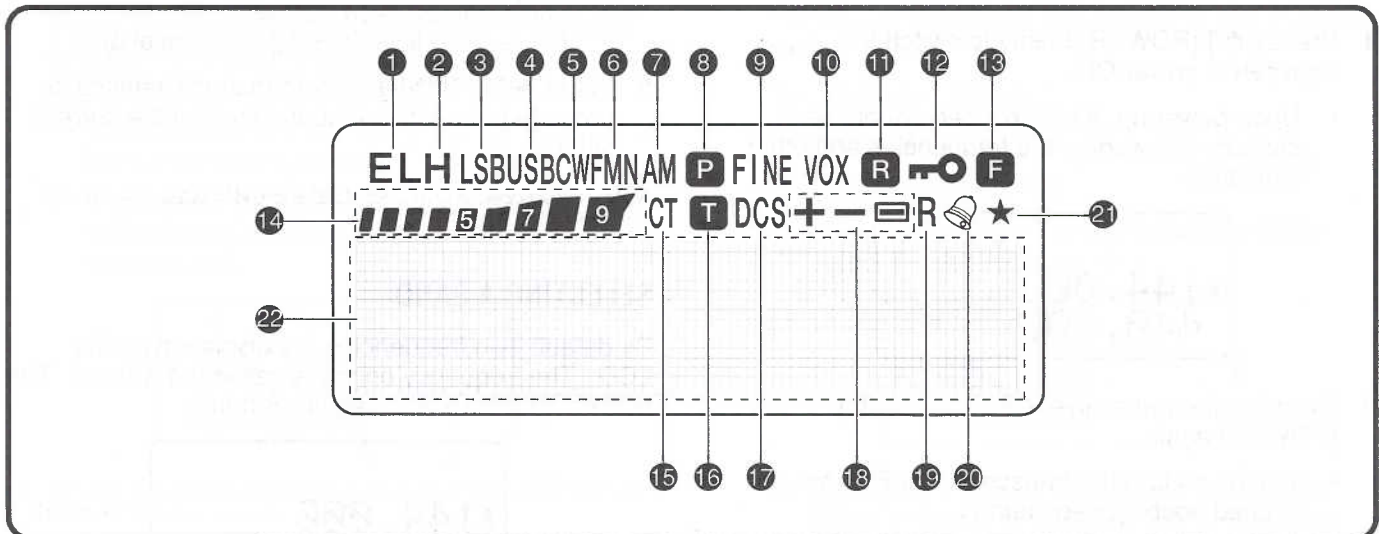


## DISPLAY

**1 EL**

Appears when the transmit output power is set to Low ("L") or Economic Low ("EL") {pages 7, 41}.

**2 H**

Appears when the transmit output power is set to High ("H") {pages 7, 41}.

**3 LSB**

Appears when lower side band (LSB) is selected for B-band {page 34}.

**4 USB**

Appears when upper side band (USB) is selected for B-band {page 34}.

**5 CW**

Appears when CW is selected for B-band {page 34}.

**6 WFMN**

"WFM" appears when wide FM mode is selected {page 34}. "FM" appears when normal FM mode is selected. "FMN" appears when narrow FM mode is selected {page 39}.

**7 AM**

"AM" appears when AM mode is selected {page 34}.

**8 P**

Appears when a Priority Scan is activated {page 25}.

**9 FINE**

Appears when a Fine Tuning function is activated {page 35}.

**10 VOX**

Appears when the VOX function is activated {page 41}.

**11 R**

Appears when the Automatic Simplex Check (ASC) is activated {page 14}.

**12 Lock icon**

Appears when the Lock function is ON {page 38}.

**13 F**

Appears when the function key is pressed.

**14 S-meter bars**

S-meter (RX) and relative RF power meter (TX).

**15 CT**

"CT" appears when the CTCSS function is activated {page 28}.

**16 T**

Appears when the Tone function is activated {page 13}.

**17 DCS**

Appears when the DCS function is activated {page 29}.

**18 +/- icon**

Appears when the repeater shift function is activated {page 12}.

**19 R**

Appears when the Reverse function is activated {page 14}.

**20 Bell icon**

Appears when the Tone Alert function is activated {page 40}.

**21 Star icon**

Appears when the displayed memory channel has been locked out {page 27}.

**22 Dot-matrix display**

76 x 16 dot-matrix display. It displays various information, such as the operating frequencies, menu settings, and etc.