

Hauptplatte

PL 8347 A4

P1101

- 1 = COM
- 2 = LF
- 3 = RF
- 4 = RR
- 5 = LR

N1000

- 1 = U5
- 2 = SCL-DISPLAY I
- 3 = SDA-DISPLAY I
- 4 = U53
- 5 = MASSE
- 6 = RESET-KAPPE

N1001

- 1 = STATUS
- 2 = U14C
- 3 = FB-KLIMA
- 4 = BELEUCHTUNG
- 5 = TAG / NACHT
- 6 = MASSE

DV2000

- 1 = MASSE
- 2 = MASSE
- 3 = LF +
- 4 = LF -
- 5 = RF -
- 6 = RF +
- 7 = DAUER +
- 8 = DAUER -
- 9 = BELEUCHTUNG
- 10 = S-KONT
- 11 = CODE +
- 12 = NF-MUTE
- 13 = GALA
- 14 = ANT
- 15 = GESCH +

DV1500

- 1 = NF-L-OUT
- 2 = MASSE
- 3 = NF-R-OUT
- 4 = NF-SPRACHSPEICHER
- 5 = U85
- 6 = L
- 7 = L
- 8 = WARNTON
- 9 = R
- 10 = R

DV1501

- 1 = U5
- 2 = NC
- 3 = SDA
- 4 = SCL
- 5 = CD-DATA-OUT
- 6 = CD-DATA-IN
- 7 = CD-CLOCK-OUT
- 8 = CD-CLOCK-IN
- 9 = MASSE
- 10 = U14D
- 11 = BOSE-NF

N2003

- 1 = FB-KLIMA
- 2 = BOSE
- 3 = CLOCK
- 4 = DATA
- 5 = ENA

P900

- 1 = EIN / AUS
- 2 = GALA EIN / AUS
- 3 = U141A
- 4 = BASS
- 5 = +
- 6 = FADER
- 7 = U5
- 8 = TREBLE
- 9 = -
- 10 = GROUND