



TRACKING SWITCH FUNCTION:
 POSITION OFF: SLAVE VOLTAGE CONTROL SETS VOLTAGE
 POSITION ON: MASTER VOLTAGE CONTROL SETS VOLTAGE
 (SLAVE V-CTL SETS RATIO)

Unless otherwise specified, all values are as follows:
 resistor values are in Ohms, i.e. 0R47, 5R6, 220, 5K6, 22K
 capacitor values are in Microfarads, i.e. 220p, 0u1, 2u2, 33
 inductor values are in Microhenries, i.e. 0u22, 5u6, 68, 2m2

This drawing is our property. Duplication, unauthorized use of any kind is prohibited.

Without Approval use only for inquiry.

Approval:

PCB Name: N/A		Title: LNG Wiring Diagram for LNG 2002B	
PCB Nr.: N/A		Used in:	
PCB Type:		Scale:	
Date:		Name:	
Drawn: GJO	Date: 23-Mar-2026 12:13:50	Change Index:	Change Notification Nr.:
Modified:		Date:	Name:
Checked:			
<input type="checkbox"/> Prototype <input type="checkbox"/> Production <input type="checkbox"/> BOM Done?		Drw. Type: Prj. Nr: 17014 Drw. Nr: 4415-0057B	
		Size: A3 Rev: 0 File: Wiring_BG_R2.sch	

Title: LNG Wiring Diagram for LNG 2002B		Used in:	Repl for:	Build No.:
Drw. Type:		Prj. Nr: 17014		
Size: A3		Rev: 0		Drw. Nr: 4415-0057B
File: Wiring_BG_R2.sch		Sheet 1 of 1		