



**datsphere wireless**  
your wireless solution provider

Technical Note 605000040.1.002.07



**BLUELINK**

**BlueLink RN-41**

**Bluetooth 2.0 EDR – OEM Module**

**Users Manual**



Copyright © 2007 datasphere wireless Ltd.

The contents of this document can be changed by datasphere wireless Ltd. without prior notice and do not constitute any binding undertakings from datasphere wireless Ltd. datasphere wireless Ltd. is not responsible under any circumstances for direct, indirect, unexpected damage or consequent damage that is caused by this document.

All rights reserved.

Release: 0107

Document version: 1.0

Document number: 605000040.1.002.07

Printed in Germany

## **Trademarks**

Registered trademarks from other companies are:

Bluetooth is a trademark owned by the Bluetooth SIG, Inc. Microsoft™, Windows™, Windows NT™, Windows 2000™, Windows CE™, Windows ME™, Windows XP™ are registered trademarks from Microsoft Corporation.

## **Important :**

**This Users Manual applies also to the RN-21/22/24 Bluetooth Modules, the "BluePort-XP" and "FireFly" Serial Adapter.**

## Table of Contents

<b>1.</b>	<b>About BlueLink RN-41</b>	<b>4</b>
1.1.	RN-41 Overview	4
1.2.	RN-41 Features	4
1.3.	RN-41 Specifications	5
1.4.	RN-41 Block Diagramm	5
1.5.	RN-41 Electrical Characteristics	6
1.6.	RN-41 Operating and Environmental Conditions	6
1.7.	RN-41 Dimensions	7
1.8.	RN-41 Pin Description	7
1.9.	RN-41 Standard PCB Layout Dimensions	8
<b>2.</b>	<b>Introduction</b>	<b>9</b>
2.1.	Making a connection	10
2.2.	Modes of operation	11
2.3.	Configuration	12
2.3.1.	Local Configuration (via serial port)	13
2.4.	Config Timer settings	13
2.5.	Using the PIO pins/DIP switches to perform quick configuration	13
<b>3.</b>	<b>RN-41 Command Reference</b>	<b>14</b>
3.1.	Set Commands	15
3.2.	Get Commands	17
3.3.	Change Commands	18
3.4.	Action Commands	18
3.5.	Limitations of using 7 Bit data mode	19
3.6.	Commands to Manipulate GPIO	20
<b>4.</b>	<b>Using Low Power Modes</b>	<b>21</b>
4.1.	Inquiry(Discovery) and Page(Connection) Windows	21
4.2.	SNIFF Mode	21
4.3.	Disabling Output drivers	23
4.4.	Profile Selection	23
4.5.	PIOs used as modem control signals	23
<b>5.</b>	<b>Command Quick Reference</b>	<b>24</b>
<b>6.</b>	<b>Factory Default Power up Settings</b>	<b>25</b>
<b>7.</b>	<b>Common Problems and Questions:</b>	<b>26</b>
<b>8.</b>	<b>Example of a Master Discovery/Connection Sequence</b>	<b>27</b>
<b>9.</b>	<b>"Firefly" Configuration</b>	<b>28</b>
<b>Appendix A</b>	<b>"FireFly" Evaluation Board Physical Ports</b>	<b>31</b>

## 1.1. RN-41 Overview

- Fully Qualified Bluetooth 2.0/1.2/1.1 module, using CSR BC04 External
- Class 1 high power amplifier, on Board ceramic RF chip antenna.
- Conforms to FCC, CE and the EMI standard of each country.
- Modular Approval: FCC ID: T9J-RN41, ICS: 6514A-RN41, CE: 0681
- Scatternet support, 802.11 coexistence, RoHS compliance.
- UART, USB, PCM interfaces available to various applications.
- 8MB on board flash, HCI, or SPP software stacks available.
- Embedded Bluetooth stack profiles included (requires no host MCU stack): BCSP, SPP, DUN, LAN, GAP SDP, RFCOMM, and L2CAP protocols.


## 1.2. RN-41 Features

- Baud rate speeds: 1200bps up to 921.6Kbps
- Class 1 radio, 330' (100m) distance, 15db output transmitter
- Low power consumption (50mA TX, 40mA RX (connected), 15mA (sniff mode), 2mA (idle )
- UART local and over-the-air RF configuration
- Small-form factor SMT radio modem 13mm x 25mm.
- Auto-discovery/pairing requires no software configuration (instant cable replacement).
- Auto-connect master, and character based trigger modes.
- Operating temperature range: -40~+85°C.
- Secure and robust communication link
  - FHSS (Frequency Hopping Spread Spectrum)
  - 128 bit encryption
  - Error correction schemes for guaranteed packet delivery

### 1.3. RN-41 Specifications

Item		Specifications
Frequency		2402 ~ 2480MHz
Modulation		FHSS/GFSK
Channel intervals		1MHz
Number of channels		79CH
Transmission rate (over the air)		721kbps-2.0Mbps
Receive sensitivity		-80dBm typ.
Output level (Class1)		15dBm max.
Dimensions		
	With antenna	13.2(W)X25.8(L)X2.05(H)mm

### 1.4. RN-41 Block Diagramm

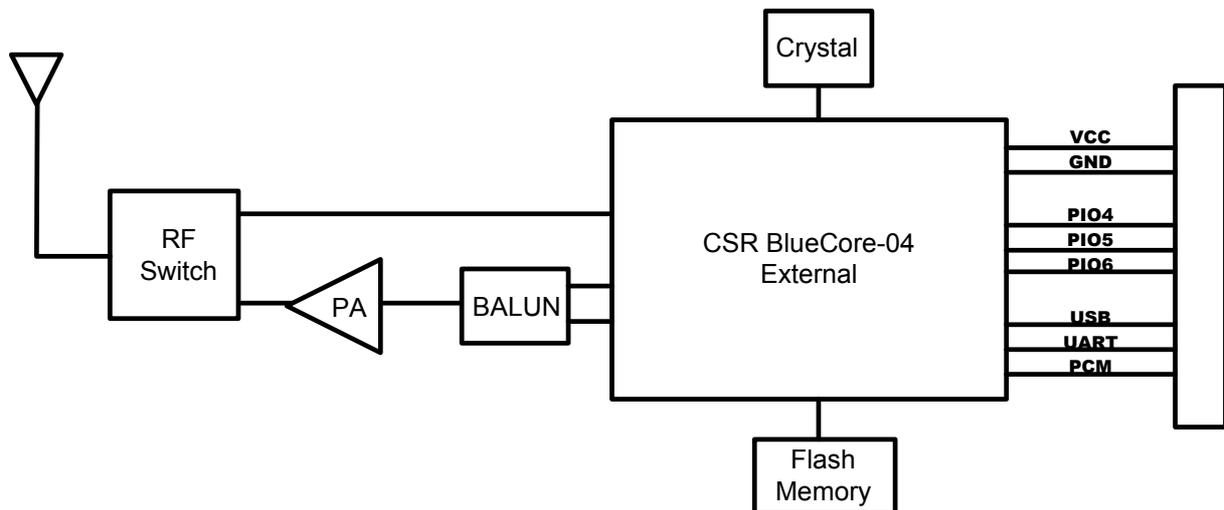


## 1.5. RN-41 Electrical Characteristics

	Min	Typ.	Max.	Unit
Supply Voltage (DC)	3.0	3.3	3.6	V
RX Supply Current	-	35	60	mA
TX Supply Current	-	65	100	mA
<b>Average power consumption</b>				
Standby/Idle (default settings)	-	25	-	mA
Standby/Idle (lowest power)	2.5	4	-	mA
Connected(normal mode)		40		mA
Connected( low power Sniff)		15		mA

## 1.6. RN-41 Operating and Environmental Conditions

Operating Temperature Range	-40 °C ~ 85 °C
Storage Temperature Range	-40 °C ~ 85 °C
Relative Humidity (Operating)	≤90%
Relative Humidity (Storage)	≤90%


### 1.7. RN-41 Dimensions in mm

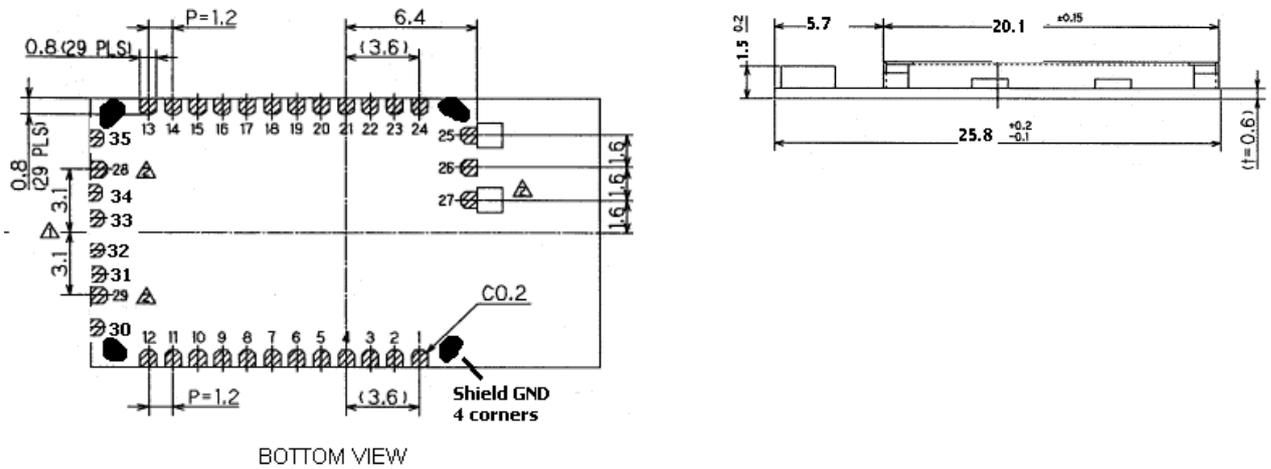

### 1.8. RN-41 Pin Description

Pin	Pin Name	Pin	Pin Name
1	GND	15	UART_RTS
2	SPI_MOSI	16	UART_CTS
3	PIO[6]	17	USB_D+
4	PIO[7]	18	USB_D-
5	RESET	19	PIO[2]/USB_PULL_UP
6	SPI_CLK	20	PIO[3]/USB_RESUME
7	PCM_CLK	21	PIO[5]
8	PCM_SYNC	22	PIO[4]
9	PCM_IN	23	SPI_CSB
10	PCM_OUT	24	SPI_MISO
11	VDD (3.3Vdc)	25	GND
12	GND	26	NC
13	UART_RX	27	GND
14	UART_TX	28	GND
		29	GND
30	AIO2	33	PIO9
31	PIO11	34	PIO8
32	PIO10	35	AIO1

### 1.9. RN-41 Standard PCB Layout Dimensions (mm)

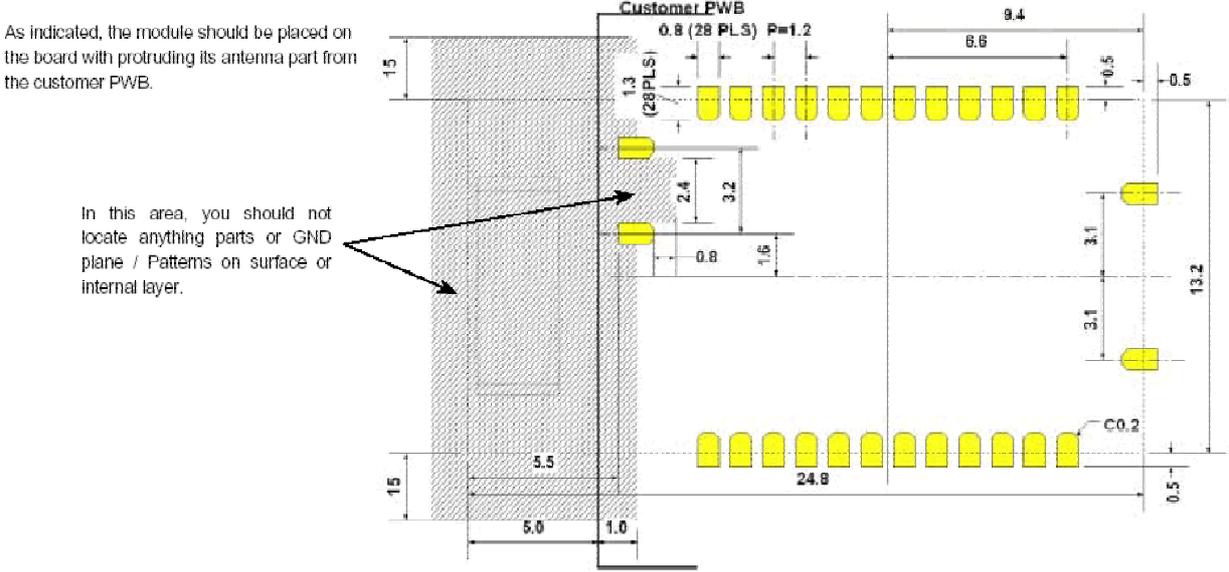

## 2. Introduction

### Scope

This Command Set document along with the RN-21/41 (class 1), RN22/24 (class 2), and the **FireFly™** evaluation board are created to enable developers and integrators an opportunity to create wireless networks using Bluetooth technology. The goal is to make the transition to Bluetooth wireless networks as seamless and easy as possible. This document will explain how to establish Bluetooth communications between Bluetooth enabled devices for data applications.

### Background

The **FireFly** evaluation board is designed to accommodate the Class1 Bluetooth radio modem serial modules with 2.4GHz RF ceramic chip antenna or external SMA antenna Jack. The **RN-21, RN-22, and RN-41** modules are Bluetooth ver. 2.0 compliant. The evaluation board enables a stable platform environment to test serial RS-232 cable replacement over Bluetooth RF links before going directly to an embedded printed circuit board design and layout.

### Commands


This document describes the protocol used to control and configure **RN-XX** Bluetooth Serial Modules. The protocol is similar to the industry standard Hayes AT protocol used in telephone modems due to the fact that both types of devices are connection oriented. Appropriate commands have been provided to make the module perform the two core actions of a Bluetooth device, which is make/break connections and Inquiry. Additional commands are also provided to perform other functions. The **RN-XX** serial radio modems can be configured, commanded, and controlled through simple ASCII strings through the hardware serial UART or over a remote Bluetooth RF connection .

### Applications

The **FireFly and RN-24** evaluation boards can be used for both embedded and PC product applications. The **FireFly** has RS-232, DB-9 and 0-3.3Vdc direct UART interfaces to the module. **RN-24** has thru hole pins on pin-strip headers, 12 General Purpose 3.3Volt input/output pins (PIO's) available for use. Both modules have the ability to control power to the module, and reset to factory defaults.

### Pico-Nets

For applications that require more than point-to-point (2) devices communicating simultaneously – this is called a pico-net. These applications require one of the Bluetooth devices to manage all the network connections. The easiest implementation is using a Personal Computer (PC) that manages this activity with MS Windows Bluetooth stack software and USB Bluetooth Communicator plugged into the PC (see figure below).

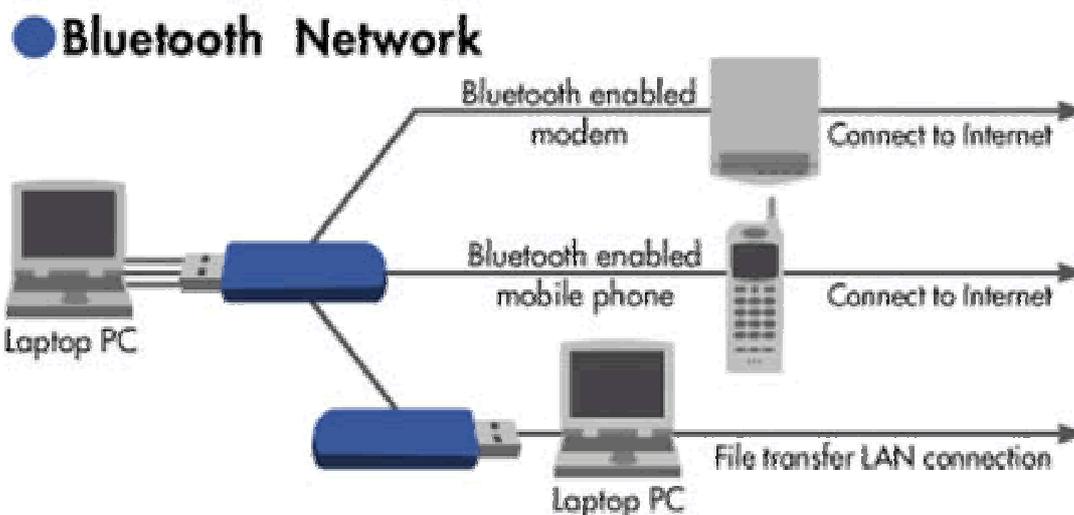

RN-24



Firefly

#### Note:

Applications that require the embedded device not the PC to manage the connection process for 7 simultaneous connected remote devices you will need to license the **Roving Networks** reference design and Bluetooth stack software for embedded pico-nets.

#### 2.1 Making a Connection

**FireFly** shows up under Service discovery defaulted as Serial Port Profile (SPP) Service "SPP on FireFly-5302", where SPP is the service name and RN-5302 is the local device name. The local device name can be changed, and defaults from the factory to the last 2 bytes of the Bluetooth address.

To connect to **FireFly**, browse for services, you should see: "SPP" as the Profile. **FireFly** and will be connected to a Virtual COM port on PCs, Palm Pilot's, PocketPCs, or other clients. Once connected, data will flow in both directions in regular data mode as if the serial port were locally attached. Commands to the device can be sent by a remote RF Bluetooth device or on the local UART hardware connection (if not connected over Bluetooth) by typing "\$\$\$" (three dollar signs) **FireFly** is a Class1 Bluetooth device with high power transceiver (100meters/330 feet) actual range may vary due to environment or type of client device used to connect to **FireFly**.

**NOTE:**

Only one client can make connection to **FireFly** at a time, and there is a limit of 7 simultaneous communicating devices in a Bluetooth pico-net network.

**2.2. Modes of Operation****0- Slave mode**

This is the default mode, whereby other Bluetooth devices can discover and connect to the device. Outbound connections can also be made in this mode.

**1- Master Mode**

This mode is useful when the device only wants to initiate connections (not receive them). In this mode the device will NOT be discoverable or connectable.

**2- Trigger Master Mode**

In this mode, the device will automatically connect to the pre configured remote slave address when a character (or characters) are received on the local UART. Connection will continue until a configurable idle timer (1 to 255 seconds) determines that no more data is being received, or a configurable BREAK character is seen.

**3-Auto-connect Master Mode**

This mode can be set by command, or by sensing of Switch 3 during powerup on the FireFly.(PIO6 high on the module). If this mode is set, the device will initiate a connection to the pre-stored remote address immediately upon power up. If no address is stored, an inquiry process will be attempted and the first device found that matches the COD will be stored. In this mode, data is passed without being interpreted by the Blueport (high speed), hence the connection cannot be broken via command. If disconnect occurs, the device will attempt to re-connect until successful.

**4-Auto-connect DTR Mode**

This mode must be set by command. This mode operates like mode 3 Auto-Connect, except that the connection and disconnection are controlled by Switch 3 on the FireFly.(PIO6 on the module). Setting the Switch ON/PIO6 high will initiate auto-connect process, and OFF/PIO6 low will cause a disconnect.

**5-Auto-connect ANY Mode**

This mode must be set by command. This mode operates like mode 4 DTR mode, except that each time the Switch/PIO is set, an inquiry is performed and the first device found is connected. The stored address is NOT used, and the found address is never stored.

## 2.3. Configuration

**Command Mode (vs Normal Data mode)-** Upon powerup, the device will be in data mode. To enter command mode, The characters "\$\$\$" must be sent. The device will respond with "CMD". To exit command mode, send "---<cr>". The device will respond with "END".

Parameters, such as the Bluetooth Name, Class of Device and Serial Port settings can be viewed and configured. This can be done locally through the serial port UART or from a remote Bluetooth RF link. To access configuration, the device must be in command mode by issuing (\$\$\$). While in command mode, the device will accept ASCII bytes as commands.

### 2.3.1 Local Configuration (via serial port)

Use a normal RS-232 pass through cable from PC passing ASCII characters through the terminal to the **FireFly**. The communications settings should match the settings used when **FireFly** connects, for example: the default is 115,200bps, 8 bits, No Parity, 1 stop bit, and hardware flow control enabled. Local configuration works at any time when the device does NOT have a Bluetooth connection, and also works under certain conditions when the device is connected (see the table below). If the device is in configuration mode and a connection occurs, the device will exit configuration mode, and data will pass back and forth from the remote device.

Run your favorite terminal emulator, HyperTerminal or other program. Type "\$\$\$" on your screen. You should see "CMD" returned to you. This will verify that your cable and comm. settings are correct. Valid commands will return an "AOK", response, and invalid ones will return "ERR ". Commands that are not recognized will return a "?".

To exit command mode, type "---<cr>". (three minus signs).

#### NOTE1 :

You can enter command mode locally over the serial port at any time when not connected.

Once a connection is made, you can only enter command mode if the config timer has not expired.

To enable continuous configuration, set the config timer to 255. Also, if the device is in Auto Master mode 3, you will NOT be able to enter command mode when connected over Bluetooth.

### 2.3.1 REMOTE CONFIGURATION (via Bluetooth)

It is often useful to be able to perform configuration remotely over a Bluetooth connection. To do this, connect to the device over Bluetooth, and using your terminal emulator, perform the same steps as you would for local configuration above. When finished configuring, be sure to either reset the device, or Send the "---"command, which will exit configuration mode and allow data to pass normally.

NOTE 2: You can only enter command mode remotely over Bluetooth if you have made a connection and sent the \$\$\$ within the "config timer" window after powerup. This can be modified, the default config timer expires 60 seconds after powerup. Once the timer

has expired, any data sent to the device will pass unmodified and unrecognized by the command interpreter. The timer can be set to any value from 0 (disable remote configuration) to 0xFF hex , which allows continuous (no timeout) configuration.

### WARNING:

Configuration (local or remote) is NEVER enabled when the device is in auto-mode and is connected over Bluetooth.

## 2.4. Config Timer settings

VALUE (decimal)	DESCRIPTION
0	No remote config, No local config when connected
1-252	Time in seconds from powerup to allow config
253	Continuous config LOCAL only
254	Continuous config, REMOTE only
255	Continuous config, both LOCAL and REMOTE

## 2.5 Using the PIO pins/DIP switches to perform quick configuration

Function	DIP Switch (adapters)	PIO (modules)	Settings
Factory Reset	1	PIO 4	OFF (0V) = disabled, ON (3V) = ARMED
Auto Discovery/Pairing	2	PIO 3	OFF(0V) = disabled, ON(3V) = enabled
Auto-Connect	3	PIO 6	OFF(0V) = disabled, ON(3V) = enabled
Baudrate	4	PIO 7	OFF(0V) = 115K, ON(3V) = 9600

**Factory Reset-** Set this switch/PIO on powerup. This arms the reset function. Then toggle the switch/PIO 3 times and all settings in the device (other than the Bluetooth name) will return to defaults.

**Auto Discovery/Pairing Mode** - Used with Switch3/PIO6. If Switch3/PIO6 also set,, the device will perform a device Inquiry Scan, searching for a partner Device with a special matching class, (0x55AA) and once found, store the address of such device into the remote address field, and then auto-connect to the remote device. If Switch3/PIO6 is NOT set, the device will enter slave mode with the special matching class, waiting to be found by the master. This mode is usually set once on both ends of a pair of devices, for instant "cable replacement", and then removed.

### **Auto Connect mode**

This is equivalent to auto-master mode 3 in software. The device will connect to the stored address. If Switch2/PIO3 is also set, new discovery/pairing can be made, see above.

### **Baud Rate select**

This is used to configure 9600 or 115K default baudrate. If the baudrate is configured in software, this switch is ignored.

### **NOTE:**

For the purpose of configuration above, the swithes/IO pins are sampled ONLY at power up time, (during the first 500milliseconds) so they can be used for other functions once the device is in operation. The exception is the factory reset switch/PIO, which once enabled, can be toggled at any time after powerup, a total of 3 transitions will cause the factory reset to occur.

## **3. RN-41 Command Reference**

The commands are all single or 2 character, generally comma delimited. Commands and hex input data can be upper or lower case. Text data, such as Bluetooth name, and pin code, are case sensitive. Commands fall into 4 general categories:

### **1. SET COMMANDS**

Store information permanently and take effect after power cycle or software reset.

### **2. GET COMMANDS**

Retrieve the permanently stored information for display to the user.

### **3. CHANGE COMMANDS**

Temporarily change the value of serial baudrate, parity, etc.

### **4. ACTION COMMANDS**

Perform action such as inquiry, connect, etc.

### 3.1. SET COMMANDS

- S7,<1,0>** 7 bit data mode. 1 to enable, 0 to disable. (setting can be seen with the "d" command).
- SA,<1,0>** Authentication. 1 to enable, 0 to disable. This will force authentication when any remote device attempts to connect. Regardless of this setting, if a remote device forces authentication, this device will respond with the stored pin code. Once a remote device has exchanged pin codes with this device, a link key will be stored for future use. Up to 8 keys are automatically and permanently in flash on the device, in a first in, first out fashion.
- SB,<timer>** Send BREAK. This is an immediate command, which can send a BREAK signal on the TX . The timer is used to send a variable length BREAK signal.
- Timer value Break length (in milliseconds)  
1= 37ms, 2=18.5ms, 3=12ms, 4=9ms, 5= 7ms, 6=6ms.
- Example : "SB,2" sends a 18.5 millisecond break signal.
- SC,<hex word>** Service Class ( 16 bits, 11 used, this is used with Device Class below to create the 24 bit class of device number.
- Example : "SC,0002"
- SD,<hex word>** Device Class (major and minor in a 16bit word, used with service class above)
- Example : "SD,8040"
- SE,<1,0>** Encryption 1 to enable, 0 to disable.
- SF,1** Set Factory Defaults.
- SI, <hex word>** Inquiry Scan Window. Sets amount of time device spends enabling inquiry scan (discoverability) . Minimum value is 0x0012, corresponding to about 1% duty cycle. Inquiry interval is fixed at 0x1000, so time spent in inquiry is 0x12/0x1000 by default. Maximum value is 0x1000, set to 0x0000 to disable inquiry scan and make device non-discoverable. Default value is 0x0200.
- SJ, <hex word>** Page Scan Window. Sets amount of time device spends enabling page scan (connectability) . Minimum value is 0x0012, corresponding to about 1% duty cycle. Page Scan interval is fixed at 0x1000, so time spent in page scan mode is 0x12/0x1000 by default. Maximum value is 0x1000, set to 0x0000 to disable page scan and make device non-connectable. Default value is 0x0200.

**SL,<E,O,N>** Parity. Can be any of, Even, Odd, or None. Only the first character is needed

Example : "SL,E" sets the parity to Even.

**SM,<3,2,1,0>** Mode (0=slave, 1=master,2=trigger, 3=auto)

Example : "SM,1" sets the mode to Master

**SN,<name>** Friendly Name of the device, 16 characters maximum.

Example : "SN,MyDevice"

**SO,<text>** Extended Status String, 8 character maximum. Setting this string to from 1 to 8 characters will enable status messages to be sent to the local serial port. Two status messages are sent, when a Bluetooth connection is established, the string "<text>CONNECT" will be sent. Upon a Disconnect, the string <text>DISCONNECT will be sent. This parameter is useful, for example, when connected to a printer, the printer can examine an escape sequence, if the <text> is set to ESC%, the printer can parse the ESC%CONNECT and ESC%DISCONNECT messages without interfering with normal print jobs. In Trigger or Master modes, the first character of this string is used as the BREAK connection character.

Example : "SO,ESC%"

**SP,<text>** Security Pin Code, 16 character maximum

Example : "SP,secretcode"

**SR,<adr>** Remote Address. 12 hex digits, (6 bytes) no spaces or chars between.

Example : "SR,00A053112233"

**NOTE: 2 special characters can be used here:**  
"SR,Z" will erase any stored address.  
"SR,I" will write the last address seen by using the Inquiry command.  
This can be helpful when you just have 1 other device in range and want to quickly store and connect to it.

**SS,<text>** Service Name (1 to 16 characters ).

Example : "SS,SerialPort"

**ST,<num>** Config Timer, # of seconds ( range= 0 to 255 decimal,, default = 60 decimal) to allow remote configuration over Bluetooth after power up in Slave Mode. In all Master modes, the remote config timer is set to 0 (no remote configuration). In Trigger Master Mode,

this Timer is used as an Idle timer to Break the connection after the timer expires with no characters being received.

Example : "ST,0" disables remote configuration

Example : "ST,255" enables remote configuration forever

**SU,<rate>** Baudrate, {1200, 2400, 4800, 9600, 19.2, 38.4, 57.6, 115K, 230K, 460K, 921K }, only the first 2 characters are needed.

Example : "SU,96" sets the baudrate to 9600 buad.

**SW,<hex word>** Enable low power SNIFF mode. Default is 0000=disabled. SNIFF mode allows extreme low power operation. Device goes into a deep sleep, and wakes up every every 625us \* <hex word> to send/receive chars.

Example: "SW,0050" enables Sniff mode and sets the interval time to 50 hex \* .625 = 50 milliseconds.

This will cause the module to enter low power sleep, and wake once every 50 milliseconds to check for RF activity.

**See Section 4.1 for more details on Sniff.**

**SX,<1,0>** Bonding enabled, creates a single stored connection pair with a remote device.

**SZ,<num>** Raw Baudrate (decimal) allows entering of non-standard baudrates. Based on the formula num = Baudrate \* 0.004096.

**S~,<0,1>** Profile to use. 0=SPP (default), 1 = DUN DCE, 2 = DUN DTE, 3 = MDM.

**See Section 4.2 for more details on Profiles.**

**S\$,<char>** Configuration detect character. This allows a change from the default \$\$\$ to some other character. Factory defaults returns the device to \$\$\$.

### 3.2. GET COMMANDS

**D -** Display basic settings. Address, Name, Uart Settings, Security, Pin code, Bonding, Remote Address. This command is an easy way to check the configuration.

**E -** Display extended settings. Service Name, Service Class, Device Class, Config Timer.

**M -** Display remote side modem signal status.

**O -** Display other settings. Config character, IOport values, debug mode.

**G<X>** - Display stored settings . These commands correspond to the SET commands above.

Example : "GS" will return 1 or 0 depending on the value of security.

In addition to the above, there are a few other useful commands available.

**GB** - returns the Bluetooth Address of the device.  
**GK** - returns the current connection status: 1=connected, 0 = not connected.  
**G&** - return a hex byte containing the value of the PIO Pins  
**V** - return the software release version

### 3.3. CHANGE COMMANDS

**U,<rate>,<E,O,N>** Temporary Uart Change, will change the serial parameters immediately, but not store them. Command will return "AOK" at current settings, then automatically exit command mode, and switch to new baudrate

Example : "U,9600,E" Sets baudrate to 9600, parity even.

### 3.4. ACTION COMMANDS

**\$\$\$** Enter command mode Characters are PASSED until this exact sequence is seen. If any bytes are seen before these chars, or after these chars, in a 1 second window, command mode will not be entered and these bytes will be passed on to other side.

**NOTE:** this char is configurable, use the S\$,<char> command to change the char.

**---** Exit command mode. Exit command mode. "END" will be displayed. If connected over BT, data will now pass in both directions.

**C{,<address>}** Connect The device will attempt to connect to the remote stored BT address, or an optional address can be entered directly.

**F,1** Go to FAST data mode, ends configuration immediately.

**I,<time>,<cod>** Performs an inquiry scan. Default time is 10 seconds, maximum is 48. Cod is optional class of device, 0 or no entry looks for all device classes. A maximum of 9 devices will be returned. As devices are found, they are displayed in the format below:  
 <bt address>, <bt name>, <cod>

00A053000123, MySerialPort, 72010C

**IN<time>,<cod>** Performs an inquiry scan, does not return the Bluetooth NAME ( returns much faster, since name requires a remote lookup for each device found).

**IR<time>** performs an inquiry scan, with a COD of **0x001F00**, which is the default COD for Roving Networks Serial adapters and modules.

**IS<time>** Performs an inquiry scan, with a COD of **0x0055AA**, which is the special COD used by Roving Networks Serial adapters and modules to enable "instant cable replacement".

**H -** Help, will print out a list of commands and their basic syntax

**K,** Kill (disconnect) from the current connection.

**P,<char>** Pass thru, sends any chars along up to a CR or LF while in command mode.

**Q -** Causes device to be non-discoverable and non-connectable (temporarily). Does not survive a power cycle or reset.

**Used with the Z command below.**

**R,1** Forces a complete reboot of the device (similar to a power cycle)

**T,<0,1>** Pass receive data (from uart or BT) while in command mode. Returns (T=0 , T=1 based on input).

**&** Returns the value of the switches on BluePort, or value of PIO3,4,6,7 on other modules.

**Z** Enters low power deep sleep mode (<2ma) when NOT connected. an only be exited by toggling the RESET pin on the module (causing a HARD reset) , or power cycling the device. To get the lowest power mode, first issue a Q, then a Z. Use the SNIFF settings to get lowest power while connected.

### 3.5. Limitations of using 7 Bit data mode

Roving Networks firmware now supports (from version 4.22 and on ) selectable 7 bit data mode, using the "S7,1" command.

Unfortunately the Bluetooth hardware does not support 7 bit data, so this function is accomplished in the firmware application. While completely functional, the performance in 7 bit mode is less than ideal, because software emulation is required to make this work. Hence, there is a noticeable latency and character per second processing limit in this mode. Therefore it is not recommended that this mode be used if the desired serial baudrate is greater than 9600 baud.

### 3.6 Commands to Manipulate GPIO

CMD	VALUE	DESCRIPTION
@	<hexword>	Set direction bits for GPIO
&	<hexword>	Set values for GPIO
%	<hexword>	Store powerup direction bits for GPIO
^	<hexword>	Store powerup values for GPIO
*	<hexword>	Set values for PIO8,9,10,11

The GPIO command interface uses combination of 2bytes, a mask, and value, packed into a hex word for each command. The first byte, the mask, determines which GPIO are to be affected, and the second byte is the value to set.

15 ----- 8 7 ----- 0

<hexword> = MASK[7...0] VALUE[7..0]

There are 2 registers used to control the GPIO, the first is a direction register. This controls whether the GPIO is an input or an output. The second register is the value to apply to the GPIO if set to an output, or is the value of the built-in weak pull-up resistor if the GPIO is set to an input. These settings are immediate, and do not survive a power cycle.

Examples:            S@,8080    sets GPIO-7 to an output  
                       S&,8080    drives GPIO-7 high  
                       S&,8000    drives GPIO-7 low

#### Power-up values

These 2 registers will apply the direction and values upon each subsequent power-up:

Examples:            S%,0101    sets GPIO-0 to an output on power-up  
                       S^,0303    drives GPIO-0 high, and pulls up GPIO-1.

Multiple bits can be set, any bits with a mask of 0 are left unaffected for the command.

Some GPIO are checked at power-up time to perform certain functions, so care must be taken when manipulating them. GPIO3, 6, are used to automatically set master mode, and auto discovery. If it is desired to use these GPIO for other purposes at power-up, a special command must be used to disable their being sensed at power-up time. This command is "SQ,4<cr>" this will set a flag in a stored register that is read at power-up. The Power-up settings for the GPIO can also be viewed using the "O" (other settings) command.

#### WARNING:

GPIO-4 is used by the system to reset stored parameters to factory defaults. If GPIO4 is pulled high on power-up, and then toggled 3 times, all user settings will return to default values. Therefore this pin should not be used as an output, and should not be driven high at power-up time (first 1 second of operation).

**NOTE:**

GPIO2 and 5 are driven by the embedded software as outputs, they can be disabled using the direction command, (to save power, for example) and used as inputs. If set to outputs the software will override any user values.

**SETTING GPIO 8-9-10-11**

S\*,<hexword> = MASK[11..8] VALUE[11..8]

For the upper 4 GPIO, a single word controls the mask and values, and only the lower 4 bits of each byte are used. The first time this command is used, all 4 GPIO are driven as outputs and remain so until a power cycle. There is no powerup command for these bits, only the interactive one. Some modules do not offer these GPIO.

Examples:            S\*,0101        GPIO-8 driven HIGH.  
                      S\*,0100        GPIO-8 driven LOW.  
                      S\*,0202        GPIO-9 driven HIGH.

**4. Using Low Power Modes****4.1 Inquiry(Discovery) and Page(Connection) Windows**

There are 2 timers that can be used to lower the idle Slave mode power of the radio. When not connected, the Radio is active for a percentage of time listening to see if any other device wants to Discovery (inquire) or Connect (page). The amount of time the radio is on is called the window, and the rate at which the process cycles is called the interval. The interval is fixed at 0x800 (1.28seconds) with Sniff disabled, and 2.56 seconds with Sniff enabled. The window can be adjusted. The default window is 0x200 (320 ms) or 25% duty cycle.

By lowering the window value, power can be saved at the expense of possibly missing an inquiry or page. Since the host usually retries automatically many times, the only downside is a delay in discovery or connection time.

The minimum window for inquiry or page is 0x0012 (11.25ms). corresponding to about a 1% duty cycle.

Thus, average power can be reduced from >20ma to <5ma in standard mode, and <3ma in Sniff mode.

It is also possible (and desirable for security reasons) to completely disable inquiry. Once a host has found and installed a device, inquiry is not needed, only page is used to make a connection.

To disable inquiry and still allow connections, set the Inquiry timer to 0 with "SI,0000".

**4.2 SNIFF mode**

Sniff mode is another power conservation method utilized by Bluetooth. By default, Sniff mode is disabled, and the radio is active continuously when connected (about 25-30ma) . In Sniff mode, the radio wakes up at specific intervals, and sleeps in very low power mode (around 2ma) otherwise. The power savings can be quite dramatic.

To enable it, use the "SW,<hex word>" command.

Example interval timers: 0x0020 = 20ms. (32 decimal \* .625 = 20).  
0x0050 = 50ms, 0x00A0 = 100ms, 0x0190 = ¼  
second, 0x0320 = ½ second, 0x0640 = 1 second.

Sniff mode only pertains to an active connection. When a connection is made, both master and slave must support Sniff mode, and agree to the Sniff window, otherwise the radio will stay in full active on mode.

#### Note:

**The maximum allowed Sniff interval is about 20 seconds = 0x7FFF sniff word setting.**

#### Enabling DEEP SLEEP.

Deep Sleep mode can be used to obtain extremely low power operation. The device totally shuts down and only draws about 300uA of current in this mode. To enable Deep Sleep, set the high order bit of the Sniff word = 0x8000. This bit is NOT used to determine the sleep interval, it is only used as a flag to enable deep sleep. For example, If you want ½ second sleep 0x0320, with Deep sleep, you would set the sniff word to 0x8320.

In normal low power sleep (not deep sleep) the firmware is still running in idle mode, and wakes up about 20 times per second to check ports, update Leds etc. During Deep sleep, the firmware actually stops running some tasks. For example, the LEDs only update about once per second.

There are 3 ways to wake the radio from sleep mode. The first is to send a character to the UART. Transitions on the RX pin will wake the device from sleep. Wake time is worst case 5ms. Because of this, the first character sent is generally lost by the radio. A better way to wake the radio is to toggle the CTS line from LOW to HIGH, Wait 5ms, and then send data. The third way is automatic, the radio will wake every <hex word> slot times (1 slot time = 625us) as defined above. The radio wakes and listens to see if the other side of the connection has anything to send. This wake time is typically about 5ms (8 slots) even if no data is to be transferred.

Once the radio is awake it will stay active for exactly 1 second of inactivity, and then sleep again.

NOTE: setting this mode can cause latency issues, and dropped bytes/loss of performance in cases where large amounts of data are being transferred. The nuances of Bluetooth Sniff can be complex, contact Roving Networks if necessary for more details on how to utilize Sniff mode.

### 4.3. Disabling Output drivers

Use the command "S%,1000" to set all PIO0-11 to inputs. This will also turn off the LED (PIO5) on the FireFly adapter.

### 4.4. Profile Selection

The default profile is Serial Port Profile (SPP). The firmware also supports the DUN profile in both master and slave modes. To change the profile, use the "S~,<num>" command.

#### Profile:

0	Default SPP. (no modem control)
1	DUN DCE (slave or gateway).
2	DUN DTE (master or client).
3	MDM SPP with modem control signals.

The most common use of DUN profile is to enable a BT client to connect to a dialup modem. For this mode, use profile 1 (DUN DCE) via command "S~,1". You may also want to set the Class Of Device so that clients can recognize the device as a Bluetooth modem. The correct COD for a Bluetooth modem is 0x040210. This can be set using the commands below:

"SC,0004"  
"SD,0210"

A number of modem control signals are supported when in DUN or MDM modes and their use is described below.

### 4.5. PIOs used as modem control signals

The Firefly and RN-XX modules have the ability to replicate the required modem control hardware signals automatically once a connection is made. These signals are transferred outside the data channel (using RFCOMM control channels) and are automatically updated. The default SPP profile (profile=0) does NOT drive these signals or report back inputs. If DUN or MDM profiles are enabled (profile =1,2, or 3), the following signals are automatically driven and received.

Inputs: (read and sent back over Bluetooth to the remote host).

PIO3 = DCD (switch 2)  
PIO6 = DSR (switch 3)  
PIO7 = CTS (switch 4)

Outputs: (sent from the remote Bluetooth host, and driven out)

PIO10 = DTR  
PIO11 = RTS

Inputs and outputs are ACTIVE LOW.

On the Firefly, the DIP switches can also be used to set/clear the DCD, CTS, and DSR signals. DTR and RTS are available on the 9 pin header as well.

## 5. Command Quick Reference

### SET COMMANDS

		<b>FACTORY SETTING</b>
S7,<1,0>	7 bit data mode enable/disable	0= disabled
SA,<1,0>	Authentication enable/disable	0= disabled
SB,<timer>	Send BREAK	Not Applicable
SC,<hex word>	Service Class	0x0000= unknown
SD,<hex word>	Device Class	0x1F00= undefined
SE,<1,0>	Encryption enable/disable	0=disabled
SF,1	Factory Defaults	
SI,<hex word>	Inquiry Scan window	0x0200
SJ,<hex word>	Page Scan window	0x0200
SL,<E,O,N>	Parity	N=None
SM,<0,1,2,3>	Mode (0=Slave, 1=mstr,2=trig, 3=auto)	0=Slave
SN,<text>	Name	FireFly-xxxx
SO,<text>	Connect/Disconnect Status String	NULL= no status string
SP,<text>	Pin Code	1234
SR,<adr>	Remote Address (SR,Z to remove)	NONE SET
SS,<text>	Service Name	SPP
ST,<num>	Config Timer	60 seconds
SU,<rate>	Baudrate	115K
SW,<hex>	SNIFF rate	0x0000=disabled
SX,<1,0>	Bonding	0=disabled
S~,<1,0>	Profile setting 0=SPP, 1=DCE, 2=DTE, 3=MDM	0 = SPP
SZ,<num>	Raw Baudrate	

### GET, DISPLAY COMMANDS

D	Basic Settings
E	Extended Settings
O	Other Settings
G<X>	Stored setting
H	Help
GB	BT Address
GK	Connection Status
G&	I/O Ports
V	Firmware version

### ACTION COMMANDS

C,<address>	Connect, optional address, if no address, use stored remote address.
F,1	Enter Fast data mode, end configuration immediate.
I,<time>,<cod>	Device Scan Inquiry, time in seconds, optional cod = class of

	device filter, 0=all
IN<time>,<cod>	Device Scan Inquiry, returns NAMES.
IR<time>	Device Scan Inquiry, fixed cod=0x001F00 to find Roving devices.
IS<time>	Device Scan Inquiry, fixed cod =0x0055AA to find instant cable pairs.
K,	Kill (disconnect) from current connection
Q	Turn off Discovery and Connectability
R,1	Reboot
T,<0,1>	Pass receive data (from uart or BT) while in command mode.
U,<rate>,<E,O,N>	Temp Uart Change
&	return the value of the DIP Switches
Z	Enter low power Sleep mode

## 6. Factory Default Power up Settings

Bluetooth Service Profile = [Serial Port Profile \(SPP\)](#)  
 Device Mode = [0 \(Slave\)](#)  
 Baud Rate = [115200bps,Parity=None, Data bits = 8 bits\(fixed\), Stop bits 1 \(fixed\).](#)  
 Power Mode = [Auto low power discoverable mode](#)  
 Name of Device (local name) = [FireFlyt-XXXX last 2 bytes of BT address](#)  
 Service Name = [SPP](#)  
 Service Class=[0000 \(undefined service type\)](#)  
 Major & Minor Class Of Device (COD) = [0x1F00 \(unknown device type\)](#)  
 Authentication [Disabled](#)  
 Encryption [Disabled](#)  
 Discovery [Enabled \(0x0200 = windowl, fixed interval of 0x800= 1.28 Seconds \)](#)  
 Connection [Enabled \(0x0200=window, fixed interval of 0x800 = 1.28Seconds\)](#)  
 Bonding [Disabled](#)  
 Config Timer=[60 seconds](#)  
 SNIFF mode [disabled](#)  
 Default PIN = ["1234"](#)

### Note:

PIO(4) Switch 1, Set ON at power up time, and then toggled 3 times will change all settings above back to their factory values. (except the Device name). Device will reboot immediately upon detection of this mode.

## 7. Common Problems and Questions:

**My Bluetooth client can see the FireFly and its serial service, but I can't connect:** This is most likely caused by a security setting on your client. **FireFly** does support authentication by default if the client requires it (**using default pincode of "1234",**) but for ease of use, you may want to turn security off on your client. Some clients have these setting off by default, others have them on. To check and disable security:

From your PC desktop, click My Bluetooth Places, go to the Bluetooth Device configuration (or Advanced Configuration) drop down menu, click on the client applications tab, Select the Bluetooth serial port application name, and click on the properties button, if "secure connection", or "authentication", or "encryption" is checked, un check it.

**Changing the clients COM port:** Widcomm stack, the most common stack out there allows you to connect to **FireFly** using a "Virtual COM" port mapper. The software installs with a default COM port, usually COM3, COM4, or COM5. To change this setting:

From your PC desktop, click My Bluetooth Places, go to the Bluetooth Device configuration (or Advanced Configuration) drop down menu, click on the client applications tab, Select the Bluetooth serial port application name, and click on the properties button, then you can change the com port.

**Connecting to more than one FireFly from the same client at the same time:** Bluetooth allows 7 devices at a time in a piconet. The Widcomm stack allows you to create multiple instances of serial port profile and connect to multiple **FireFlies** at the same time. To do this:

From your PC desktop, click My Bluetooth Places, go to the Bluetooth Device configuration (or Advanced Configuration) drop down menu, click on the client applications tab, Select the Bluetooth serial port application name, and click on the ADD COM port button, then you can add another Bluetooth serial port and assign it to another virtual com port (such as COM9).

## 8. Example of a Master Discovery/Connection Sequence

From power up and no connection:

- a) Perform an Inquiry to obtain **BT\_Address** (unless it is already known).

**Sent** : \$\$\$ // Places Radio in Command Mode  
**Reply**:CMD<cr>

**Sent** : I,30<cr> // Looks forBluetooth devices  
**Reply**:00A096112233,1F00<cr>Inquiry Done<cr>

- b) Store the remote address just found.

**Sent** : SR,00A096112233 <cr> **(or just SR,I if this was the only device found )**.  
**Reply**:AOK<cr>

- c) Connect.

**Sent** : C <cr> // Places Radio in Connect  
**Reply**:AOK<cr>

Device will attempt connection to remote slave. "TRYING" will be displayed.

**Reply**:<text>CONNECT<cr> // this will be displayed once connection is made, if <text> string is defined in the stored parameters.


- d) Send /Receive data.

9. FireFly Configuration:


FireFly Serial Jumpers

NAME	DB-9 male	IO DIR	DCE(PC)*	DTE	3-WIRE-DCE
1-DCD	NC				
2-RX	2-RX	IN←		--	
3-TX	3-TX	OUT→		--	
4-DTR	NC				
5-GND	5-GND	<-->			
6-DSR	NC				
7-RTS	7 -RTS	OUT→		--	
8 - CTS	8 -CTS	IN←		--	X
9 - RING	V+	IN←			


DCE 3 Wire \* FACTORY DEFAULT ( CTS shorted to RTS) , remove 3<sup>rd</sup> , 4<sup>th</sup> jumpers and install 1 jumper between pins 9 and 10)

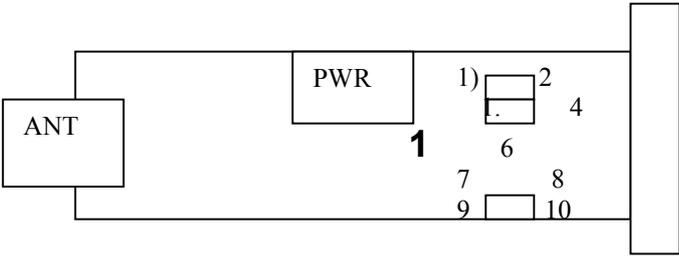


DCE (Like a PC) , RX=2, TX=3, RTS=7, CTS=8

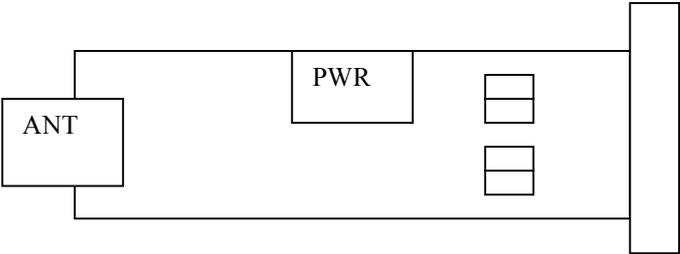

DTE , RX=3, TX=2, RTS=8, CTS=7

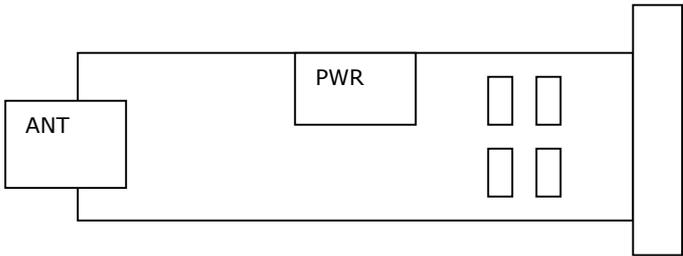

**FireFly Configuration Switches**

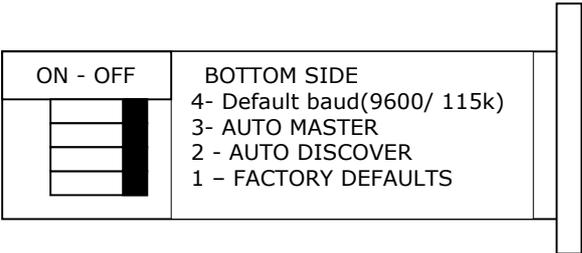


**1- FACTORY DEFAULTS-** Set this switch ON, power up unit, and toggle the switch from ON to OFF 3 times to return the unit to factory settings.


**2-AUTO DISCOVER MODE** – In Slave mode, sets a special class of device which is used by a remote Master to auto connect. IF Switch 3 also SET, the device performs a search, stores, and connects to a remote slave which has this switch 2 set .

**3- AUTO MASTER MODE-** BluePort acts as master, auto-connect to a stored remote address. First set the BT address of the device to connect to using the SR command. or, have BluePort auto discover and connect by via Switch 3 AND Switch 2.

**4- DEFAULT BAUD RATE** - OFF = 115K (factory setting), ON = 9600. Overridden by software configuration.

Instant Cable Replacement Example

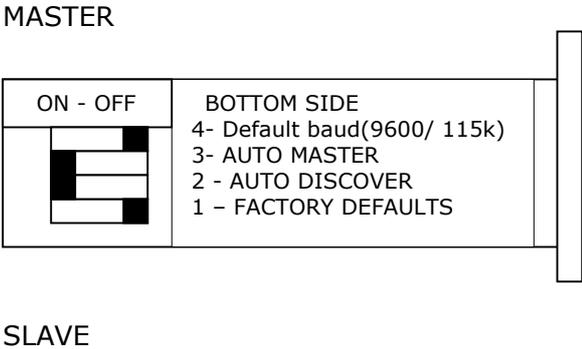

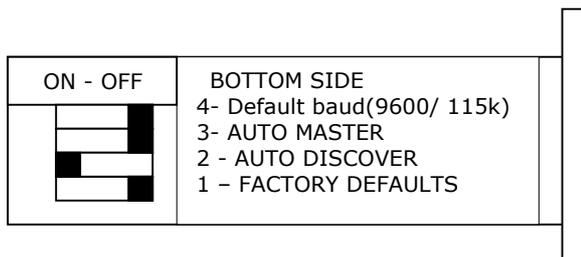

- 1) Set switches as shown above.
- 2) Power up both devices
- 3) Master finds and store slave address, and auto connects.
- 4) Set Switch 2 on both Master and Slave back to OFF (so that they don't try to re-pair each time power is cycled).

## Appendix A FireFly Evaluation Board Physical Ports

Signal Name	CONNECTOR	PIN #	IO DIR	
Board PWR	P1	1	Power IN (5.0 -8.0 Vdc)	
Board GND	P1	2	<-->	
<b>RS-232 SERIAL-CN1</b>				Modem control options
Pin 1 - DCD	DB9		Not used	Connect to PIO2
Pin 2 - TX	DB9	2	OUT	
Pin 3 - RX	DB9	3	IN	
Pin 4 - DTR	DB9	4	Not used	Connect to PIO10
Pin 5 - GND	DB9	5	<-->	
Pin 6 - DSR	DB9	6	Not used	
Pin 7 - RTS	DB9	7	OUT <input type="checkbox"/> * (active low)	
Pin 8 - CTS	DB9	8	IN <input type="checkbox"/> * (active low)	
Pin 9 - RING	DB9	9	Pwr <input type="checkbox"/> IN (4.5 -11Vdc)	
<b>SERIAL 3.3V (J1)</b>				
PWR	J3-1	<b>1</b>	Optional 5VDC in	
GND	J3-2	2	GROUND	
CTS	J3-3	3	IN	
RTS	J3-4	4	OUT <input type="checkbox"/> 0 - 3.3Vdc	
TX	J3-5	5	OUT <input type="checkbox"/> 0 - 3.3Vdc	
RX	J3-6	6	IN	
PIO#2	J3-7	7	BT Connection (high state)	
PIO#10	J3-8	8	GPIO	DTR output
PIO#11	J3-9	9	GPIO	RTS output
<b>PIO-SWITCH-LEDS</b>				
PIO#4	SWITCH-1	1	Reset Default Settings	
PIO#3	SWITCH-2	2	Auto Discover and Pairing	DCD input
PIO#6	SWITCH-3	3	Auto Connect as Master	DSR input
PIO#7	SWITCH-4	4	Def Baud Rt (115K - 9600)	CTS input
PIO#5	LED-DL1	GREEN	Pulses for status 0-3.3Vdc	
	LED-DL2	YELLOW	RX, TX data low to high	
PIO#8	LED-DL3	RED	Software controlled	RX char low speed mode
<b>6-Pin SPI (J2)</b>				
MISO	J2-1		Reserved programming)	
MOSI	J2-2		Reserved programming)	
SPICK	J2-3		Reserved programming)	
SPICS	J2-4		Reserved programming)	
PWR	J2-5		Optional 3.3VDC Power	
GND	J2-6		Optional Ground	

### Important Notes:

**Placing 3.3Vdc into the PIO's while they are set as outputs will permanently damage the radio modules. The failure mode is short across GND and VCC. Use a 10KΩ resistor in series or a 10KΩ pull up resistor for input and output PIO's respectively.**

- Make sure to connect a common ground when using the external TX, RX inputs on the 0 – 3.3Vdc.

- For a 3 wire DB-9 interface (tx, rx, gnd only) connect/short CTS to RTS, Factory default is hardware flow control enabled CTS and RTS connected.
- When using a 5.0Vdc Input, PIO's require a 10K ohm series resistor. PIO's are 0-3.3Vdc not 5 volt tolerant.
- A null modem adapter is required to make a direct connection to a PC serial port.

### Power Terminals for Evaluation Board

Inputs on P1 power connector can be 4.5VDC to 11.0VDC. There is internal regulation down to 3.3VDC for all circuitry. Worst case power draw for the board is 80ma when the *Bluetooth* radio/modem connection is established and transmitting. Power can be as low as 1ma to 25ma average when the *Bluetooth* radio/modem is not connected depending on parameter settings.

### Hardware Communications Connections for Modules and Eval Board

Radio **TX** → **RX** of the application Micro Controller Unit (MCU)

Radio **RX** ← **TX** of the application Micro Controller Unit (MCU)

Radio **RTS** → **CTS** of the application Micro Controller Unit (MCU)

Radio **CTS** ← **RTS** of the application Micro Controller Unit (MCU)

### LEDs

MODE	GREEN LED blink rate
Configuring	10 times per second
Startup/Config Timer	2 times per second
Discoverable/Inquiring/Idle	Once per second
Connected	Solid ON

The **YELLOW** LED should blink whenever data is transferred on either the RX or TX pins of the DB9 serial port. It is a physical monitor of the actual voltage on the pins, and is not driven by software from the module.