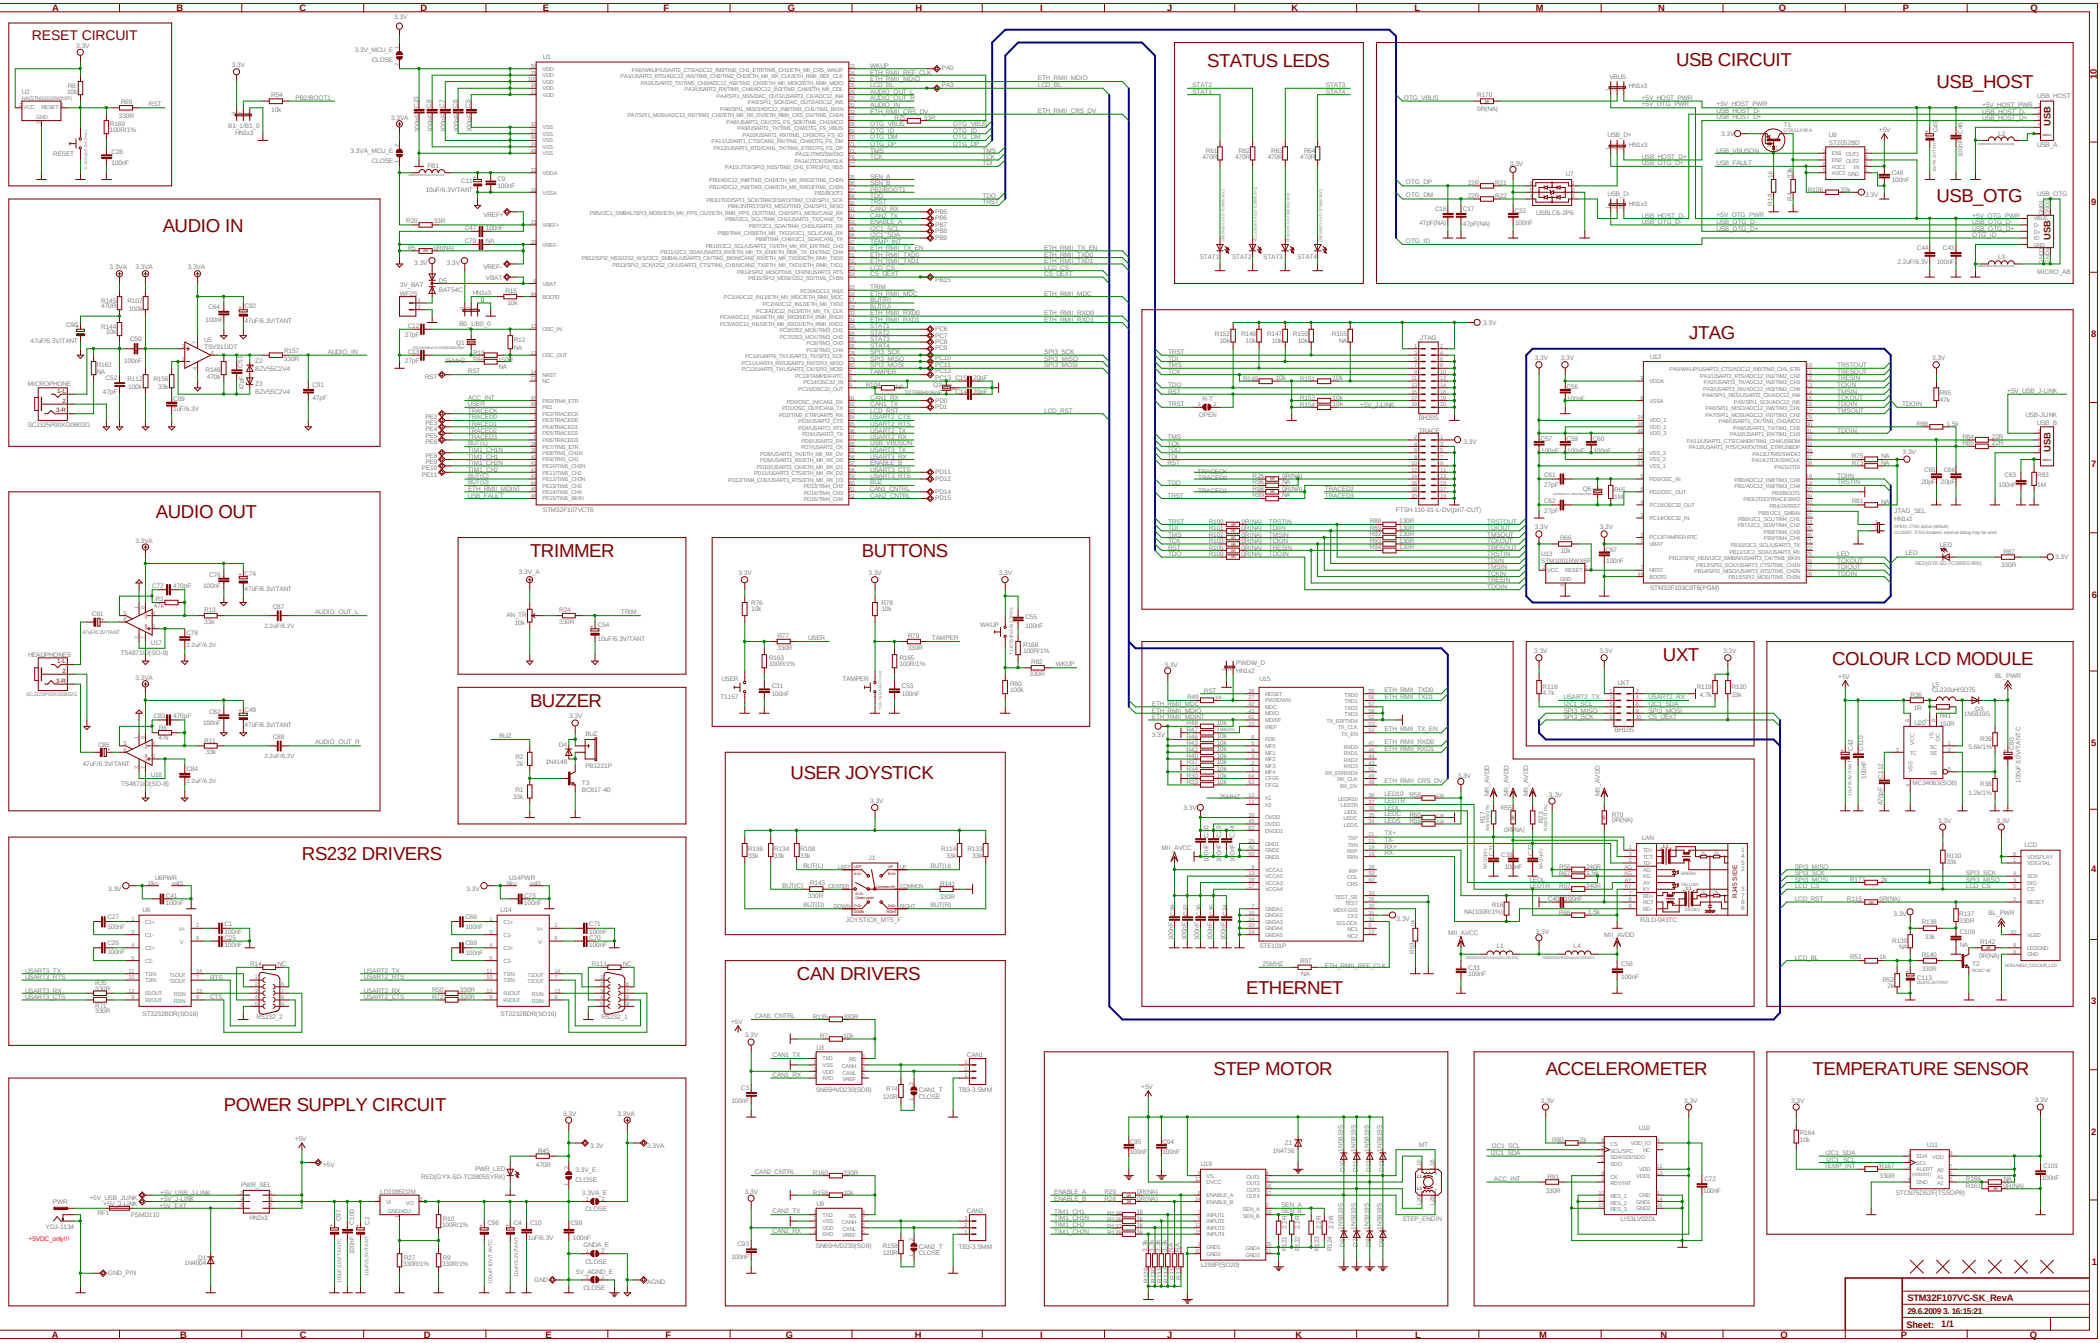
RESET CIRCUIT
AUDIO IN
AUDIO OUT
TRIMMER
BUZZER
BUTTONS
USER JOYSTICK
RS232 DRIVERS
CAN DRIVERS
POWER SUPPLY CIRCUIT
STATUS LEDS
USB CIRCUIT
USB_HOST
USB_OTG
JTAG
UXT
ETHERNET
COLOUR LCD MODULE
STEP MOTOR
ACCELEROMETER
TEMPERATURE SENSOR
STM32F107VC-SK_RevA
29.6.2009 3. 16:15:21
Sheet: 1/1