





Standard footprint like suggested
from Silicon Labs.

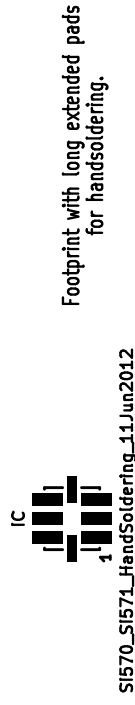

Footprint with long extended pads
for hand soldering.

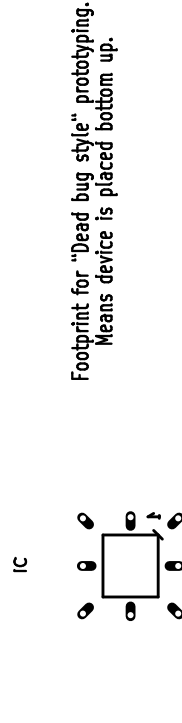

Footprint for "Dead bug style" prototyping.
Means device is placed bottom up.

Please send errors, comments, suggestions
and improvements to:
bernd.wiebus@gmx.de

1:1 Print! Check dimension by controlling the gauge!

KiCAD Footprints of Si570 and Si571 oscillators from the file Si570_Si571_11Jun2012.mod

Author: Bernd Wiebus / Uedem / Germany / 11 Jun 2012



GNU-GPL NO WARRANTY!

File: Si570_Si571_11Jun2012.brd	
Sheet: 1/1	
Title:	
Size: A4	Date: 11 Jun 2012
KiCad E.D.A.	pcbnw (2012-01-19 BZR 3256)-stable
Rev:	
Id: 1/1	