This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD monitors.

 \triangle WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.

11-1 Disassembly (Simple - Stand)

△ Cautions: 1. Disconnect the monitor from the power source before disassembly.






1. Place monitor face down on cushioned table. Remove 3 screws from the stand.




2. Remove stand and front cover.

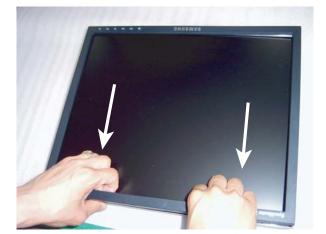




3. Lift up the back cover and Use the jig to remove the shield lamp.

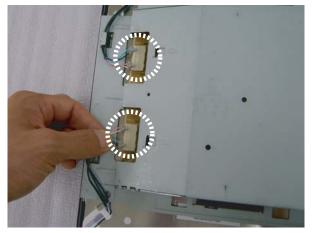



4. Disconnect cables.

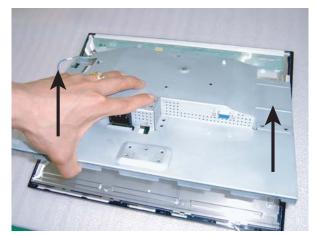

5. Lift up the shield and disconnect LVDS cable.






6. Lift up the LCD panel.




11-2 Disassembly (HAS-Stand)

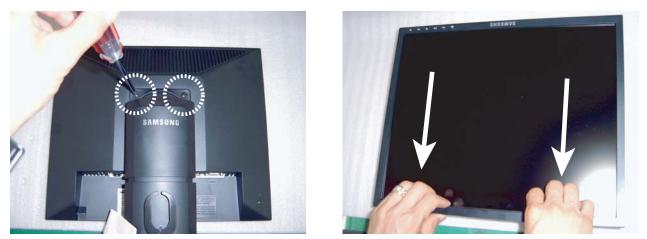


1. Place monitor face down on cushioned table. Remove 2 screws from the stand and remove front cover.




2. Lift up the back cover and Use the jig to remove the shield lamp.

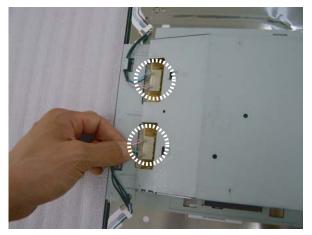


3. Disconnect cables.

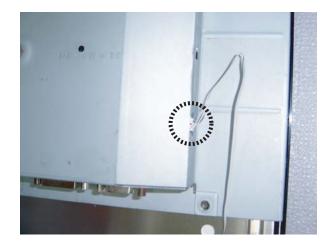

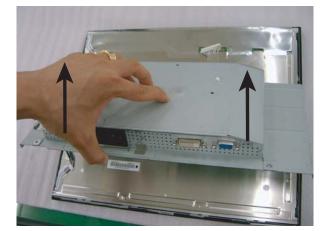

4. Lift up the shield and disconnect LVDS cable.



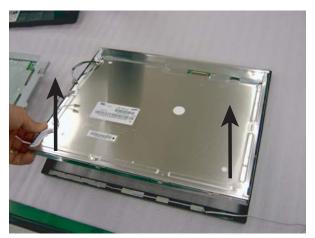

5. Lift up the LCD panel.



11-3 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.

Memo